



記号紙

DC 24V	AY0	AY1	AY2	AY3	AY4	AY5	AY6	AY7	AY8	AY9	AYA	AYB	AYC	AYD	AYE	AYF
	BY0	BY1	BY2	BY3	BY4	BY5	BY6	BY7	BY8	BY9	BYA	BYB	BYC	BYD	BYE	BYF
DC 0V	CY0	CY1	CY2	CY3	CY4	CY5	CY6	CY7	CY8	CY9	CYA	CYB	CYC	CYD	CYE	CYF