



AX10/AX10-UL→RX10、  
 AX40/AX40-UL/AX70/AX70-UL/  
 AX80/AX80-UL/AX80E/AI61/AI61-S1→RX40C7の場合

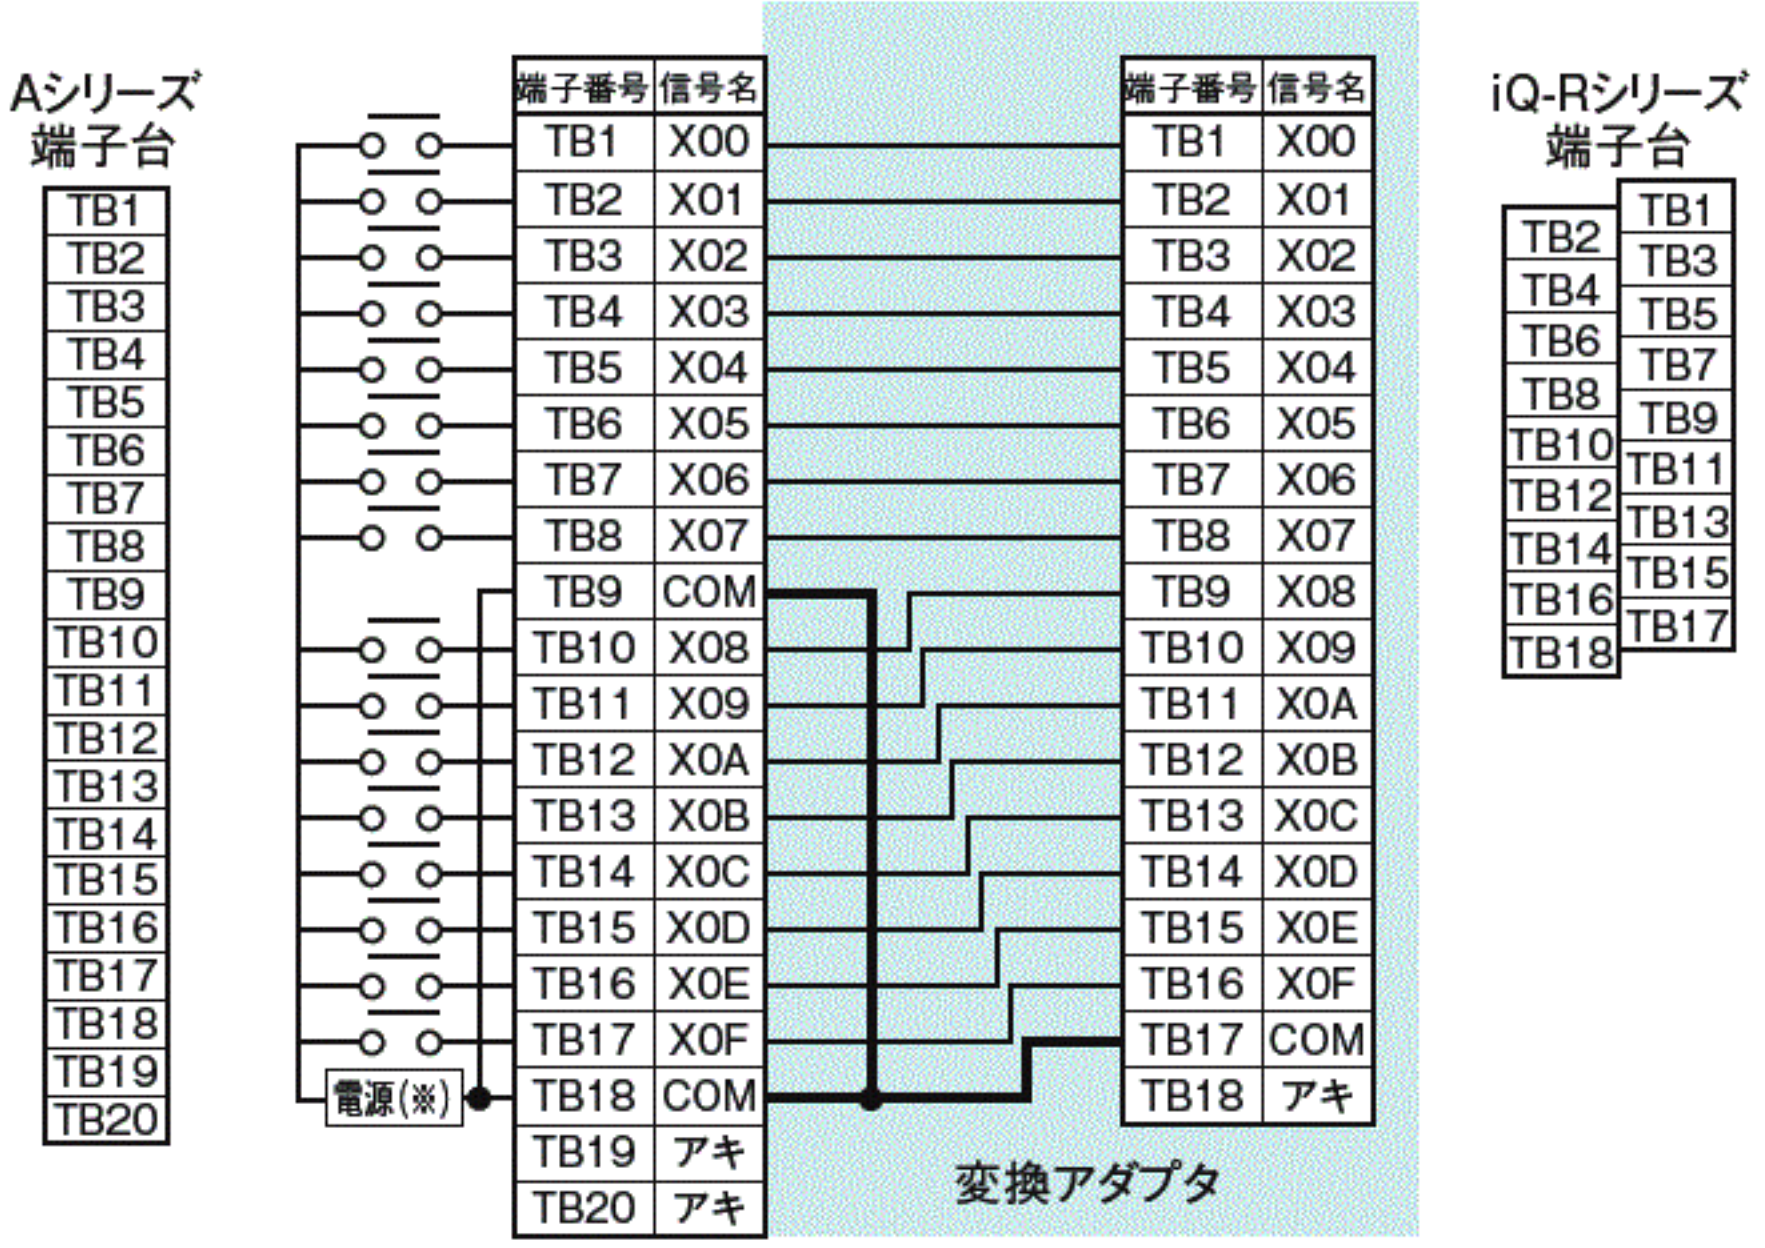

※電源

RX10	RX40C7
 AC100V/120V	 DC24V

AY22→RY20S6、  
 AY10/AY11/AY11-UL/AY11E/AY11EEU  
 →RY10R2の場合

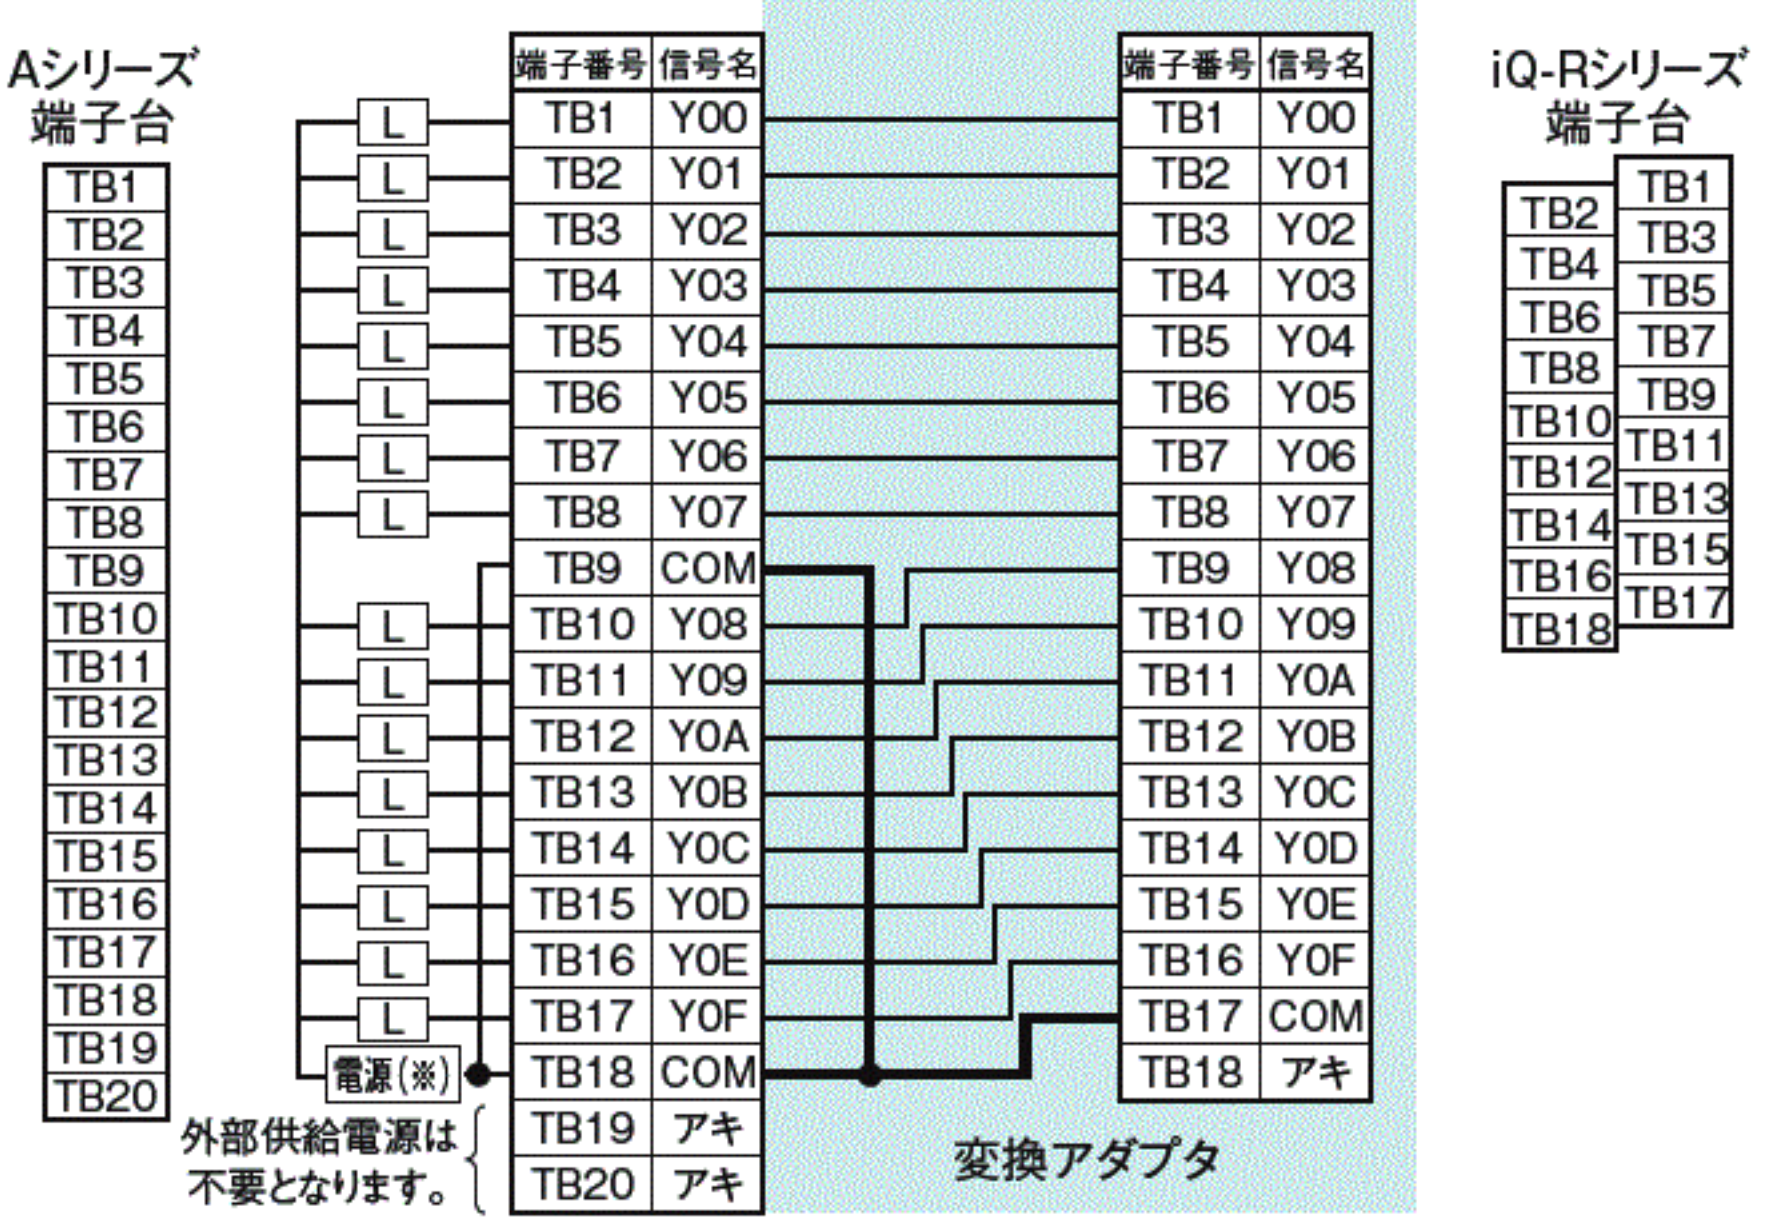

※電源

RY20S6	RY10R2
 AC100V/240V	 DC24V又はAC240V