MITSUBISHI ELECTRIC ENGINEERING

15型タッチパネルモニター ^{形名} TSD-FT1519-MN

取扱説明書



■この取扱説明書をよくお読みになり、正しくお使いください。特に「安全のため に必ず守ること」は、タッチパネルモニターをご使用の前に必ず読んで正しくお 使いください。

インターネットホームページ: http://www.mee.co.jp/sales/visual/touch-monitor/

製品情報などを提供しています。



ŧ	くじ	ページ	
1.	ご使用の前に・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	2	(± ₩.7°
2.	安全のために必ず守ること・・・・・・・	3	文全のために…
З.	各部の名称・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	5 5	各部の名称
4.	接続・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	····· 6 ···· 6 ···· 6	画接
5.	画面調節・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	······7 ·····7 ····8	調節続
6.	機能・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	······12 ·····12 ·····12 ·····13	機能
7.	お客様筐体への取付け・・・・・・・ * 取付上のご注意・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	······14 ·····14 ·····15 ·····16 ·····16	お客様筐体への
8.	困ったとき・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	······17 ·····17 ·····19	の 取付 け
9.	付録・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	·····20 ·····20 ·····21	付録

1 ご使用の前に



この装置は、クラスB機器です。この装置は、住宅環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に 近接して使用されると、受信障害を引き起こすことがあります。取扱説明書に従って正しい取り扱いをしてください。 本機は付属の信号ケーブル、当社推奨の電源セットおよび当社推奨のケーブルを使用した状態でVCCI基準に適合しています。

- 本書の内容の一部または全部を無断で転載することは固くお断りします。
- 本書の内容について、将来予告なしに変更することがあります。
- 本書の内容については、万全を期して作成しましたが、万一誤り、記載もれなどお気付きの点がありましたらご連絡ください。

Windows Vista[®]、Windows[®]は米国Microsoft Corporationの米国およびその他の国における登録商標です。 その他、この取扱説明書に記載された社名および製品名は各社の商標または登録商標です。

この取扱説明書に使用している表示と意味は次のようになっています。

誤った取扱いをしたときに生じる危険とその程度を、次の表示で区分して説明しています。



\bigcirc	絶対におこなわないでください。			
	絶対に分解・修理はしないでください。			
	必ず電源プラグをコンセントから抜い てください。			
お願い : 取扱い 上特に 守って いた だきたい 内容				

(おしらせ):取扱い上参考にしていただきたい内容

	0	必ず指示に従いおこなってください。			
	₽	必ずアースリード線を接地(アース) してください。			
	Â	高圧注意(本体後面に表示)			

送考にしていただきたいページ
 【ミニ解説】:専門用語の簡単な説明

安全のために…

2 安全のために必ず守ること

●ご使用の前に、この欄を必ずお読みになり、正しく安全にお使いください。









タッチパネルモニターの上手な使い方



おしらせ

残像について

残像とは、長時間同じ画面を表示していると、表示画面を変えたときに前の画面表示が残る現象です。

残像は、画面表示を変えることで徐々に解消されますが、あまり長時間同じ画面を表示すると残像が消えなくなりますので、同じ画面を長時間表示す るような使い方は避けてください。

「スクリーンセーバー」などを使用して画面表示を変えることをおすすめします。

本機液晶パネルにおきましては、黒い画面が多いスクリーンセーバーで残像が発生する可能性が高いのでご注意ください。

安全のた

にで

3 各部の名称

※本体背面



お願い

映像信号入力コネクタ(DVI-24ピン)とタッチ通信コネクタ(USDタイプB)の間のコネクタは使用することができませんので、接続しないでください。

おしらせ

DVI-Dケーブルは付属されておりませんので、ご必要の際は当社推奨のケーブルをご購入ください。 DVI-Dケーブル:サンワサプライ社 KC-DVI-2K 2m

※ 付属品の確認

お買い上げいただいたときに同梱されている付属品は次のとおりです。 万一不足しているものや損傷しているものがありましたら、販売店までご連絡ください。



4 接続

※ 電源の接続

タッチパネルモニター背面にある端子台に入力電源用のケーブルを接続してください。

お願い

- コンピュータに接続する前に、本機、コンピュータおよび周辺接続機器の電源を切ってください。
- 本機には専用の電源ケーブルは付属されておりません。

● 電源ケーブルには0.75mm²以上の電線をご使用ください。 電源コネクタの上に絶縁板をネジで固定していますので接続の際は取り外してください。 また安全のため接続後は元のように絶縁板をネジで固定してください。



⚠警告

● 表示された電源電圧以外で使用しないでください。火災・感電の原因になります

※ ケーブルの接続

ケーブルは、接続後必ずそれぞれの固定ネジで確実に固定してください。

お願い

画 西 調 節 続

ケーブルを接続する前に、本機、コンピュータおよび周辺機器の電源を切ってください。

おしらせ

USBの接続は、USBハブなどを介さず、直接コンピュータに接続することをおすすめします。



5 画面調節



※ 画面の調節 (アナログ接続の場合)

画面の調節方法として「自動画面調節」と「マニュアル画面調節」の2種類があります。本機をコンピュータと接続したときは、最初に「自動画面調節」をおこなってください。その後、調節をおこなう必要がある場合は、「マニュアル画面 調節」をおこなってください。

おしらせ

本機は水平周波数:30.0~61.0kHz、垂直周波数:55.0~75.4Hz 対応となっていますが、この範囲内であっても入力信号によっては表示できない場合があります。その場合は、コンピュータのリフレッシュレートまたは解像度を変更してください。

1. 自動調節

- (1) 本機、およびコンピュータの電源を入れてください。
- (2) OSD メニュー内の「Auto Setup」を選択することにより、自動画面調節を開始します。入力された信号を検出し、「Clock」、「Phase」、「H.Position」、「V.Position」の自動調節と、入力信号に適した色合いへ自動調節を開始します。自動調節完了後は、調節に問題ないかを確認する以下の OSD が表示されます。問題ない場合は「Yes]を選択してください。 問題がある場合は「No」を選択し、手動で調節をしてください。



おしらせ

- DOS プロンプトのように文字表示のみの場合や画面いっぱいに画像が表示されていない場合、単色の画像の場合は自動画面調節がうまく機能しない場合があります。
- ●コンピュータやビデオカードによっては、自動画面調節がうまく機能しない場合があります。この場合、マニュア ル画面調節でお好みの画面に調節してください。

【ミニ解説】OSD:<u>O</u>n <u>S</u>creen <u>D</u>isplay の略です。

2. マニュアル調節

- (1) 本機およびコンピュータの電源を入れてください。
- (2) 次項の「タッチ OSD 機能」を参照のうえ、調節項目を選択しお好みの画面に調節します。

※ タッチ OSD 機能

タッチパネルをタッチすることでOSD画面を操作し調節できます。

1. タッチ OSD 機能動作モードへの移行方法

① 画面右上端を約3秒長押しします。



②次に画面右下端をタッチします。





③ 左上に青の■が表示されます。



④ 画面左下端をタッチすると、OSD画面が表示され、タッチOSDモードに入ります。





(おしらせ)

- ①~④の手順通りにタッチされていない場合、タッチOSDモードへ移行できません。(OSD画面は表示されません)
- ④にて画面左下以外の場所をタッチされると、画面左上の"■"表示は消えます。
- Cの状態で、④を実施してもOSD画面は表示されません。
 OSD画面が表示されない、 "■" が表示されない、 "■" が途中で消える場合は、タッチOSD機能は動作していません。
 上記以外の場所を一度タッチして、タッチ位置にマウスカーソルが追従していることを確認し、再度①~④の手順を 行なってください。
- OSD画面は、「タッチOSD機能設定」(『3P10)「OSDの表示」機能により表示することも可能です。

2. タッチ OSD 機能動作モード解除方法

- ① OSDのグループメニュー内「Exit」(OSD調節を終了)を選択ください。
- ② OSD画面が消え、通常のタッチ動作に戻ります。

3. タッチ OSD 機能操作方法

タッチOSD機能動作モード中(OSDが表示されている時)はタッチパネルモニターの表示画面を4つの領域に 分けてキーを配置しています。 下図に示すキー領域をタッチすることで「Menu」「Select」「+」「-」ボタンと同じ動作ができます。



画面位置	キー名	動作
左下	Menu	OSD画面が表示されている状態で、「Exit」選択に移動します。
		また、OSD機能の操作最中には1つ上の画面に戻ります。
右下	Select	選んだ調節項目を決定します。
右上	+	調節項目/グループへ移動します。
		選んだ調節項目の値を調節(増)します。
左上	_	調節項目/グループへ移動します。
		選んだ調節項目の値を調節(減)します。

(注)タッチOSD機能動作モード中は通常のタッチ動作は停止します。

4. タッチ OSD 機能設定

本機のタッチドライバのユーティリティ内でタッチシーケンスの変更および、タッチOSD機能の有効/無効の設定ができます。

【ミニ解説】タッチシーケンス:あらかじめ定められたタッチ操作の順序のことです。

(1) タッチシーケンス

タッチOSD機能動作モードへ移行するためのタッチ位置を任意に変更できます。 デフォルトは、B(右上)、C(右下)、D(左下)です。

- ① タッチドライバのUPDDインストールの「タッチOSD」をクリックすると下図ウインドウが表示されます。
- ② 右側モニタイメージ図内のA、B、C、Dの文字部分をタッチし、シーケンスを変更してください。 (下図参照)
- ③ その後、「設定保存」ボタンを押すことによって、タッチシーケンスをタッチパネルモニターへ保存します。



(2) タッチOSD機能の有効/無効

タッチOSD機能の有効/無効を設定できます。 デフォルトは有効(チェックマーク有)です。

おしらせ

(3)項の機能によりOSD画面を表示することも可能です。

E ,	ጵታቻ05D		[
	タッチシーケンスの順にモニターの四隅をタッチしてOSDを表示します。 タッチシーケンスの1番目は3-5秒間風 ・ タッチシーケンスの変更は右のモニターイメージの四隅をクリックしてくださ い。 タッチシーケンス BCD		
	 ☑ タッチOSD 有効 ☑ OSDの表示 	一 設定保存	
		🗸 閉じる	_

(3) OSDの表示

「OSDの表示」をクリックするとOSD画面が表示されます。

5. タッチ OSD 画面調節項目

グループメニュー 調整項目		調整項目	機能(調節内容)		
Exit			OSD 調節を終了します。		
Auto Setup (アナログ接続の 場合のみ)			左右方向の表示位置、上下方向の表示位置、左右の画面サイズ、位相を自動 調節します。 また、映像信号の入力振幅に合わせて、ADC(AD コンバータ)ゲインを 最適に自動調節します。 ※ 640x400(350)/720x400(350) 等のオーバーラップタイミング時 には 640/720 の選択キーが表示されます。(初期値 720)		
Brightness			画面の明るさを調節します。 (0~100 初期値100)		
Contrast			コントラストを調節します。 (0 ~ 100 初期値 90)		
	Exit		このグループの調節を終了します。		
Display	H. Positi	on	左右方向の表示位置を調節します。 (初期値 50)		
(アナログ接続の	V. Positi	on	上下方向の表示位置を調節します。 (初期値 50)		
	Sharpness		表示のシャープさを調節します。 (0 ~ 4 初期値 2)(※解像度 1024 x 768 の映像入力時は無効)		
	Exit		このグループの調節を終了します。		
	Cool		色温度を Cool に設定します。 (9300K Gain=R:90/G:83/B:100 固定)		
Color Mode	Neutral		色温度を Neutral に設定します。 (6500K Gain=R:100/G:88/B:79 固定)		
	Warm		色温度を Warm に設定します。 (5400K Gain=R:100/G:83/B:68 固定)		
	User(初期設定)		色温度を User に設定します。 (USER Gain=R:100/G:100/B:100 変更可)		
Clock/Phase	Exit		このグループの調節を終了します。		
(アナログ接続の	Clock		左右の画面サイズを調節します。		
場合のみ)	Phase		画像のにじみ・ノイズ(クロック位相)を調節します。		
	Exit		このグループの調節を終了します。		
		Exit	OSD Display の調節を終了します。		
	OSD	OSD H. Position	OSD の水平表示位置の調整します。(初期値 50)		
	Display	OSD V. Position	OSD の垂直表示位置の調整します。(初期値 50)		
Management		OSD Timer	OSD 表示が自動終了するまでの時間を設定します。(2 ~ 60 秒 初期値 30)		
	Source		映像信号入力を切替えます。(VGA・DVI)		
	Recall		工場出荷状態の設定に戻します。 ※ Recall 後、自動的に H.Position、V.Position、Clock、Phase の調整 が実行されます。		
Version			ファームウェアバージョンを表示します。		

画 面 調 続

Ш

6 機能



※ 自動画面表示

本機は下表に示す種類のタイミングの自動判別をおこない画面情報を設定しますので、コンピュータに接続すると、 自動的に適切な画面を表示します。ただし、コンピュータによっては画面にちらつきやにじみが生じることがあります。 また、入力信号によっては、うまく表示できないこともあります。その場合は画面調節() P7)をおこなってく ださい。

工場プリセットタイミングで表示したあとでも、調節ボタンでお好みの画面に調節(LTP)できます。 この場合、調節後の画面情報が記憶されます。

工場プリセットタイミング	走査周	周波数	同期信	言号極性	——————————————————————————————————————
解像度	水平	垂直	水平	垂直	
720 x 400	31.5kHz	70Hz	負	Ē	TEXT
640 x 480	31.5kHz	60Hz	負	負	VGA@60Hz
640 x 480	37.9kHz	72Hz	負	負	VGA@72Hz
640 x 480	37.5kHz	75Hz	負	負	VGA@75Hz
800 x 600	37.9kHz	60Hz	ΤĒ	Ē	SVGA@60Hz
800 x 600	48.1kHz	72Hz	正	正	SVGA@72Hz
800 x 600	46.9kHz	75Hz	正	正 正	SVGA@75Hz
1024 x 768	48.4kHz	60Hz	負	負	XGA@60Hz
1024 x 768	56.5kHz	70Hz	負	負	XGA@70Hz
1024 x 768	60.0kHz	75Hz	Ē	Ē	XGA@75Hz

※工場プリセットタイミングの順番は、上記とは異なります。

● 入力信号の識別は、水平周波数・垂直周波数・同期信号極性・同期信号タイプによりおこなっています。

- 本機はタイミングを記憶できる機能があります(ユーザーメモリ機能)。記憶させたい信号を入力し、OSD 機能で お好みの画面に調節(▲ P7)するとタイミングおよび画面情報が自動的に記憶されます。
- ●「Recall」を実行するとすべてのユーザーメモリに記憶された値が消去されます。
- 本機は水平周波数:30.0 ~ 61.0kHz、垂直周波数:55.0 ~ 75.4Hz 対応となっていますが、この範囲内であっても入力信号によっては正しく表示できない場合があります。

この場合は、コンピュータの周波数、または解像度を変更してください。

- インターレース信号には対応していません。
- 工場プリセットタイミングと走査周波数が同一で解像度が異なる入力信号の場合、正常に表示されない場合があり ます。

おしらせ

※ パワーマネージメント機能

コンピュータを使用しないときに本機の消費電力を減少させる機能です。

おしらせ

この機能はVESA DPMS対応パワーマネージメント機能を搭載しているコンピュータと接続して使用する場合 にのみ機能します。

パワーマネージメント機能が作動している場合の消費電力は以下の通りです。

モード	消費電力
通常動作時	15W(標準)
パワーセーブモード時	2W以下

【ミニ解説】 DPMS: <u>D</u>isplay <u>P</u>ower <u>M</u>anagement <u>S</u>ignaling の略です。

おしらせ

- ●パワーマネージメント機能を解除することはできません。
- ●水平または垂直同期信号がOFFになっているにもかかわらず、ビデオ信号(R, G, B)が出力されているようなコン ピュータについては、パワーマネージメント機能が正常に作動しない場合があります。
- タッチ操作またはキーボードの適当なキーを押すかマウスを動かすと、画面が復帰します。 画面が復帰しない場合またはパワーマネージメント機能のないコンピュータと接続して使用の場合、信号ケー ブルがはずれているかコンピュータの電源が「切」になっていることが考えられますので、ご確認ください。
- ●本機のタッチコントローラはパワーマネジメント機能動作中でも動作しています。

機

能

[●] 解像度 1024 × 768 以外の信号を入力した場合は、文字がにじんだり図形が歪んだりすることがあります。

※ タッチドライバのインストール

本機のタッチドライバは、WindowsVista[®]/Windows[®]7/Windows[®]8.1/Windows[®]10に対応しています。 タッチドライバは下記ホームページからダウンロードしてください。 タッチドライバの詳細については、ダウンロードしたユーザーズガイドをご覧ください。 http://www.mee.co.jp/sales/visual/touch-monitor/support/download.html

お願い

インストールする場合は、管理ユーザー(Administrator)でログインしてください。

ドライバインストール方法

HPよりダウンロードしたファイルは圧縮ファイルですので、ご使用のコンピュータにファイルを一旦保存し、解凍ください。



「setup.exe」をダブルクリックし、実行ください。

お願い タッチドライバをインストールする前に必ず「ユーザーズガイド」をお読みください。



右記のようなウィンドウが表示されますので、「実行」を クリックください。



ファイルのダウンロード - セキュリティの警告

【シリアル接続の場合】



【USB接続の場合】

「Controller USB, USB」を選択し、「インストール」を クリックください。 ドライバファイルのインストールを開始します。

本ソフトウェアを工ビュー気にインストール します。 いちロントローラは自動的に使出される のデポートを選択する必要にありません。 ソリアルエントローラは、今ん人は投で使 用するポートを選択する必要がありま す。 インムトール市は低かにて「インストー	パーラルン 940100 サポートをれるコントローラ S.Controller Serial Serial O Centroller USB USB
ル"をわりったしてくさく」、もし、今回イン ストールしない場合には"キャンセル"をか リックしてくさない。 インストール地中は画面をとわらないでく ださい。	() () () ()





インストール完了です。「閉じる」をクリックしてください。

(おしらせ)

インストール直後、ドライバが正常に動作しない場合は コンピュータを再起動してください。



🔀 🖽 ta

7 お客様筐体への取付け

※取付上のご注意

1.本機を取付けるためのパネル開口寸法 取付パネルの開口寸法は、下図の寸法で加工ください。 なお、取付パネルの板厚は2mm以上、4mm以下です。



2. 筐体内部での他の機器との間隔

お客様筐体内部の通気をよくするため、本機を取り付ける場合、下図に示すように他の機器との間隔が必要です。 また、本機の周囲温度は55℃以下となるようにしてください。



3. 本機の取付角度 本機は垂直取付を基本としています。 斜めに設置する場合は、傾斜角度を30°以内としてください。





※ 取付方法

お願い

コンピュータに接続する前に、本機、コンピュータおよび周辺接続機器の電源を切ってください。

1. 本機を筐体の取付穴に差し込みます。



2. 付属の取付金具のつめを本機の角穴に後ろ向きにひっかけるように差し込みます。



3. 取付金具のネジを仮締め後、指定トルクにて本締めし本機を固定してください。
 (締付トルク範囲:62~83.5N・cm)
 全箇所固定後、筐体と防水パッキンの間に隙間がないことを確認してください。
 隙間があるとIP65相当の耐環境保護性能を確保できない場合があります。
 なおIP65相当を確保するためには上部・下部各3箇所、左右側面部各2箇所を固定が必要となります。







※ 保護フィルム



輸送時およびお客様お取り扱い時の環境保護シート破損防止用のため、環境保護シートの表面には透明の保護フィルムを貼り付けています。

お客様ご使用の際に、保護フィルムを環境保護シートから外されても本体の性能には影響ありません。

※ 防水パッキン



防水パッキンは定期的に点検してください。 ワレ,ヒビ等の劣化がある場合は、耐環境保護機能(IP65相当)の低下により使用環境によっては本機を破損す る恐れがありますので直ちに交換してください。 防水パッキン交換については販売店にご相談ください。

客様筐体への取付は困ったとき

8 困ったとき

※ 故障かな?と思ったら・・・



このようなときは・・・・		チェックしてください。	
● 画面に何も映らない!	 (1) (2) (3) (4) (5) (6) (7) 	DC 電源コードを正しく接続してください。 正常に電気が供給されているか、別の機器で確認してください。 OSD 画面で「Contrast」および「Brightness」を調節してください。 (OSD 画面が表示されれば本機は正常です)(「」 P11) コンピュータとの接続を確認してください。 パワーマネージメント機能が作動していると画面が表示されません。 タッチ操作またはキーボードの適当なキーを押すかマウスを動かしてく ださい。(「」 P12) 映像信号ケーブルを正しく接続してください。 コンピュータの電源が「切」になっていないか確認してください。	
2 画面がちらつく!	(1) (2) (3)	分配器を使用している場合は、コンピュータに直接入力してください。 OSD メニュー「Clock/Phase」の「Phase」を選択し調節ください。 上下にちらつく場合は、コンピュータのリフレッシュレートを 60Hz に設 定してください。	お客様筐体への
● 画面上に黒点(点灯しない点) や輝点(点灯したままの点)が 少数ある!	(1)	液晶パネルの特性によるもので、故障ではありません。	敢き 付 け
④ 画面を切り替えても前の画面の 像が薄く残っている!	(1)	長時間同じ静止画面を表示すると、このような現象が起こることがあり ます。電源を切るか変化する画面を表示していれば像は 1 日程度で自然 に消えます。	

このようなときは・・・・	チェックしてください。
 表示状態がおかしい! 	 液晶パネルはLEDバックライトを使用しているため、使用時間の経過 に伴い表示状態が少しずつ変化します。また、周囲温度によっては画面 の表示状態が影響を受けることがありますが、液晶パネルの特性による もので、故障ではありません。 視野角(画面を見る角度)によっては、色合いの変化が大きくなります。 タッチパネルモニターの設置角度を調節してください。 液晶パネルの特性によるもので、故障ではありません。 表示色がおかしい場合は、OSDメニュー「Color Mode」の「User」 を選択し、お好みの色の割合を調節するか、「Management」の「Recall」 で工場出荷設定に戻してください。
	(1) ご使用のコンピュータによっては、入力信号を切り替えると画面が数秒 間不安定になることがありますが、故障ではありません。
	 タッチドライバのユーザーズガイドに従ってタッチドライバが正し くインストールされていることを確認してください。 タッチ通信ケーブルを確実に接続してください。 キャリブレーションをおこなってください。(詳しくはタッチドライバ 用ユーザーズガイドをご覧ください。) パソコン(システム)の立ち上げ時には、周辺機器の認識をおこなって おり、タッチ操作をおこなうと正常な認識ができませんので、システム が完全に立ち上がったあとに操作をおこなってください。 タッチパネルモニターに電源を入力してから約5秒間はタッチコン トローラがイニシャライズ中のため正常に感知しないことがあります。 5秒間以上経ってから操作してください。 水滴、ゴミ、汚れ等をきれいに拭き取ってから、電源を入れなおしてく ださい。

お客様筐体への取付け

※ お手入れ

定期的にお手入れを

タッチパネルモニターをより良い状態でご使用いただくため、 定期的にタッチパネルのお手入れをおこなってください。 お手入れの際は電源コードを抜いてから、柔らかい布で軽くふ き取ってください。 電源を入れたままお手入れをおこなうと、タッチパネルが反応 し、故障の原因となります。 汚れがひどいときには水に浸した布をよくしぼってふき取り、 乾いた柔らかい布で仕上げてください。



1年に1度は内部の掃除を

販売店におまかせください。定期的な掃除は火災、故障を防ぎ ます。特に梅雨期の前におこなうのが効果的です。 内部掃除費用については販売店にご相談ください。



9 付録



TFTカラー	サイズ	15型(38cm)TFTカラー液晶パネル		
液晶パネル	表示画素数	1024(H)×768(V)		
	画素ピッチ	0.297mm		
	アスペクト比	4対3		
	画素配列	R、G、B 縦ストライプ		
	視野角(標準)	±85°(左右)、±85°(上下)、CR≧10		
	バックライト方式	白色LED(エッジライト方式)		
タッチパネル	方式	アナログ抵抗膜方式		
および	表面処理	ノングレア		
コントローラ	分解能	0.4mm		
	出力	RS232C/USB		
入力信号	ビデオ信号	アナログ0.7Vp-p(入力インピーダンス 75Ω)、デジタルRGB(TMDS)		
	同期信号	セパレート同期信号、複合同期信号 TTL コンパチブル		
走査周波数	水平	30.0kHz~61.0kHz		
	垂直	55.0Hz~75.4Hz		
画面保護シート	硬度	3H~4H		
表示色	•	1619万色		
輝度(標準)		250cd/m²(工場出荷設定時)		
コントラスト比(標準)		1500:1		
表示サイズ		304.1mm(H)×228.1mm(V)		
入出力信号コネクタ	映像信号	ミニD-Sub15ピン(メス)/DVI-D(メス)		
	タッチ通信信号	D-Sub9ピン(オス)/USB type-B		
使用環境条件**	周囲温度	前面:0℃~40℃ 背面:0℃~55℃		
	湿度	20%~80%RH(結露なきこと)		
	耐震性	9~150Hz 4.9m/s ²		
供給電源		DC24V 電源入力:端子台3ピン		
消費電力(標準)		15W		
適合規格		VCCI クラス B、UL、c-UL		
耐環境保護構造		IP65相当(表示部)		
耐腐食性ガス		耐腐食性ガスのないこと		
外形寸法		376(W)×291(H)×67(D)mm		
質量		約3.5kg		
ユーザーコントロール	OSD操作	Auto Setup, Brightness, Contrast, H.Position, V.Position, Sharpness, Color Mode(Cool, Neutral, Warm, User), Clock, Phase, OSD H. Position, OSD V. Position, OSD Timer, Source, Recall		

● この製品は一般工業等を対象とした汎用品として製作されたもので、人命にかかわるような状況下で使用される機器あるいはシステムに用いられることを目的として設計、製造されたものではありません。

● この製品を原子力用、電力用、航空宇宙用、医療用、乗用移動体用の機器あるいはシステムなど特殊用途への適用をご検討の際には、 当社の営業担当窓口までご照会ください。

● この製品は厳重な品質管理体制の下に製造しておりますが、この製品の故障により重大な事故または損失の発生が予測される設備への適用に際しては、バックアップやフェールセーフ機能をシステム的に設置してください。

●本機をコンソールなど筐体に組み込む際には、使用環境条件[※]を超えないよう通風設計には十分ご注意ください。また、表示面を垂直面より15度以上傾けて設置する場合には必ずファンなどによる強制換気をおこない、コンソールなど筐体内部に熱がこもらないようにしてください。

年間の稼働時間が長い場合や、使用環境温度が高い場合は、性能を維持するために定期的なメンテナンスを推奨いたします。 定期的なメンテナンスは原則として有償となります。弊社営業まで問い合わせください。

※ 使用環境条件とは、本機の性能を保証できる運転(動作)時の本機周囲環境のことをいいます。 (コンソールなど筐体の周囲環境ではありません。)

録

※ さくいん

A~Z

Auto Setup 7,11,20
Brightness 11,17,20
Clock
Clock/Phase·····11,17
Color Mode
Contrast
Cool
Display
DPMS 12
Exit
H.Position
Management
Neutral
OSD Display ······11
OSD H.Position
OSD Timer
OSD V.Position ······11,20
Phase
Recall
Sharpness11,20
Source
TFTカラー液晶パネル・・・・・20
User
Version ······11
VESA12,14
V.Position
Warm

あ

安全のために必ず守ること・・・・・ 3
映像信号ケーブル・・・・・ 5,6,17
映像信号入力コネクタ・・・・・5
お手入れ・・・・・4,19

か

外形寸法 · · · · · · · · · · · · · · · · · · ·
各部の名称・・・・・5
画素ピッチ・・・・・20
画面がちらつく!・・・・・・・・・・・・・・・17
画面上に黒点(点灯しない点)や輝点
(点灯したままの点)が少数ある!・・・・・17
画面調節・・・・・7,12
画面に何も映らない!・・・・・・・・・・・・・・・・・・・・・・・17
画面を切り替えても前の画面の
像が薄く残っている!・・・・・・・・・・17
輝度
機能・・・・・12
供給電源・・・・・ 6,20
ケーブルの接続・・・・・・・・・・・・・・・・・・・・・・6
工場プリセットタイミング・・・・・・12
故障かな?と思ったら・・・・・・・・・・・17
ご使用の前に・・・・・・・・・・・・・・・・・・2
困ったとき・・・・・・・・・・・・・・・・・・・・・・・・17
コントラスト・・・・・・・・・・・・・・・・11,20

さ

質量
自動調節・・・・・ 7,11
自動画面表示・・・・・12
現野角・・・・・18,20
生様・・・・・ 20
吏用環境条件・・・・・・・・・・・・・・・・・・・・・・・・20
肖費電力・・・・・ 20
数秒間画面が不安定になる!17,18
妾続・・・・・・6
走査周波数・・・・・12,20

た

耐環境保	獲構造・・・・・20
耐腐食性	ガス・・・・・・20
タイミン	グ・・・・・11,12
タッチパ	ネルが正常動作しない・・・・・・17,18
タッチ通	言ケーブル・・・・・・・・・・・・・5,6,18
タッチ通	言コネクタ・・・・・・・・・・・・・・・・5
タッチド	ライバのインストール・・・・・・・13
タッチ05	SD機能・・・・・7~10
適合規格	
電源入力	コネクタ・・・・5
電源の接	売・・・・・6
同期信号	
同期信号	亟性・・・・・12

な

入力信号・・・・・7,12,18,20

は

パワーマネージメント機能・・・・・12
ビデオ信号・・・・・12,20
表示画素数・・・・・20
表示サイズ・・・・・20
表示状態がおかしい!17,18
付属品の確認・・・・・ 5
付録
防水パッキン・・・・・15,16
保護フィルム・・・・・16
本体背面5

배

マニュアル調節・・・・・ 7

せ

ユーザーメモリ機能・・・・・ 12

録



MEMO

付 録

MEMO

付 録

40D871151B10

MITSUBISHI ELECTRIC ENGINEERING

Touch panel monitor

USER'S MANUAL



Read all of the instructions in this user's manual before you operate your equipment. Give particular attention to all safe precautions.

Internet Homepage: http://www.mee.co.jp/sales/visual/touch-monitor/
INTERNET INFORMATION & DOWNLOADS SERVICE

Anellog Resistive Method	
Table of Contents Page	
1. Before Using ······2 2. Precautions for Safe Use ·····3	Before Using: Precautions for Safe Use
3. Part Name	Part Names
 4. Connections 6 * Connecting the power cord 6 * Connecting the Cables 6 5. Display Adjustment 7 * Image Adjustment (for analog connection) 7 * Touch OSD Function 8	Connection & Adjustments
6. Functions 12 * Automatic Screen Display 12 * Power Management Function 12 * Software Installation for Touch-driver 13	Functions
7. Mounting on User's Equipment 14 * Attachment Precautions 14 * Attachment Method 15 * Protection Film 16 * Waterproof packing 16 8. Trouble Shooting 17 * If the Device Malfunctions 17 * Cleaning Instructions 19	Mounting on User's Equipment Troubleshooting
9. Addendum ····· 20	Addendum

1. Before Using



この装置は、クラスB機器です。この装置は、住宅環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に 近接して使用されると、受信障害を引き起こすことがあります。取扱説明書に従って正しい取り扱いをしてください。 本機は付属の信号ケーブル、当社推奨の電源セットおよび当社推奨のケーブルを使用した状態でVCCI基準に適合しています。

- Reprinting any contents of this user's manual without permission is not allowed (All rights are reserved by Mitsubishi Electric
- Engineering Co., Ltd.).
- The contents of user's manual are subject to change without notice.
- Please contact your supplier if you find any failure in this user's manual though we made assurance doubly sure.
-

Windows Vista[®], Windows[®] is a registered trademark of Microsoft Corporation in the United States and other countries. Other names of companies and products in this operating manual are trademarks or registered trademarks of those companies.

The symbols used in this User's Manual and their meanings are as following.

The dangers and the degree of danger possible as a result of mishandling are explained using the symbols below.



The meanings of the symbols used in

\bigcirc	Never do this.	0	Be sure to follow the instructions.
	Never attempt to disassemble, repair or modify.	Ð	Be sure to ground (earth) the earth wire.
0	Be sure to unplug the power cable from the outlet.	Â	Beware of high voltage (indicated on the back surface of the unit



PLEASE : Items that require particular attention.

: Reference page

[Glossary]: Easy explanation of technical term

Before Using: Precautions for Safe Use...

2. Precautions For Safe Use

• Before using, be sure to read this section for details on correct and safe use.



\land CAUTION





CAUTION Do not use outside Do not obstruct air vents with cloth, Do not install in highly humid or dusty etc.. locations or expose to oily smoke or steam. Do not outside Prohibited Do not use in your car This device cannot be used This device was not designed for use in your car or as a mobile \mathbb{D} outside. Using outside may cause unit. Such use can cause Prohibited malfunction. malfunction. Do not cause shock to the Touch panel monitor. Do not move while the connector cables are connected. 2 Shock can cause damage May cause fire or electric leading to injury or shock. Check that you have malfunction. unplugged the power cable nibited and disconnected the cables connecting the device to other machines before you move it. Disconnect the power cord before leaving for long vacations or leaving your home. Disposing of your Touch panel monitor. When disposing of this device, please cooperate with collection and recycling in accordance with the Law for the Promotion of Effective Utilization of Resources. Disconnect plug Using your touch panel monitor effectively

For use in Japan only Effective viewing For the most comfortable viewing and to reduce eyestrain, the screen should be positioned slightly lower than eye level and 40-70 cm away from your eyes. Rooms that are too bright will strain your eyes. Please use in a suitably bright room. Also, continuous viewing over a long period of time will tire your eyes. Periodic cleaning is recommended For use in Japan only This Touch panel monitor is manufactured and sold for use in Japan only. Our company shall not be liable for any matters related To keep the touch panel monitor's optimum performance, it is to use in any other countries of Japan. recommended to clean the screen periodically. Furthermore, technical consultation and after service, etc. Turn the power off and unplug from the outlet before cleaning to for this device are not provided overseas. prevent product failure. Use a soft cloth when cleaning. This Touch panel monitor is designed for use in Japan and Finish it with a dried soft cloth finally. Avoid using any cleaning can not be used in any other countries. solution or glass cleaner.

NOTICE

Afterimage

The afterimage is the phenomenon in which the previous screen display remains as the screen display is changed after the same screen is displayed for a long time, and it is not a trouble. The afterimage will gradually resolve by changing the screen display. However, prevent displaying the same screen for a long time since the afterimage may not disappear if same screen is displayed too long. It is recommended to change the screen display with "Screen Saver" etc.

fore Using: recautions Safe Use..

3. Part Name



PLEASE

The connector between Touch communication connector (USB type B) and Video signal input connector (DVI-24pin) cannot be used.

NOTICE

• DVI-D cable do not come with the product. If ones are required, use the cables of our recommendation: DVI-D cable : SANWA SUPPLY KC-DVI-2K 2m

***** Verifying Accessories

These are the accessories that should come with your purchase. It any of your accessories are missing or damaged, please contact your vendor.



Signal cable Mini D-Sub 15pin-Mini D-Sub 15pin (with two ferrite cores)







Touch communication cable D-Sub 9pin - D-Sub 9pin (without ferrite core)



Attachment bracket

(10)



Touch communication cable(USB) Type A Type B (without ferrite core)





Safety note



(1)

Cable clamper (1)



4. Connections



Connect the input power cable to the terminal block on the rear side of the touch panel monitor.

PLEASE

- Before connecting the signal cable, please turn off the power to this device, your computer and peripheral devices.A dedicated power cable is not provided with this device.
- Use a 0.75mm² power cable or thicker.
- Remove the insulating plate secured with a screw from the top of the power supply connector prior to connection.
- In the interests of safety, secure the insulating plate again with the screw after connection.



ACAUTION

• Do not use with power voltages other than it indicated. It causes the fire and the electrical shock.

Connecting the Cables

Fix the cables surely with each fixed screws.

PLEASE

Before connecting the signal cable, please turn off the power to this device, your computer and peripheral devices. PLEASE

It is recommended to connect directly with the computer without the USB hub, etc. when connecting USB.



2: Video signal cable (DVI-D)

4: Touch communication cable (D-Sub 9pin)

provided to prevent the connector from being disconnected.

Connection & Adjustments

5. Display Adjustment

* Image Adjustment (for analog connection)

This product has two ways to adjust the picture image Automatic screen adjustment and Manual screen adjustment. At first, execute Automatic screen adjustment after connecting the monitor to the PC. For further adjustment, use Manual screen adjustment.

NOTICE

In rare cases, any image may not be displayed with the specified frequency (Horiz: 30.0 to 61.0kHz, Vert.: 55.0 to 75.4Hz). Please change the refresh rate or resolution of the PC in such case.

1. Automatic screen adjustment

- (1) Turn on the monitor and the PC.
- (2) According to select Auto Setup at the OSD menu, it starts automatic screen adjustment and tint suitable for input signal of Clock, Phase, H.Position and V.Position by detecting input signal.

After automatic screen adjustment completes, OSD screen is displayed to verify that automatic screen adjustment functions properly.

Select "YES" when the automatic screen adjustment functions properly.

Select "NO" when the automatic screen adjustment may not function properly to execute manual adjustment.

Auto S	Setup
ls this displayed ا	image properly ?
Yes	No

NOTICE

- The automatic screen adjustment may not function properly when displaying only text such as the DOS prompt, when the image does not fill the screen, or when displaying a single-color screen.
- This function may fail to operate depending on the used PC type and/or video cards. In such case, use Manual screen adjustment.

[Glossary]

OSD: Abbreviation "On Screen Display"

2. Manual screen adjustment

- (1) Turn on the monitor and the PC.
- (2) Refer to next page "Touch OSD function", and select the desired adjustment items.

☆ Touch OSD Function

This touch OSD function is adjustable the image on the screen by touching the screen.

1. Beginning operation for Touch OSD function

(1) Touch the upper right corner of the monitor for 3 seconds.



(2) Next, touch bottom right corner.



(3) Be sure the blue "■" mark is indicated on upper left corner.



(4) Changes to Touch OSD mode, and OSD screen appears, after you touch bottom left corner.





NOTICE

- If you do not touch correctly according procedure, not change to Touch OSD Mode. (OSD screen is not indicated)
- "■"mark disappears when touching while the mark appears places other than bottom left corner of the screen.
- Under such a condition, even if four is executed, OSD is not indicated.
- Neither indication of OSD screen, nor indication of "■". and touch when "■" disappears on the way. the OSD function does not operate.
- Please confirm the mouse cursor follow to the touch position place not listed above once and do the procedure of 1-4 again.
 Touch OSD function adjusts the monitor by operating the OSD screen by the touch of the touch screen, either.

Connection & Adjustments

2. How to cancel the Touch OSD function

- (1) Please select "Exit" of Adjustment groups.
- (2) OSD screen is disappears and return to normal touch function.

3. How to operate Touch OSD

The touch screen is divided into four areas, as four keys during the mode of touch OSD function. Same function provides "Menu", "Select", "+", "-" button by touching following key area.



*The key area in a left chart is not actually indicated.

Position	Key	Action
Bottom Left	Menu	Move to "Exit" while OSD screen is indicated.
		Or return to previous screen while OSD function is operating.
Bottom Right	Select	Decide adjustment groups and items
Upper Right	+	Move to adjustment items or groups
		Or adjust(increase) the value of selected item.
Upper Left	-	select to adjustment items or groups
		Or adjust(decrease) the value of selected item.

NOTE

• Normal touch function stops while Touch OSD is working.



4. Touch OSD function Setting

You can change of the touch sequence, and select "Enable/Disable" of Touch OSD in attached touch driver's utility.

(1) Touch Sequence

You can change the touch position for move to touch OSD function. Default is B: right upper corner, C: Right bottom corner, D: left bottom corner.

- 1) Click the "Touch OSD" of "UPDD install" of touch driver, then following window is indicated.
- 2) Please change a sequence, by touching the letter A, B, C, D of the monitor in indicated figure.
- 3) After that, store a touch sequence to a touch monitor by pushing the "save" button.

to start the Touch O	t the monitor in the sequence shown below ISD function.	A B
Click the corners of	tor 3-5 seconds the displayed image to set a new sequence	
Touch sequence		DC
DBD	· · · · · · · · · · · · · · · · · · ·	
🗹 Enable Touch	OSD	
Show Touch	OSD	Save

(2) "Enable/Disable" of Touch OSD function.

Default is "Enable" (checked).

OSD operation is available by installing optional OSD PCB, though set to disable touch OSD function.

NOTICE

• In addition, available to display it by a function of (3).

🖳 Touch OSD	?×
Touch the corners of the monitor in the sequence shown below to start the Touch OSD function. Hold the first touch for 3-5 seconds Click the corners of the displayed image to set a new sequence Touch sequence D B D The D Finable Touch OSD Show Touch OSD	B D C Save
	🗸 Close

(3) OSD display

OSD screen is displayed when click "Show Touch OSD".

5. Touch OSD Adjustment items

Ajustment groups	Ajustment items		Contents of Control			
Exit			End OSD adjustment.			
Auto Setup (Only for analog connection)			Automatically adjusts the horizontal and vertical display positions, horizontal display size and phase. Automatically and optimally adjusts the ADC (AD converter) gain according to the input amplitude of the video signal. *The Select key of 640/720 is displayed at the timing of overlap of 640x400 (350) /720x400 (350), etc(Default value 720)			
Brightness			Adjusts the brightness of the screen. (0~100 default value 100)			
Contrast			Adjusts the contrast. (0~100 default value 90)			
	Exit		End the adjustment of this group.			
Display	H. Positic	n	Adjusts the horizontal display position. (Default value 50)			
(Only for analog	V. Positio	n	Adjusts the vertical display position. (Default value 50)			
connection)	Sharpnes	S	Adjusts the sharpness of the display. (0~4 default value 2) (*Disable in the video signal input of the resolution 1024x768)			
	Exit		End the adjustment of this group.			
	Cool		Sets color temperature to Cool. (9300K Gain=R:90/G:83/B:100 fixed)			
Color Mode	Neutral		Sets color temperature to Neutral. (6500K Gain=R:100/G:88/B:79 fixed)			
	Warm		Sets color temperature to Warm. (5400K Gain=R:100/G:83/B:68 fixed)			
	User(Defa	ault setting)	Sets color temperature to User. (USER Gain=R:100/G:100/B:100 changeable)			
Clock/Phase	Exit		End the adjustment of this group.			
(Only for analog	Clock		Adjusts the horizontal screen size.			
connection)	Phase		Adjusts the screen blur and noise. (Clock phase)			
	Exit		End the adjustment of this group.			
Management	OSD Display	Exit	End the adjustment of OSD Display.			
		OSD H. Position	Adjusts the horizontal display position of the OSD. (Default value 50)			
		OSD V. Position	Adjusts the vertical display position of the OSD. (Default value 50)			
		OSD Timer	Sets the time for automatic time-out of the OSD display. (2~60 seconds default value 30)			
	Source		Changes the video signal input. (VGA•DVI)			
	Recall		Resets the setting to the default. *Automatically adjusts the H.Position, V.Position, Clock and Phase after recalling.			
Version			Displays the firmware version.			

11

Connection & Adjustments

6. Functions



* Automatic Screen Display

Information and automatically show the appropriate display when connected to your computer. However, flickering and blurring may occur in some computers. Also, some signals may cause display errors. When errors occur, adjust you monitor (\rightarrow P.7). The monitor information is saved after the monitor is adjusted.

Even after using the factory-preset timing, you can change the displayed image setting on the screen (\rightarrow P.7). If the setting is changed, it will be memorized.

Factory preset timings

Factory preset timings input resolution	Scanning frequency		Synchronization signal polarity		Remarks
	Horiz.	Vert.	Horiz.	Vert.	
720X400	31.5kHz	70Hz	-	+	TEXT
640X480	31.5kHz	60Hz	-	-	VGA@60Hz
640X480	37.9kHz	72Hz	-	-	VGA@72Hz
640X480	37.5kHz	75Hz	-	-	VGA@75Hz
800X600	37.9kHz	60Hz	+	+	SVGA@60Hz
800X600	48.1kHz	72Hz	+	+	SVGA@72Hz
800X600	46.9kHz	75Hz	+	+	SVGA@75Hz
1024X768	48.4kHz	60Hz	-	-	XGA@60Hz
1024X768	56.5kHz	70Hz	_	-	XGA@70Hz
1024X768	60.0kHz	75Hz	+	+	XGA@75Hz

* The sequence of factory preset timing signals is different from this table.

- Input signal identification is performed on the basis of horizontal frequencies, vertical frequencies, synchronizing signal polarity and synchronizing signal type.
- This unit has the function of memorizing timings (User memory function). Inputting signal to memorize and adjusting the screen with the OSD function (→ P.7) memorizes the timing and screen data automatically.
- Execution of Recall erases all values stored in the user memory.
- This machine is compatible with horizontal frequencies of 30.0 ~ 61.0kHz and vertical frequencies of 55.0 ~ 75.4Hz. However, some input signals may not be able to display correctly even if they fall within this range. In such cases, please change the frequency or the resolution of your computer.
- This device in not compatible with interlaced signals.
- The screen may not appear properly for input signals that have the same factory preset timing and scanning frequency but different resolutions.

NOTICE

• Characters may blot or figures may deform if signal other than resolution 1024x768 is input.

* Power Management Function

This function reduces the power consumption when the computer is not used.

• This function comes to ineffective if the connected PC has no power management function responding to VESATM DPMS[™].

The power consumption when the power management function is operating are as shown below.

Mada	Power	
Mode	consumption	
Ordinary operation	15W (Standard)	[Glossary]
Power save mode	2W or less	DPMS: Abbreviation for "Display Power Management Signaling.

NOTICE

- It is impossible to reject the "Power management" mode.
- The power management function may not operate properly for computer that the video signal (R, G, B) is output though the vertical or horizontal synchronous signal is OFF.
- Press any key on the keyboard or touch the screen, or move the mouse, and the screen will return to the previous state. If the screen dose not return, or is connected to computer without the power management function, it is estimated that the signal cable is disconnected or the power of the computer is "OFF". Please check.
- The touch controller in the monitor operates even if the equipment is in the power management mode.

* Software Installation for Touch-driver

Acceptable operating software : WindowsVista[®], Windows[®]7, Windows[®]8.1, Windows[®]10. Download the touch driver from the following web site. For details of the touch driver, refer to the downloaded user's guide. http://www.mee.co.jp/sales/visual/touch-monitor/support/download.html

PLEASE

Log in as "Administrator" when installing.

Install the software according to the following steps.

A file downloaded from the web site is a compressed file. Save the file in your computer and decompress the file.



5

Double-click on "setup.exe" to execute the file.

PLEASE

● Before you install main software, please refer to the "User's Guide" [ユーザーズガイド].



Click the "Run" button.





[USB connection]

Select "Controller USB, USB" and click "Install". Installation of the driver file starts.



[Serial connection]

Select "Controller Serial, Serial" and specify a COM port to use on the arrow in the Serial Port field. Then, click "Install" button. Installation of the driver file starts.

bit program will partal the project or project bit project or project or project bit project or	TOUCH! UPI	DD Install	тоц	CHI IBASE	UPDD Install
The installation of software is completed. Click the "Close" button. NOTICE • When the driver does not work just after installation normally, please reboot the PC. • When the driver does not work just after installation	This program will estall the Universal Forther Device Driver software on your computer. USB controllers will be detected automatically but in stall process and that the software has been installed. Click "Install" to proceed, or "Cancer" if you do not wish to install the software at this time.	re version: 0401:08 sontrollers r Serial, Serial r USB, USB	This program Universal Po software or : USB controll and do not n Serial contro selected now has been ins Ofick "firstal or "Cancel" install the sc	will install the net of Device Driver our computer. Sor will be detected by the install process and to be selected lars need to be or after the software allel. If to proceed. If you do not wish to ftware at this time.	Software version: 040108 Supported controllers Controller Serial, Serial Controller USB, USB Serial port
NOTICE Install successful • When the driver does not work just after installation normally, please reboot the PC. The Universal Pointer Device Driver software has been successfully installed on your computer. Image: How touch device does not operate correctly then please reboot your computer. If your touch device does not operate correctly then please		▶ Install		Vallet	Install
When the driver does not work just after installation normally, please reboot the PC. If your touch device does not operate correctly then please reboot your computer.	The installation of software	is completed.		JPDD Inst	all
If your touch device does not operate correctly then please reboot your computer.	The installation of software Click the "Close" button.	is completed.		JPDD Inst	call essful
	 The installation of software Click the "Close" button. NOTICE When the driver does not normally, please reboot to 	is completed. t work just after installation he PC.		JPDD Inst Install succ The Universal Poi successfully inste	call essful Inter Device Driver software has been Iled on your computer.

7. Mounting on User's Equipment

***** Attachment Precautions

1. Panel opening dimensions to install the monitor

Provide an opening for attachment of the panel according to the dimensions below. Please note that the panel plate thickness should be from 2 mm to 4 mm.



2. Clearance between other devices inside of the case

When installing this device, it is necessary to ensure spacing (see below) between other devices in order to improve ventilation inside of the case.

Furthermore, ensure an ambient temperature of 55°C or less.



3. Display installation angle

The display should always be attached vertically. If installing at an angle, ensure that the tilt does not exceed 30°.



ACAUTION

• Do not use the display facing upwards or downwards.





***** Attachment Method

PLEASE

Before connecting the signal cable, please turn off the power to this device, your computer and peripheral devices.

1. Insert the display into the installation hole of the case.



2. Insert the claws on the provided attachment brackets so they catch behind the rectangular slits on the display.



3. After the screw of the mounting bracket is temporarily tightened, tighten it by designated torque to fix the monitor.

(Tightening torque: 62 - 83.5 N.cm)

After fixing all of the points, confirm that any clearance is not found between a housing and waterproofing packing.

The environmental protection-proof performance of equivalent to IP65 may not be secured when a clearance is found.

Secure the three locations at the top and bottom and two locations on the left and right for equivalent to IP65.





✤ Protection Film



We stick a transparent protection film on the surface of the environmental protection sheet for prevention of environmental protection sheet damage at the time of transportation time and the customer handling. It holds the performance of the main body without the transparent protection film.

Waterproof packing

Waterproof packing

Back of the Monitor

Please check the waterproof packing regularly. When there is the deterioration such as breaking, the crack, an environmental protection measure function (IP65 equivalency)falls, machine might be damaged according to your environment. Please contact your supplier about the waterproof packing exchange.

8. Trouble Shooting

※ If the Device Malfunctions



Problem		Troubleshooting			
	1)	The power supply cord should be completely and correctly connected.			
	2)	Check to make sure that the outlet is energized. To check it, use another machine.			
	3)	If OSD appears and "Contrast" and "Brightness" adjustment is available, the monitor is normal. (\rightarrow P.11)			
	4)	Check to make sure that your PC and equipment should be connected completely and correctly.			
	5)	Power management function may be operating. To release it, touch the screen on LCD panel, press a key on the keyboard or move the mouse. (\rightarrow P.12)			
	6)	Check to make sure that the video signal cable should be completely and correctly connected.			
	7)	The PC connected with the monitor should be on.			
	1)	If a distributor is used, directly connect this product with your PC.			
2 Picture linckers	2)	Select "Phase" on "Clock/Phase" of OSD menu			
	3)	If the screen flickers up and down, specify a refresh rate of the com- puter at 60 Hz.			
3 Black/Bright spot(s)	1)	Every LCD panel has such spots by nature. The monitor has no prob- lem.			
4 Picture persistence	1)	If a fixed pattern is displayed for a long time, it may occur picture persis- tence. To alleviate image persistence, turn off the monitor or display a moving picture for approx. one day.			

Nounting on User's Equipment Troubleshooting

Problem		Troubleshooting
(5) Something is wrong with displaying conditions	1)	Because the liquid crystal panel uses the LED backlight, displaying con- ditions may gradually change over time of use. In addition, displaying conditions may be influenced by ambient temperatures. It is characteris- tics of a liquid crystal panel, not a failure.
	2)	Color changes may be significant depending on a viewing angle (angle of watching the screen). Adjust mounting angle of the touch panel moni- tor. It is characteristics of a liquid crystal panel, not a failure.
	3)	If displaying colors have problems, select "User" of "Color Mode" in OSD menu. Adjust ratios of desired color elements or use "Recall" in "Management" to restore factory-preset settings.
6 Picture unstable (For several seconds)	1)	Some PCs cause the picture unstable for several seconds when its in- put signal is switched. In such case, your equipment has no problem.
(7) Touch panel abnormal	1)	Check to make sure that the touch driver should be completely and correctly installed according to the user's guide for touch driver.
	2)	Check to make sure the connection cable for touch-sensor should be connected completely and correctly.
	3)	The monitor may need to be calibrated. (Refer to the user's guide for touch driver)
	4)	You cannot operate this system during your PC is starting up, as it is under recognition of its peripheral equipments. If you operate it, the PC may fail in the recognition.
	5)	During the period of about 5 seconds after turning on the power supply of the touch panel monitor, the touch controller is under initialization and may not sense touches correctly. Operate the panel after waiting for 5 seconds or more.
	6)	Check to make sure that there should be no waterdrop, dust or con- tamination on the touch panel. If any, wipe it off and restart the monitor again.

Mounting on User's Equipment Troubleshooting

Cleaning instructions

Periodic cleaning is recommended

To keep the monitor's optimum performance, it is recommended to clean the touch panel periodically. Unplug from the outlet before cleaning to prevent product failure.

Use a soft cloth when cleaning.

If the monitor is too soiled, soak a cloth in mild detergent and give it a wring before cleaning. Finish it with a dried soft cloth finally. Avoid using any cleaning solution or glass cleaner.

Annual cleaning of the monitor inside is recommended

Contact your supplier to have the monitor inside cleaned. Periodic cleaning will prevent causing fire and any failure. Before rainy season is better. Refer the supplier regarding cleaning fee.

9. Addendum



Diagonal Diagonal Native resolution (Pixel count) TET color		15 inches (38cm)			
		0.20Zmm			
nonol	Acrest Datio	0.29/1111			
panei					
	Pixel array	R+G+B vertical stripe			
	Viewable angles (Standard)	Left/Right:85°/85° Up/Down:85°/85°,CR ≧ 10			
	Backlight method	LED			
	Method	Analog resistance film			
Touch panel	Processing	Non-Glare			
and controller	Resolution	0.4mm			
	Output	RS232C/USB			
Input signal	Video signal	Analog: 0.7Vp-p (Input impedance 75Ω), Digital RGB(TMDS)			
	Synchronization signal	Separated, Multiple synchronization signal TTL compatible			
Synchronization range	Horizontal	30.0kHz - 61.0kHz			
	Vertical	55.0Hz - 75.4Hz			
Protective screen sheet	Hardness	3H - 4H			
Display colors	•	16,190,000 at max. (8bit/color)			
Luminance (Standa	ard)	250cd/m² (default)			
Contrast ratio (Star	ndard)	1500:1			
Active display area	HxV	304.1mm(H)×228.1mm(V)			
Input/output	Video signal	Mini D-sub 15 pins (female)/DVI-D(female)			
signal connectors	Touch communication signal	D-Sub 9 pins (male) / USB type-B			
Environmental	Surrounding temperature	Front: 0°C to 40°C Back: 0°C to 55°C			
consideration	Humidity	20% to 80%RH (Non condensing)			
	Earthquake resistance	9~150Hz 4.9m/s ²			
Power supply		DC24V			
Power Consumption (Standard)		15W			
Regulation compliance		VCCI class B, UL, c-UL			
Protective construction for environment resistance		IP65 corresponding (Display part)			
Corrosive gas resistance		No Corrosive gas resistance			
Outline Dimensions		376(W)×291(H)×67(D)mm			
Weight		Approx.3.5kg			
User Control	OSD Operation	Auto Setup, Brightness, Contrast, H.Position, V.Position, Sharpness, Color Mode (Cool, Neutral, Warm, User), Clock, Phase, OSD H. Position, OSD V. Position, OSD Timer, Source, Recall			

NOTICE

- This device has been manufactured as a multi-purpose product for use in general industrial applications and so on, and has
 not been designed or manufactured for use with devices or systems that may represent a danger to human life.
- Please contact a member of our sales staff if considering customized applications for nuclear power, electrical power, aerospace, medical, or passenger-carrying movable equipment, or systems and so on.
- This product has been manufactured under stringent quality control guidelines, however, it is recommended that a back-up or fail-safe function be incorporated into the system when using with equipment that may cause major accidents or loss as a result of a breakdown of this product.
- When installing this display into the casing of a console and so on, please exercise sufficient caution with regards to ventilation design to ensure that usage environment conditions Note are not exceeded. Furthermore, when installing the display surface at an angle of 15- or more from a vertical surface, always ensure enforced ventilation with a fan etc. to ensure that heat does not build up inside the casing of the console and so on.

Periodical maintenance is recommended to maintain performance when the annual operating time is long or the operating ambient temperature is high.

Periodic maintenance is paid in principle. Please contact a member of our sales staff.

Note: Usage environment conditions refer to the ambient environment during operation required to guarantee the display performance.

(This does not refer to the ambient temperature of the casing for the console and so on.)

Addendum

MEMO



MEMO

40D871151B10

MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED