

Aシリーズ 端子台

TB2	TB1
TB4	TB3
TB6	TB5
TB8	TB7
TB10	TB9
TB12	TB11
TB14	TB13
TB16	TB15
TB18	TB17
TB20	TB19
TB22	TB21
TB24	TB23
TB26	TB25
TB28	TB27
TB30	TB29
TB32	TB31
TB34	TB33
TB36	TB35
TB38	TB37

電圧入力と電流入力を
混在して使用することは
できません。

端子番号	信号名	
TB1	TEST	
TB2	アキ	
TB3	TEST	
TB4	アキ	
TB5	CH1	
TB6		V+
TB7		I+
TB8		COM
TB9	FG	
TB10	CH2	
TB11		V+
TB12		I+
TB13		COM
TB14	FG	
TB15	CH3	
TB16		V+
TB17		I+
TB18		COM
TB19	FG	
TB20	CH4	
TB21		V+
TB22		I+
TB23		COM
TB24	FG	
TB25	CH5	
TB26		V+
TB27		I+
TB28		COM
TB29	FG	
TB30	CH6	
TB31		V+
TB32		I+
TB33		COM
TB34	FG	
TB35	CH7	
TB36		V+
TB37		I+
TB38		COM
TB39	FG	
TB40	CH8	
TB41		V+
TB42		I+
TB43		COM
TB44	FG	
TB45	アキ	
TB46	A.G.	

端子番号	信号名
TB1	CH1
TB2	V+/I+
TB3	V-/I-
TB4	CH2
TB5	V+/I+
TB6	V-/I-
TB7	CH3
TB8	V+/I+
TB9	V-/I-
TB10	CH4
TB11	V+/I+
TB12	V-/I-
TB13	CH5
TB14	V+/I+
TB15	V-/I-
TB16	CH6
TB17	V+/I+
TB18	V-/I-
TB19	CH7
TB20	V+/I+
TB21	V-/I-
TB22	CH8
TB23	V+/I+
TB24	V-/I-
TB25	A.G.
TB26	FG

iQ-Rシリーズ 端子台

TB2	TB1
TB4	TB3
TB6	TB5
TB8	TB7
TB10	TB9
TB12	TB11
TB14	TB13
TB16	TB15
TB18	TB17

変換アダプタ