


ニューサテライト  
JWシリーズ  
端子台

TB1
TB2
TB3
TB4
TB5
TB6
TB7
TB8
TB9
TB10
TB11
TB12
TB13
TB14
TB15
TB16
TB17
TB18
TB19
TB20



端子番号	信号名
TB1	0A
TB2	1A
TB3	2A
TB4	3A
TB5	4A
TB6	5A
TB7	6A
TB8	7A
TB9	COM.A
TB10	0B
TB11	1B
TB12	2B
TB13	3B
TB14	4B
TB15	5B
TB16	6B
TB17	7B
TB18	COM.B
TB19	アキ
TB20	アキ

ERNT-1JQ13S

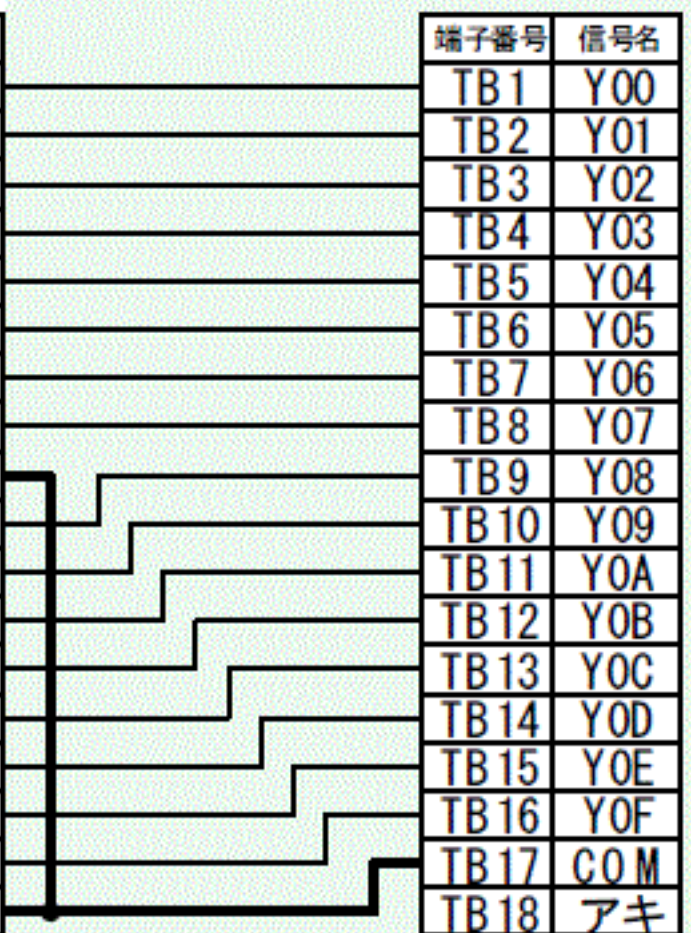

端子番号	信号名
TB1	Y00
TB2	Y01
TB3	Y02
TB4	Y03
TB5	Y04
TB6	Y05
TB7	Y06
TB8	Y07
TB9	Y08
TB10	Y09
TB11	Y0A
TB12	Y0B
TB13	Y0C
TB14	Y0D
TB15	Y0E
TB16	Y0F
TB17	COM
TB18	アキ

MELSEC-Q  
シリーズ  
端子台

TB1
TB2
TB3
TB4
TB5
TB6
TB7
TB8
TB9
TB10
TB11
TB12
TB13
TB14
TB15
TB16
TB17
TB18