




C200H-ID126/C200H-ID130/CQM1-ID13/CQM1-ID214 → QX41/QX41-S1/QX41-S2、  
CQM1-ID112 → QX71の場合

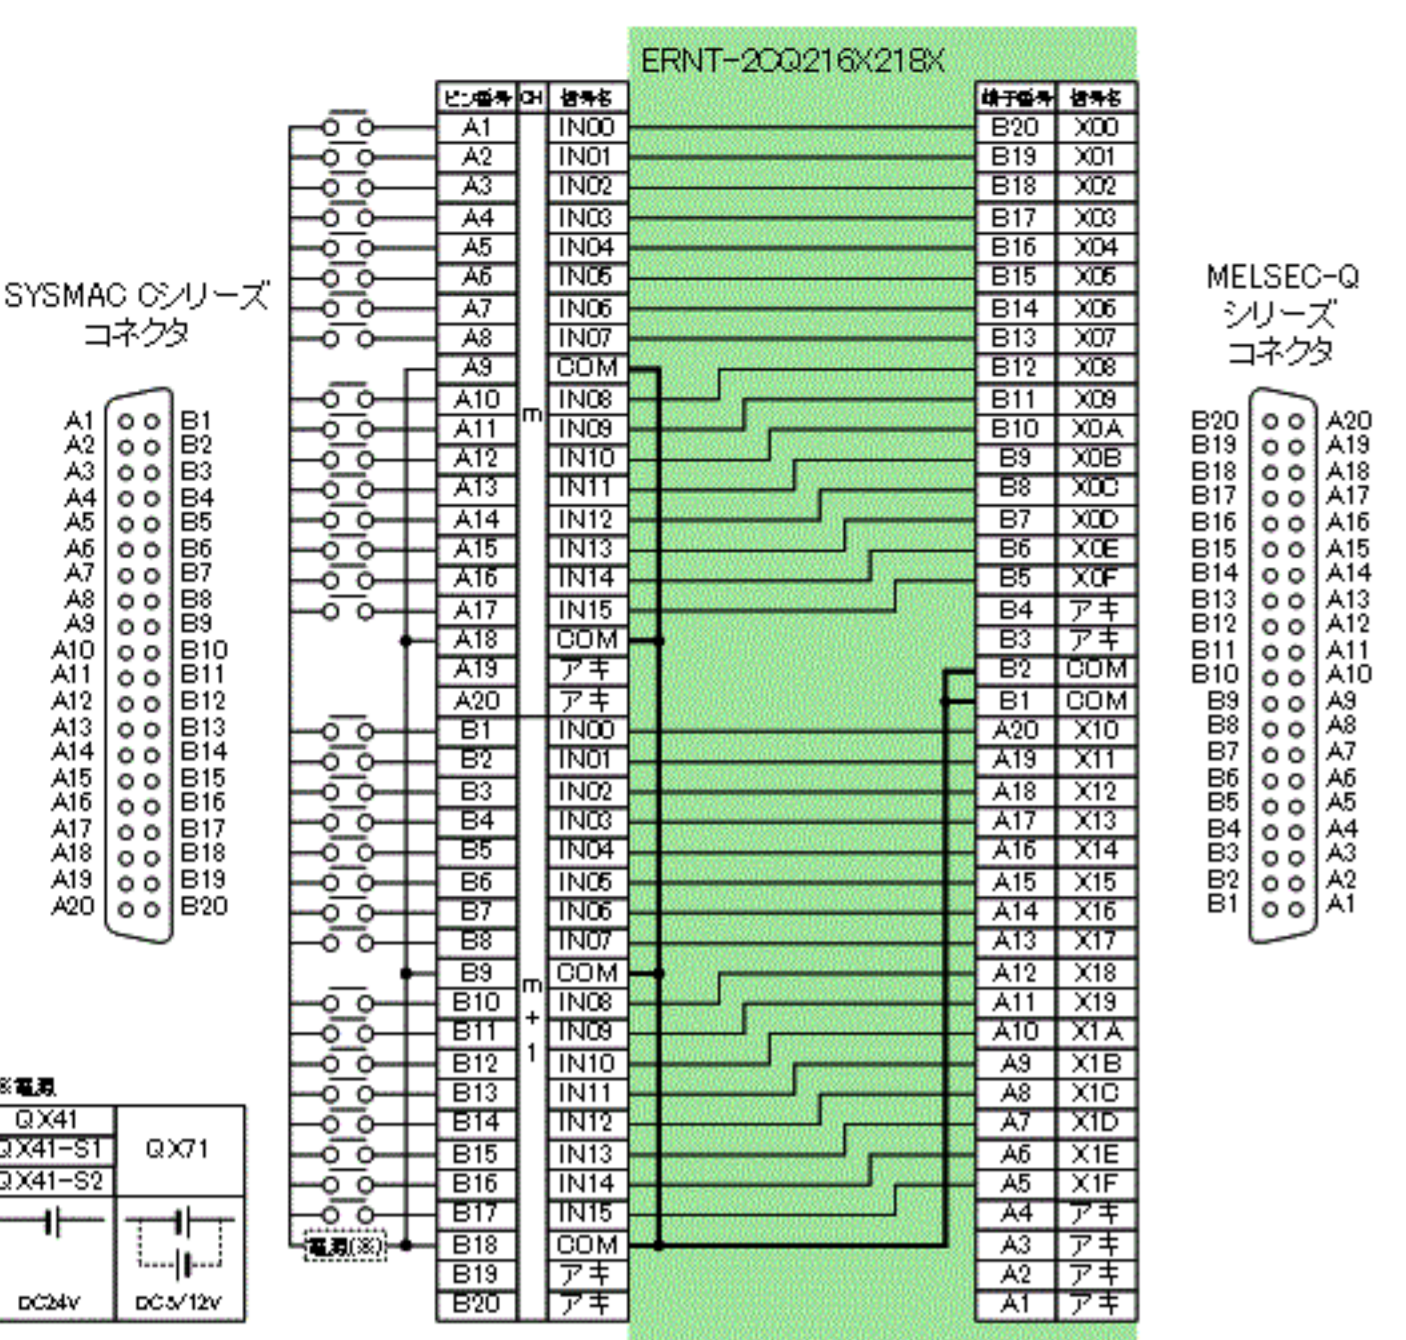




C200H-ID219 → QX41/QX41-S1/QX41-S2 × 2台、  
C200H-ID111 → QX71 × 2台の場合

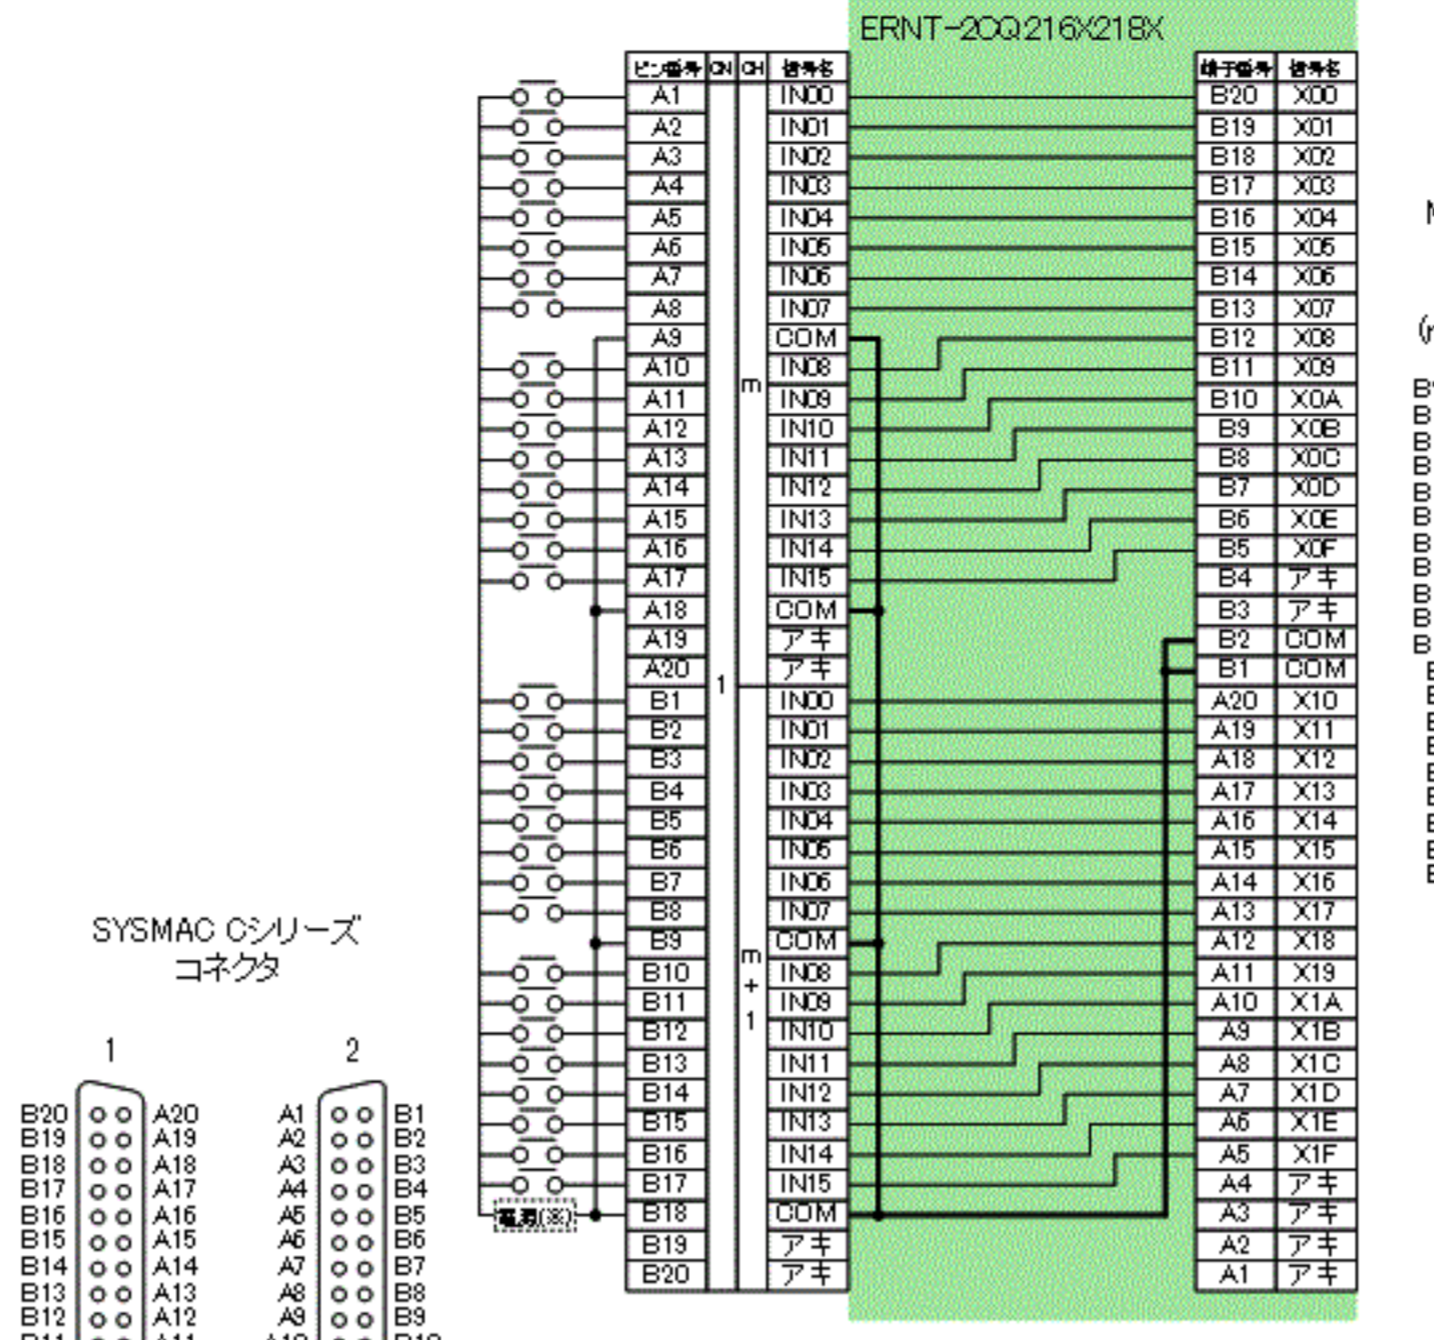

CS1W-ID261 → QX41/QX41-S1/QX41-S2 × 2台の場合

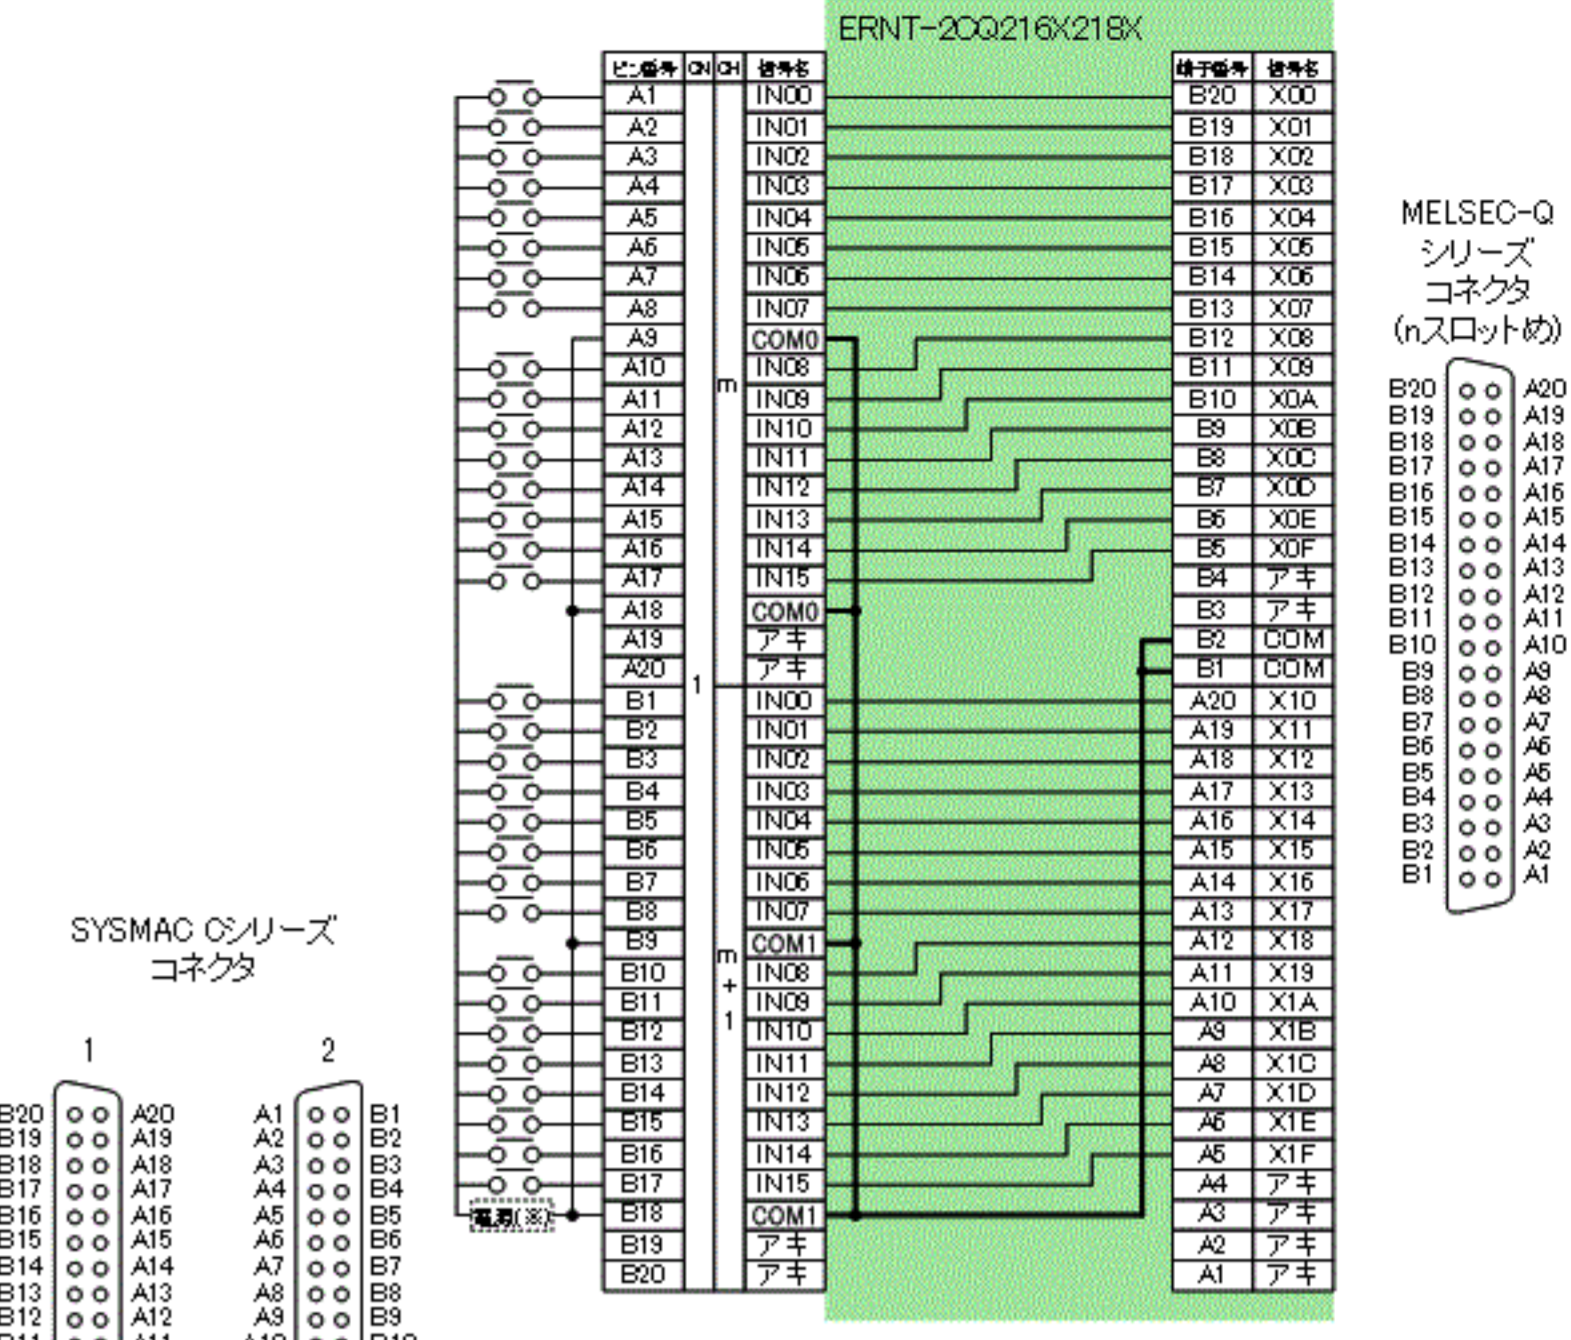

CS1W-MD261(入力部)/CS1W-MD262(入力部) → QX41/QX41-S1/QX41-S2、  
CS1W-MD561(入力部) → QX71の場合

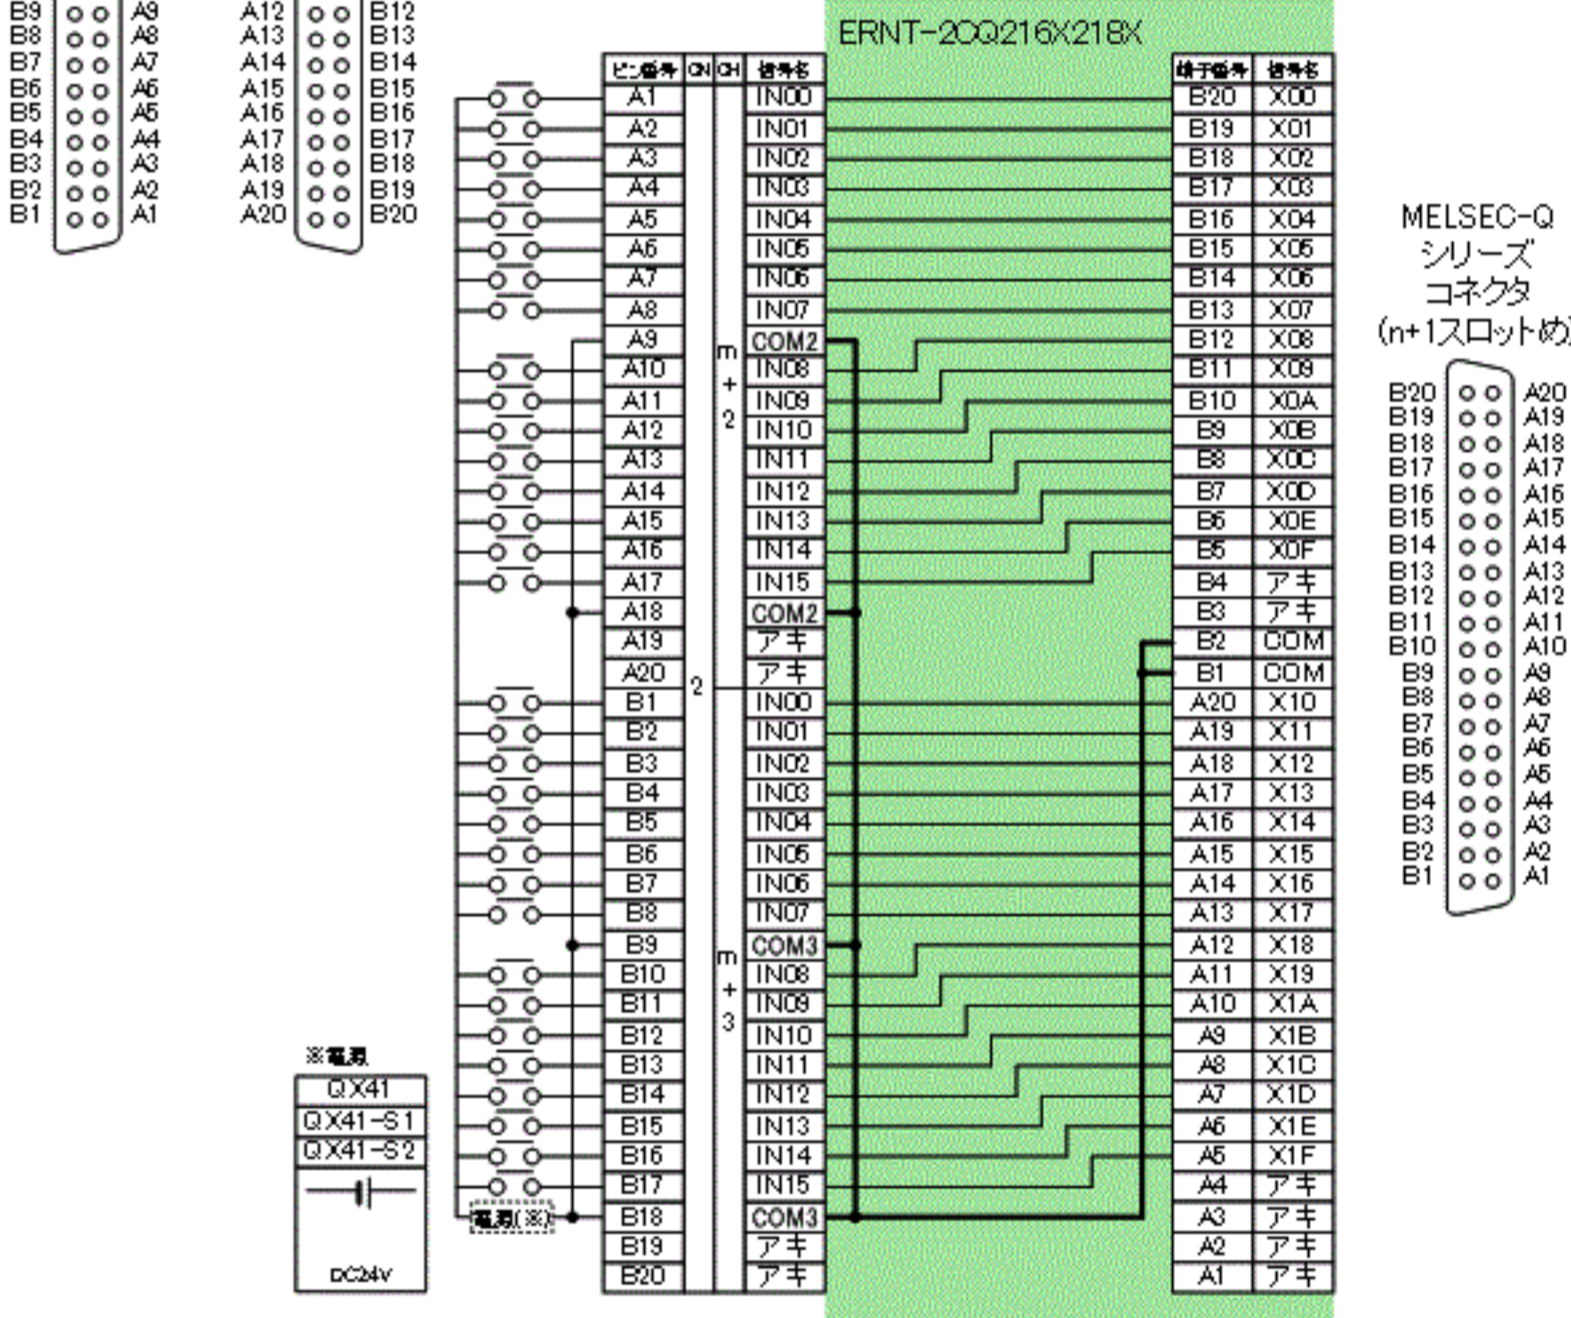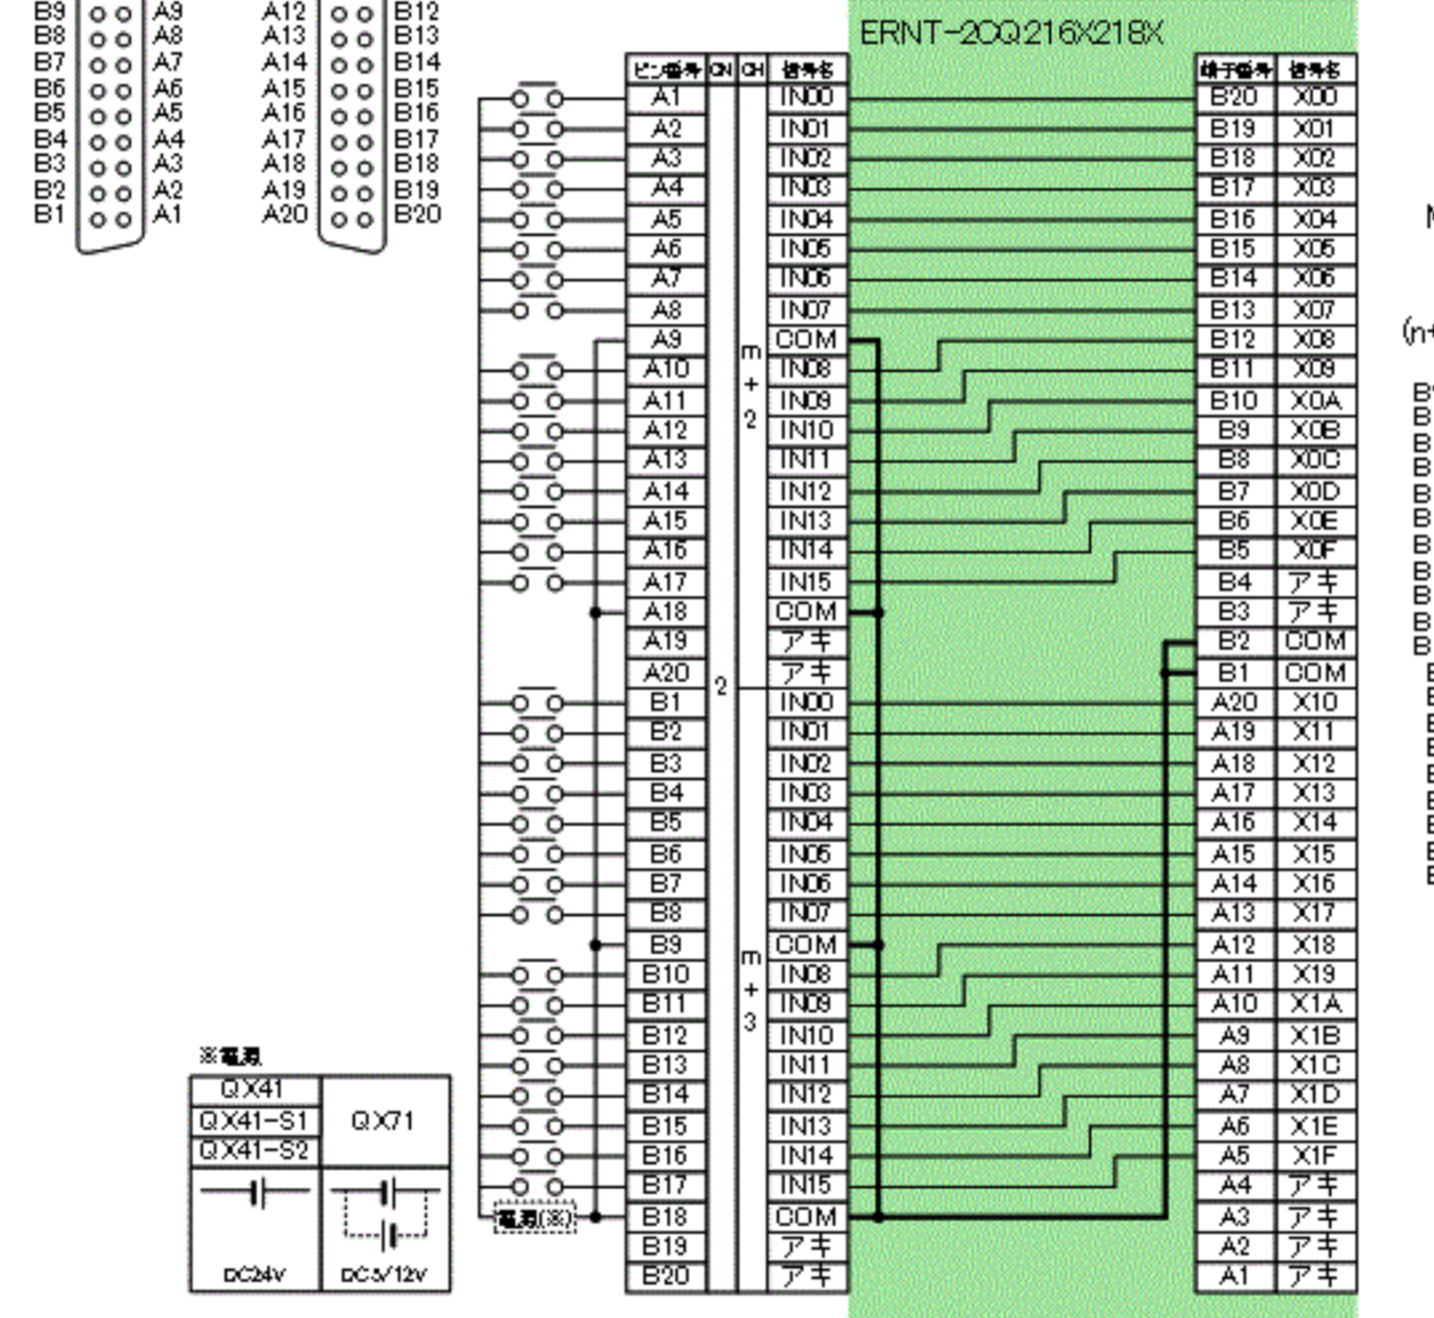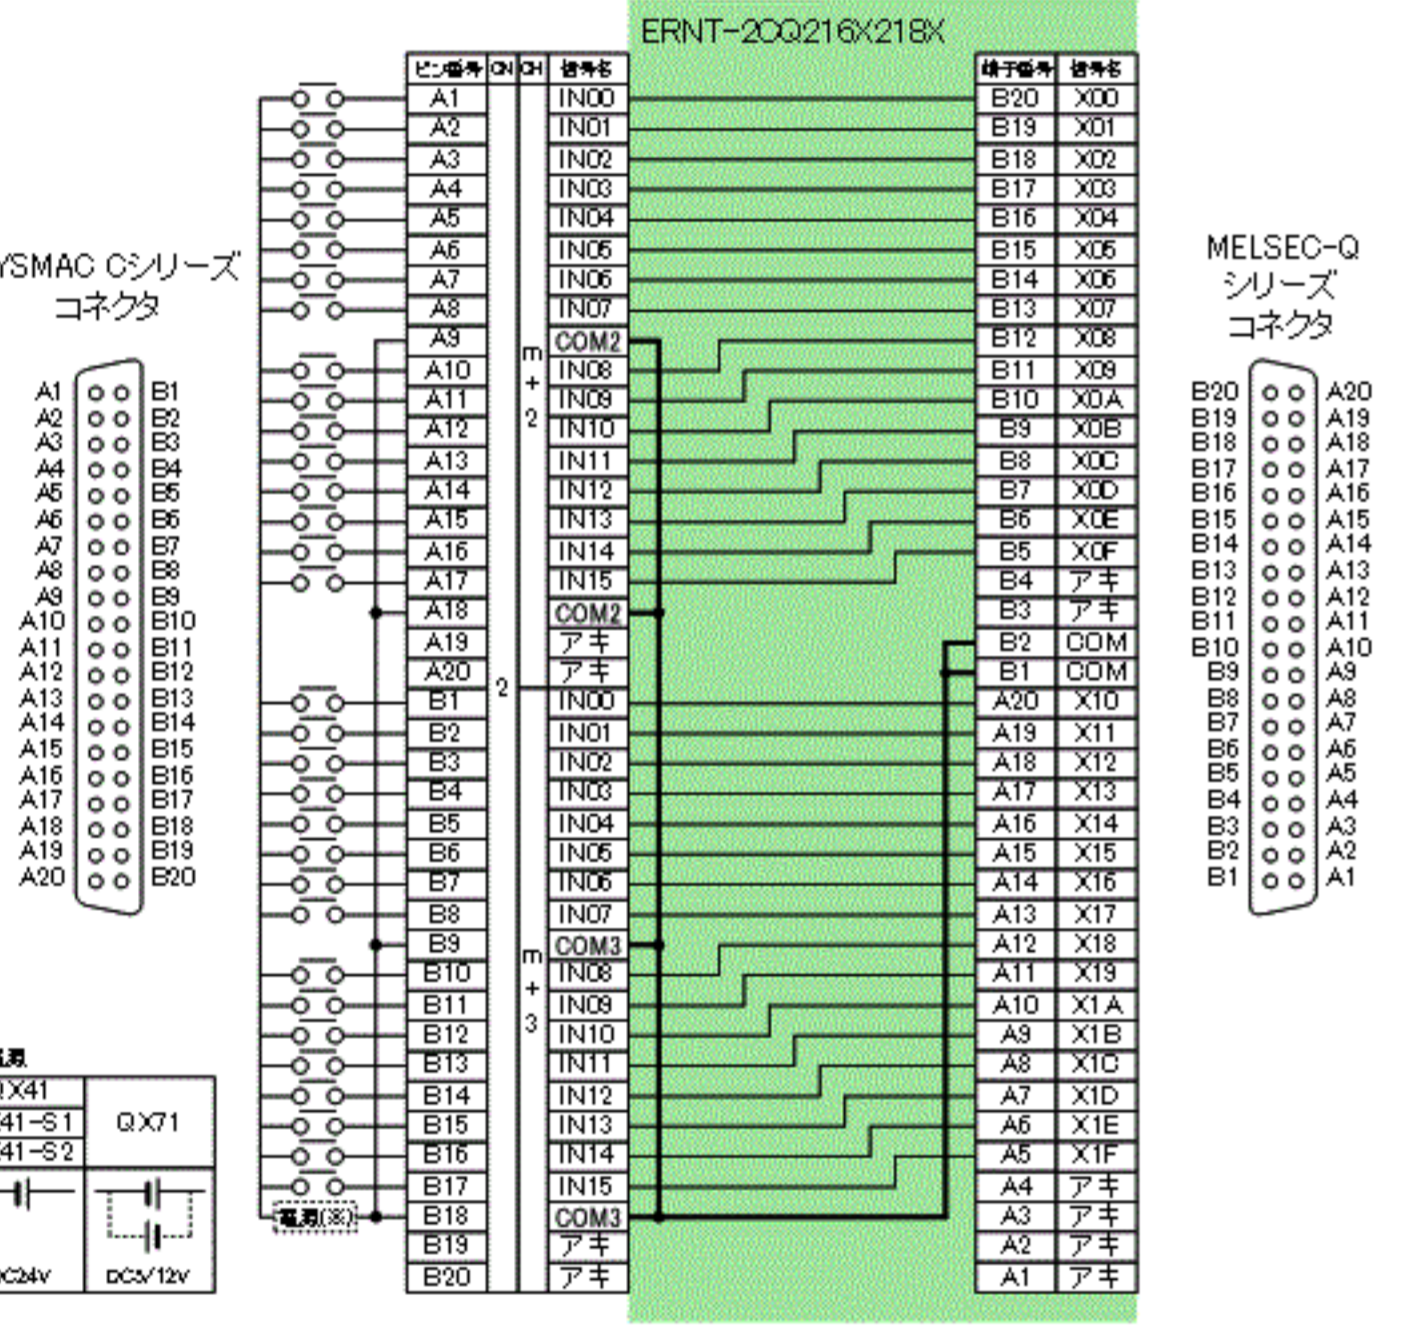

CS1W-ID231 → QX41/QX41-S1/QX41-S2の場合

