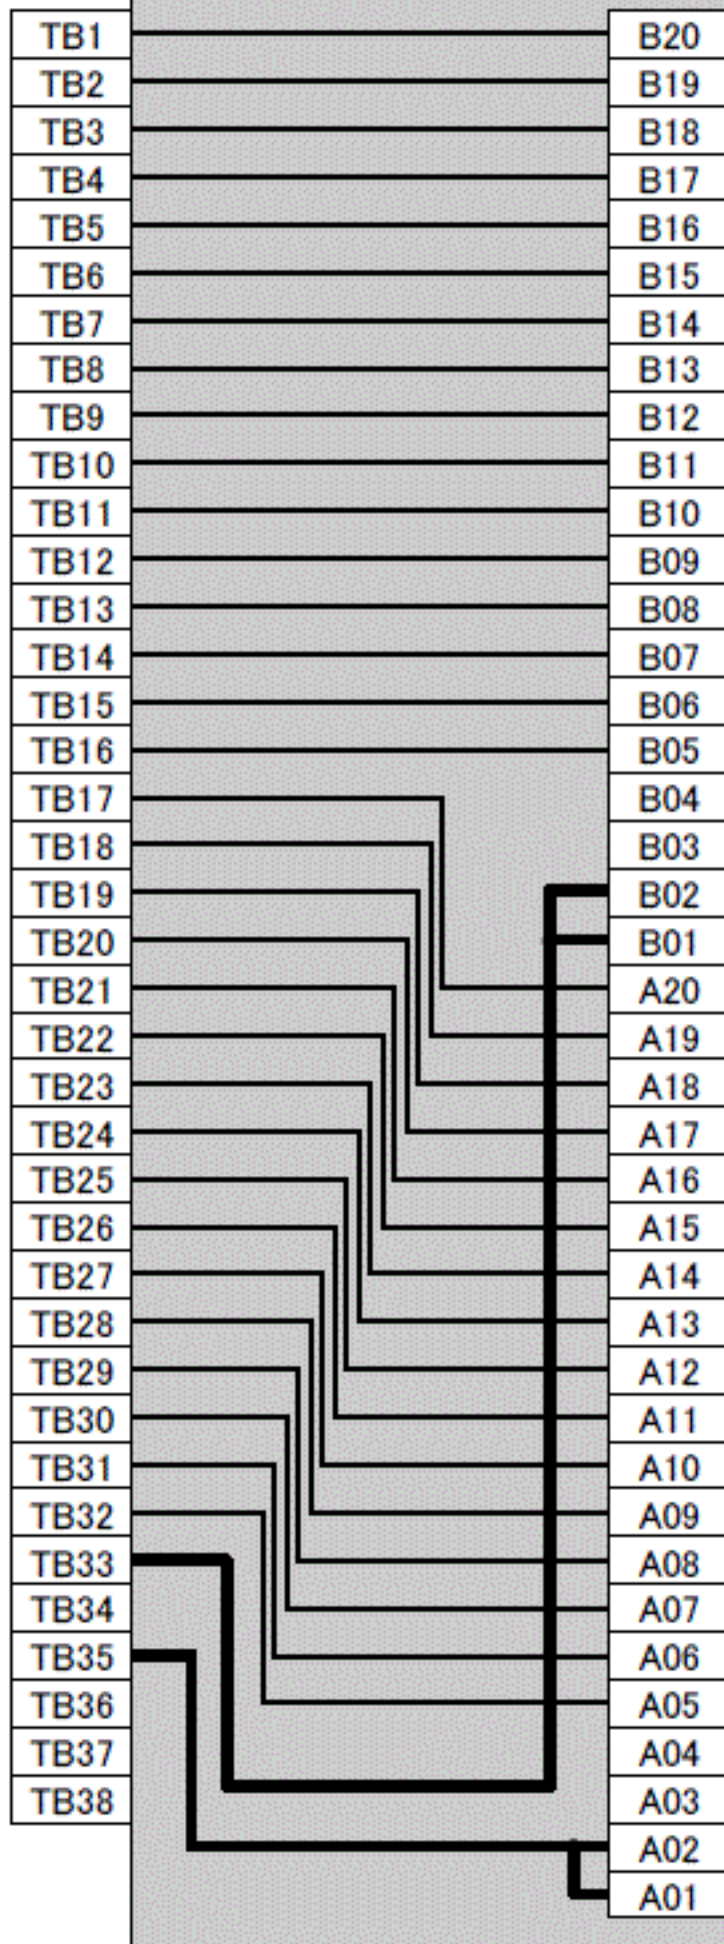


ERNT-AQTB38

端子台

	TB1
TB2	TB3
TB4	TB5
TB6	TB7
TB8	TB9
TB10	TB11
TB12	TB13
TB14	TB15
TB16	TB17
TB18	TB19
TB20	TB21
TB22	TB23
TB24	TB25
TB26	TB27
TB28	TB29
TB30	TB31
TB32	TB33
TB34 アキ	TB35
TB36 アキ	TB37 アキ
TB38 アキ	

MELSEC-Qシリーズ
ユニット

B20	○ ○	A20
B19	○ ○	A19
B18	○ ○	A18
B17	○ ○	A17
B16	○ ○	A16
B15	○ ○	A15
B14	○ ○	A14
B13	○ ○	A13
B12	○ ○	A12
B11	○ ○	A11
B10	○ ○	A10
B9	○ ○	A9
B8	○ ○	A8
B7	○ ○	A7
B6	○ ○	A6
B5	○ ○	A5
B4	○ ○	A4
B3	○ ○	A3
B2	○ ○	A2
B1	○ ○	A1

TB34, TB36-38は
アキ端子です。