


Aシリーズ
端子台

| | |
|------|------|
| TB1 | TB1 |
| TB2 | TB3 |
| TB4 | TB5 |
| TB6 | TB7 |
| TB8 | TB9 |
| TB10 | TB11 |
| TB12 | TB13 |
| TB14 | TB15 |
| TB16 | TB17 |
| TB18 | TB19 |
| TB20 | TB21 |
| TB22 | TB23 |
| TB24 | TB25 |
| TB26 | TB27 |
| TB28 | TB29 |
| TB30 | TB31 |
| TB32 | TB33 |
| TB34 | TB35 |
| TB36 | TB37 |
| TB38 | |

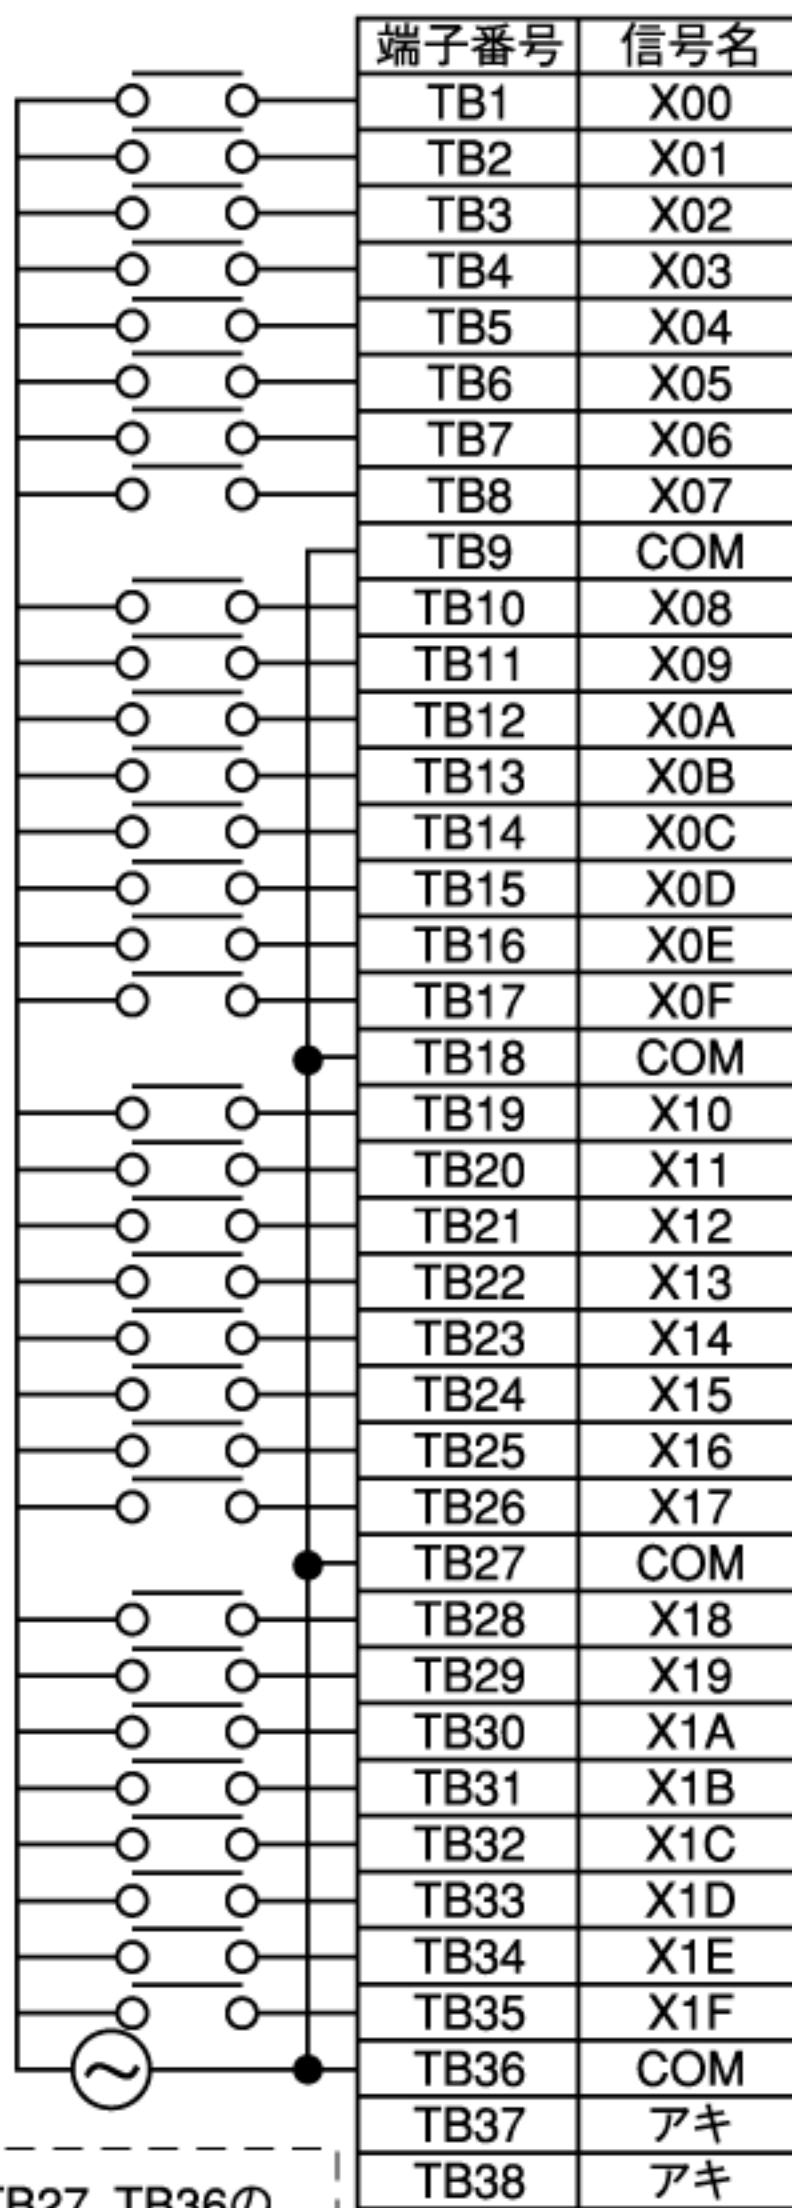

| 端子番号 | 信号名 |
|------|-----|
| TB1 | X00 |
| TB2 | X01 |
| TB3 | X02 |
| TB4 | X03 |
| TB5 | X04 |
| TB6 | X05 |
| TB7 | X06 |
| TB8 | X07 |
| TB9 | X08 |
| TB10 | X09 |
| TB11 | X0A |
| TB12 | X0B |
| TB13 | X0C |
| TB14 | X0D |
| TB15 | X0E |
| TB16 | X0F |
| TB17 | COM |
| TB18 | アキ |

| 端子番号 | 信号名 |
|------|-----|
| TB1 | X10 |
| TB2 | X11 |
| TB3 | X12 |
| TB4 | X13 |
| TB5 | X14 |
| TB6 | X15 |
| TB7 | X16 |
| TB8 | X17 |
| TB9 | X18 |
| TB10 | X19 |
| TB11 | X1A |
| TB12 | X1B |
| TB13 | X1C |
| TB14 | X1D |
| TB15 | X1E |
| TB16 | X1F |
| TB17 | COM |
| TB18 | アキ |

Qシリーズ
端子台
nスロットめ

| | |
|------|------|
| TB1 | TB1 |
| TB2 | TB3 |
| TB4 | TB5 |
| TB6 | TB7 |
| TB8 | TB9 |
| TB10 | TB11 |
| TB12 | TB13 |
| TB14 | TB15 |
| TB16 | TB17 |
| TB18 | |

Qシリーズ
端子台
n+1スロットめ

| | |
|------|------|
| TB1 | TB1 |
| TB2 | TB3 |
| TB4 | TB5 |
| TB6 | TB7 |
| TB8 | TB9 |
| TB10 | TB11 |
| TB12 | TB13 |
| TB14 | TB15 |
| TB16 | TB17 |
| TB18 | |

変換アダプタ

TB9、TB18とTB27、TB36の
COMは必ず配線してください。