


A1SY60  
端子台

TB1	TB1
TB2	TB3
TB4	TB5
TB6	TB7
TB8	TB9
TB10	TB11
TB12	TB13
TB14	TB15
TB16	TB17
TB18	TB19
TB20	

端子番号	信号名
TB1	Y00
TB2	Y01
TB3	Y02
TB4	Y03
TB5	Y04
TB6	Y05
TB7	Y06
TB8	Y07
TB9	DC24V
TB10	COM
TB11	Y08
TB12	Y09
TB13	Y0A
TB14	Y0B
TB15	Y0C
TB16	Y0D
TB17	Y0E
TB18	Y0F
TB19	DC24V
TB20	COM

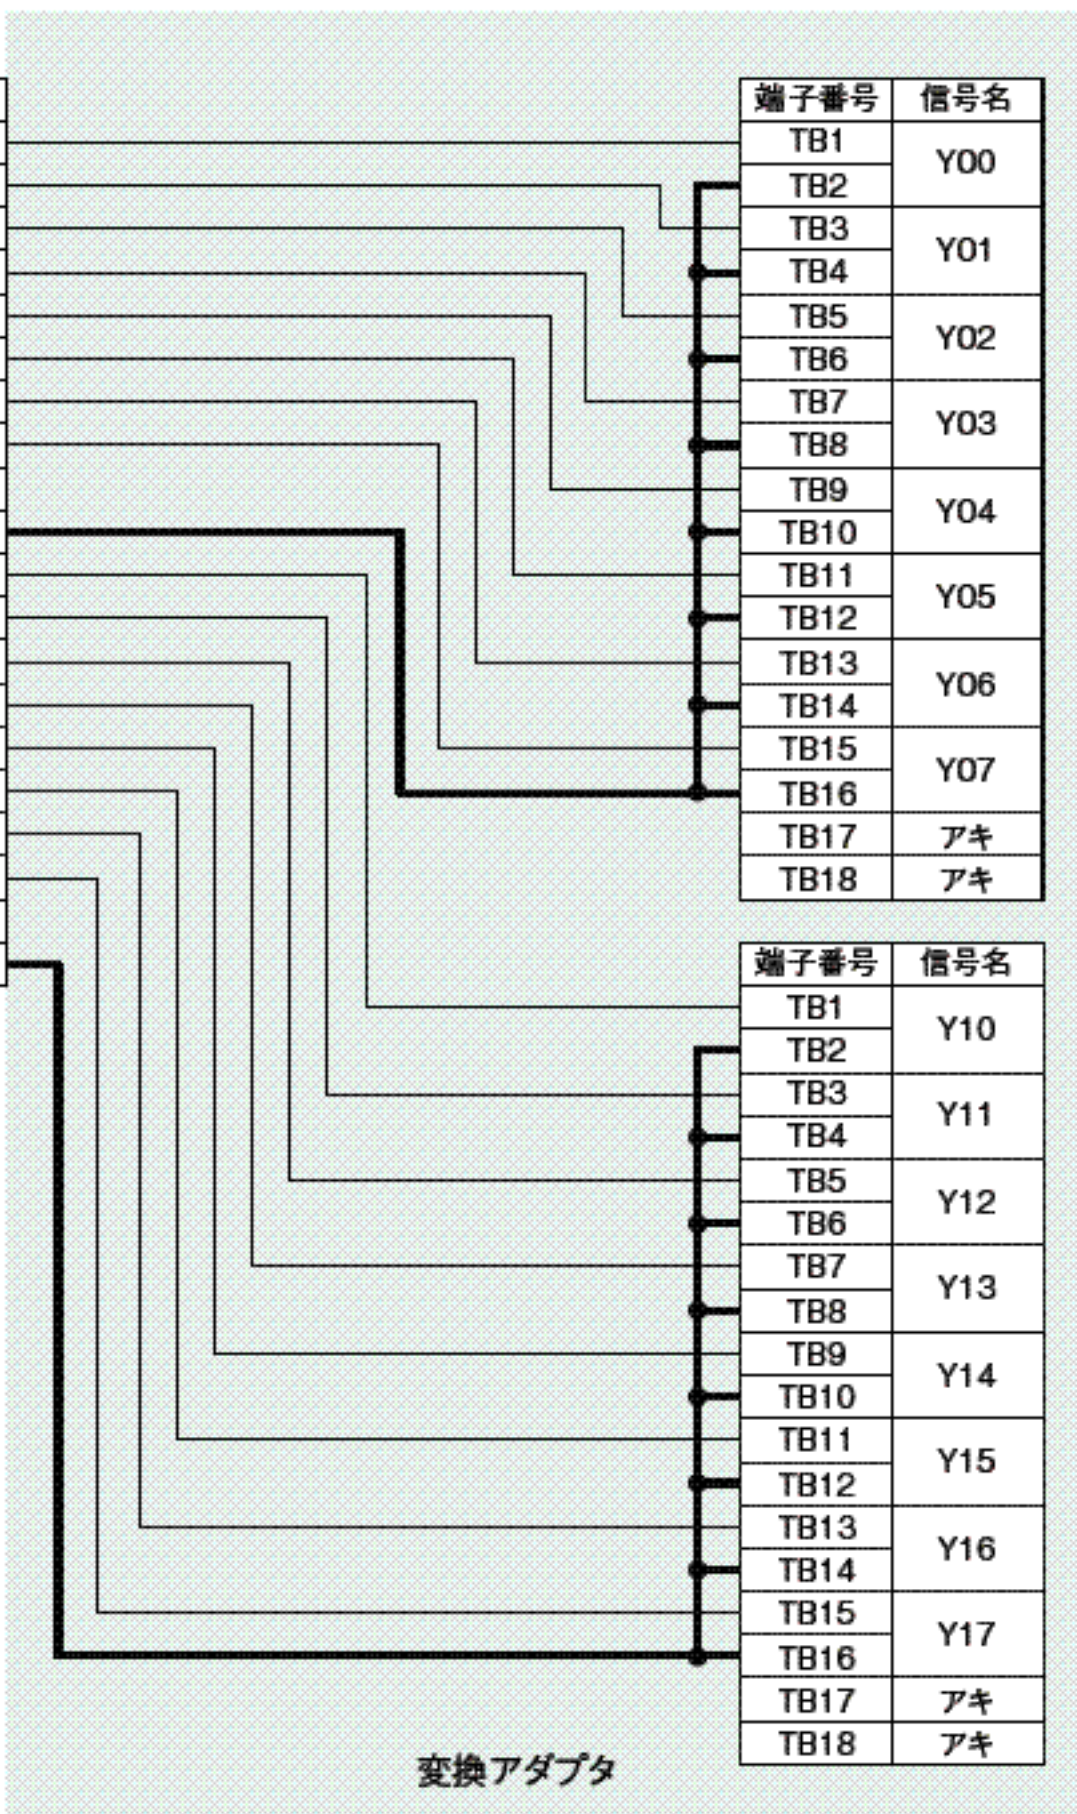

QY68A  
端子台  
nスロットめ

TB1	TB1
TB2	TB3
TB4	TB5
TB6	TB7
TB8	TB9
TB10	TB11
TB12	TB13
TB14	TB15
TB16	TB17
TB18	

QY68A  
端子台  
n+1スロットめ

TB1	TB1
TB2	TB3
TB4	TB5
TB6	TB7
TB8	TB9
TB10	TB11
TB12	TB13
TB14	TB15
TB16	TB17
TB18	

変換アダプタ

(注) 1.MELSEC-AnS側のDC24V端子(TB9、TB19)に接続されていた配線は不要となります。ただし、変換アダプタ内部では未配線状態のため、接続したままの状態でも問題ありません。