

〈Q68ADV、Q68ADI、R60ADV8、R60ADI8接続時〉

端子番号	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
信号名	CH1 V+/I+	CH1 V-/I-	CH2 V+/I+	CH2 V-/I-	CH3 V+/I+	CH3 V-/I-	CH4 V+/I+	CH4 V-/I-	CH5 V+/I+	CH5 V-/I-	CH6 V+/I+	CH6 V-/I-	CH7 V+/I+	CH7 V-/I-	CH8 V+/I+	CH8 V-/I-	NC	NC	NC	NC

〈Q64AD、Q64ADH接続時〉

端子番号	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
信号名	CH1 V+	CH1 V-	CH1 I+	CH1 SLD	CH2 V+	CH2 V-	CH2 I+	CH2 SLD	CH3 V+	CH3 V-	CH3 I+	CH3 SLD	CH4 V+	CH4 V-	CH4 I+	CH4 SLD	NC	NC	NC	NC

〈R60AD4接続時〉

端子番号	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
信号名	CH1 V+	CH1 V-/I-	CH1 I+	CH1 SLD	CH2 V+	CH2 V-/I-	CH2 I+	CH2 SLD	CH3 V+	CH3 V-/I-	CH3 I+	CH3 SLD	CH4 V+	CH4 V-/I-	CH4 I+	CH4 SLD	NC	NC	NC	NC

〈Q68DAVN、Q68DAIN、R60DAV8、R60DAI8接続時〉

端子番号	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
信号名	CH1 V+/I+	CH1 COM	CH2 V+/I+	CH2 COM	CH3 V+/I+	CH3 COM	CH4 V+/I+	CH4 COM	CH5 V+/I+	CH5 COM	CH6 V+/I+	CH6 COM	CH7 V+/I+	CH7 COM	CH8 V+/I+	CH8 COM	24V	24G	NC	NC

〈Q64DAN、Q64DAH、R60DA4接続時〉

端子番号	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
信号名	CH1 V+	CH1 COM	CH1 I+	NC	CH2 V+	CH2 COM	CH2 I+	NC	CH3 V+	CH3 COM	CH3 I+	NC	CH4 V+	CH4 COM	CH4 I+	24V	24G	NC	NC	NC

〈Q62DAN接続時〉

端子番号	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
信号名	CH1 V+	CH1 COM	CH1 I+	NC	CH2 V+	CH2 COM	CH2 I+	NC	NC	NC	NC	NC	NC	NC	NC	24V	24G	NC	NC	NC