 


Q64TD、Q64TDV-GH接続時

端子番号	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
信号名	NC	RTD +	NC	RTD -	NC	SLD	SLD	CH1 +	CH2 +	CH1 -	CH2 -	CH3 +	CH4 +	CH3 -	CH4 -	SLD	SLD	NC	NC	NC



A1S68TD接続時

端子番号	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
信号名	CH1 +	RTD +	CH1 -	RTD -	CH2 +	CH3 +	CH2 -	CH3 -	CH4 +	CH5 +	CH4 -	CH5 -	CH6 +	CH7 +	CH6 -	CH7 -	CH8 +	SLD	CH8 -	SLD

