

• QD62 • QD62E	端子番号	1	3	5	7	9	11	13	15	17	19	21	23	25	27	29	31	33	35	37	39
	信号名	CH1 φA(12V)	CH1 ABCOM	CH1 φB(12V)	CH1 PRST(24V)	CH1 PRST(5V)	CH1 FUNC(24V)	CH1 FUNC(5V)	CH2 φA(12V)	CH2 ABCOM	CH2 φB(12V)	CH2 PRST(24V)	CH2 PRST(5V)	CH2 FUNC(24V)	CH2 FUNC(5V)	CH1 EQU2	CH2 EQU2	NC	NC	12/24V	12/24V
	端子番号	2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	38	40
	信号名	CH1 φA(24V)	CH1 φA(5V)	CH1 φB(24V)	CH1 φB(5V)	CH1 PRST(12V)	CH1 CTRLCOM	CH1 FUNC(12V)	CH2 φA(24V)	CH2 φA(5V)	CH2 φB(24V)	CH2 φB(5V)	CH2 PRST(12V)	CH2 CTRLCOM	CH2 FUNC(12V)	CH1 EQU1	CH2 EQU1	NC	NC	0V	0V

• QD62D	端子番号	1	3	5	7	9	11	13	15	17	19	21	23	25	27	29	31	33	35	37	39
	信号名	CH1 φA	CH1 φB	CH1 PRST(12V)	CH1 PRSTCOM	CH1 FUNC(12V)	CH1 FUNCCOM	CH2 φA	CH2 φB	CH2 PRST(12V)	CH2 PRSTCOM	CH2 FUNC(12V)	CH2 FUNCCOM	NC	NC	CH1 EQU2	CH2 EQU2	NC	NC	12/24V	12/24V
	端子番号	2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	38	40
	信号名	CH1 φA	CH1 φB	CH1 PRST(24V)	CH1 PRST(5V)	CH1 FUNC(24V)	CH1 FUNC(5V)	CH2 φA	CH2 φB	CH2 PRST(24V)	CH2 PRST(5V)	CH2 FUNC(24V)	CH2 FUNC(5V)	NC	NC	CH1 EQU1	CH2 EQU1	NC	NC	0V	0V