

Mitsubishi Electric Programmable Controller Upgrade Tool

Conversion Adapter

Model
ERNT-ASLCXY81



User's Manual

50CM-D180167-E(2006)

MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED

HEAD OFFICE:Hulic KUDAN BLDG.1-13-5, KUDANKITA CHIYODA-KU, TOKYO 102-0073, JAPAN
NAGOYA ENGINEERING OFFICE:139 SHIMOYASHIKICHO-SHIMOYASHIKI, KASUGAI, AICHI 486-0906, JAPAN

SAFETY PRECAUTIONS

(Always read these precautions prior to use.)

Before using this product, please read this manual carefully and pay full attention to safety to ensure that the product is used correctly.

The precautions presented in this manual are concerned with this product only. For Programmable Controller system safety precautions, refer to the following manuals.

- MELSEC-L series: MELSEC-L CPU Module User's Manual(SH-080890ENG)
- MELSEC iQ-R series: Safety Guidelines (IB-0800525E)

In this manual, the safety precautions are ranked as "WARNING" and "CAUTION."

	WARNING	Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.
	CAUTION	Indicates that incorrect handling may cause hazardous conditions, resulting in medium or minor injury and/or property damage.

Note that failure to observe the CAUTION level instructions may lead to a serious consequence according to the circumstances. Always follow the precautions of both levels because they are important to personal safety. Please keep this manual in an easy-to-access location for future reference, and be sure to provide the manual to the end user.

Precautions before using

CAUTION

- When making a switch from the MELSEC-AnS Series to the MELSEC-L Series or MELSEC iQ-R Series, be sure to consult the user's manual supplied with the Programmable Controller module under the latter series to confirm differences in various aspects including performance, function, CPU input/output signals and buffer memory addresses between the two series.

Installation Precautions

CAUTION

- Use the Conversion Adapter in the environmental conditions that are specified in the general specification in the following manuals. If the Products are used in any environment beyond the bounds of the general specification, electric shock, fire, malfunction, or damage to or degradation of the Products will result.
 - MELSEC-L series: MELSEC-L CPU Module User's Manual (SH-080890ENG)
 - MELSEC iQ-R series: Safety Guidelines (IB-0800525E)
- Do not directly touch any conductive parts of Conversion Adapter. Contact will cause malfunction or failure in the system.
- Fasten the Conversion Adapter and the Mounting Bracket securely with retaining screws, and tighten the screws by applying torque within specified limits. Loose screws can lead to the dropping of the Conversion Adapter or Mounting Bracket, possibly causing breakage thereof. Excessive tightness of the screws can lead to breakage of the screws, Conversion Adapter, Mounting Bracket, or Programmable Controller Module, possibly causing the dropping, shorting, and malfunction thereof.
- Always check for correct match between MELSEC-L Series or MELSEC iQ-R Series and the Conversion Adapter. Incorrect match can cause damage to the Programmable Controller module.
- When installing the Conversion Adapter, take care not to get your hand snagged on the Mounting Bracket or the like. Injury may result.
- When installing or removing the MELSEC-L Series or MELSEC iQ-R Series Module complete with a Converter Adapter, be sure to hold it with both hands. Dropping may lead to breakage.

Wiring Precautions

WARNING

- Before attempting to install the Unit or carry out the necessary wiring, make certain that the external power supply, used in the system, is shut off on all three phases. Failure to do so may result in electric shock or damage to the product.

CAUTION

- Carry out wiring for the Conversion Adapter correctly after checking the specification and terminal arrangement for the module used. Connecting a power supply with a different voltage rating or incorrect wiring may cause a fire or failure.
- Tighten the MELSEC-AnS Series connector installation screws securely by applying torque within the specified limits. Loose screws will cause short circuit, fire or malfunction. Excessive tightening will damage the screws or the Conversion Adapter which in turn will cause dropping of parts, short circuit or malfunction.
- Use care to prevent foreign materials including cuttings and wiring debris from entering the Conversion Adapter or the Programmable Controller module. These will be cause for fire, failure or malfunction.

Startup and Maintenance Precautions

WARNING

- Shut off the external power supply for the system in all phases before cleaning. Failure to do so may result in electric shock or cause the Programmable Controller module to fail or malfunction. Loose screws can lead to dropping, shorting, and malfunction. Excessive tightness of the screws can lead to breakage of the screws, Conversion Adapter, Mounting Bracket, or Programmable Controller Module, possibly causing the dropping, shorting, and malfunction thereof.

CAUTION

- Do not modify the Conversion Adapter or take it apart. Doing so will cause failure, malfunction, personal injury, or fire.
- Do not drop the Conversion Adapter and Mounting Bracket or do not give a strong impact to it. This will cause damage.

Disposal Precautions

CAUTION

- When disposing of the product, treat it as industrial waste.

EMC AND LOW VOLTAGE DIRECTIVES

Compliance to the EMC Directive, which is one of the EU Directives, has been a legal obligation for the products sold in European countries since 1996 as well as the Low Voltage Directive since 1997. Manufacturers who recognize their products are compliant to the EMC and Low Voltage Directives are required to declare that print a "CE mark" on their products.

Authorized representative in Europe

Authorized representative in Europe is shown below.
Name: Mitsubishi Electric Europe B.V.
Address: Mitsubishi-Electric-Platz 1, 40882 Ratingen, Germany

1. Overview

This manual describes specifications, handling and other information about the Conversion Adapter "ERNT-ASLCXY81" available as Renewal Tools for the Mitsubishi Electric Programmable Controller. The Conversion Adapter is a product for effecting conversion to transcend difference in pin assignment between the MELSEC-AnS Series (hereinafter called AnS Series) and the MELSEC-L Series (hereinafter called L Series) or MELSEC iQ-R Series (hereinafter called iQ-R Series). Before attempting to make a switch from the AnS Series to the L Series or iQ-R Series in your installation, consult the user's manual supplied with the Programmable Controller module under the latter series to learn about how they differ in various aspects including performance and function.

Once you have opened the packaging, verify that it contains the following products.

Product	Shape	Quantity
Conversion Adapter		1
Mounting bracket		1
Mounting bracket fixing screws (M3.5 x 6)		2
This manual	—	1

2. General Specifications

Item	Specifications	
Operating ambient temperature	0 to 55°C(Maximum surrounding air temperature 55°C)	
Storage ambient temperature	-25 to 75°C	
Operating ambient humidity	5 to 95%RH, non-condensing	
Storage ambient humidity		
Vibration resistance	Compliant with JIS B 3502 and IEC 61131-2	
	Under intermittent vibration	Frequency: 5 to 8.4Hz, Constant acceleration: —, Half amplitude: 3.5mm, Sweep count: 10 times each in X, Y, Z directions
	Under continuous vibration	Frequency: 5 to 8.4Hz, Constant acceleration: —, Half amplitude: 1.75mm, Sweep count: —
	Under intermittent vibration	Frequency: 8.4 to 150Hz, Constant acceleration: 9.8m/s ² , Half amplitude: —, Sweep count: —
Shock resistance	Compliant with JIS B 3502 and IEC 61131-2 (147 m/s ² , 3 times each in 3 directions X, Y, Z)	
Operating atmosphere	No corrosive gases	
Operating altitude *1	0 to 2000m	
Installation location	Inside a control panel	
Overvoltage category *2	II or less	
Pollution degree *3	2	


*1 : Do not use or store under pressure higher than the atmospheric pressure of altitude 0m.
*2 : This indicates the section of the power supply to which the equipment is assumed to be connected between the public electrical power distribution network and the machinery within premises. Category II applies to equipment for which electrical power is supplied from fixed facilities.
*3 : This index indicates the degree to which conductive material is generated in terms of the environment in which the equipment is used. Pollution level 2 is when only non-conductive pollution occurs. A temporary conductivity caused by condensing must be expected occasionally.

3. Product Specifications


For detail specifications which do not appear in the specification comparison charts contained herein, see the user's manual supplied with the L Series or iQ-R Series module you use. Those parts of the specification that differ between the AnS Series and the L Series or iQ-R Series are where a switch from the first series to the second is subjected to specification-related restrictions. Check the specification of the devices to be connected for more details. Furthermore, it is recommended to refer to the "Transition from MELSEC-AnS/QnAS (Small Type) Series to L Series Handbook (Fundamentals): L (NA)-08258ENG" issued by Mitsubishi Electric.

Conversion Adapter Model	No. of modules	Before replacement AnS Series Module Model	No. of Input/output points	After replacement			Conversion Adapter Weight (g)	
				L Series Module Model	No. of modules	iQ-R Series Module Model		No. of modules
ERNT-ASLCXY81	1	A1SX81 A1SX81-S2	32	LX41C4	1	RX41C4 RX61C6HS	1	95
		A1SY81 A1SY81EP		LY41PT1P		RY41PT1P		
2	64	AX82	No products available	—	2	RX41C4, RX41C6HS RY41PT1P		
		AY82EP						

(1) In the case of A1SX81/A1SX81-S2 → LX41C4 or RX41C4/ RX41C6HS

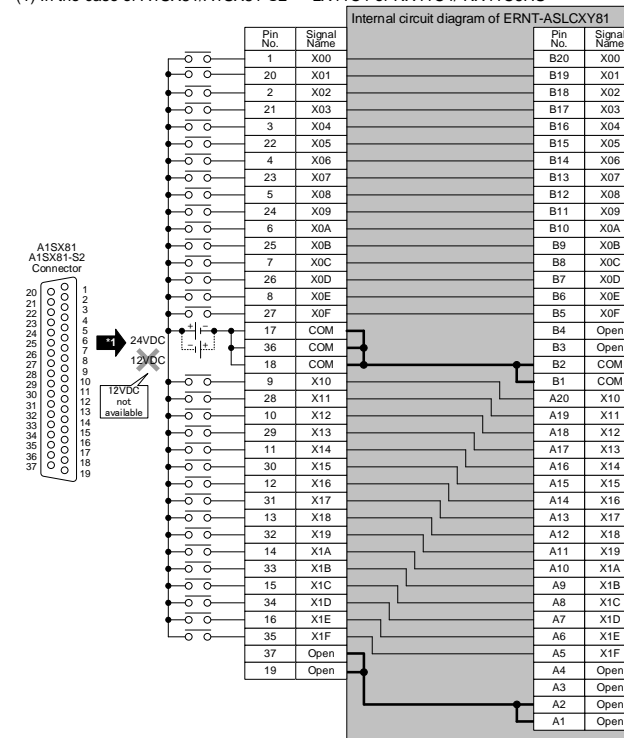


(2) In the case of A1SY81/A1SY81EP → LY41PT1P or RY41PT1P

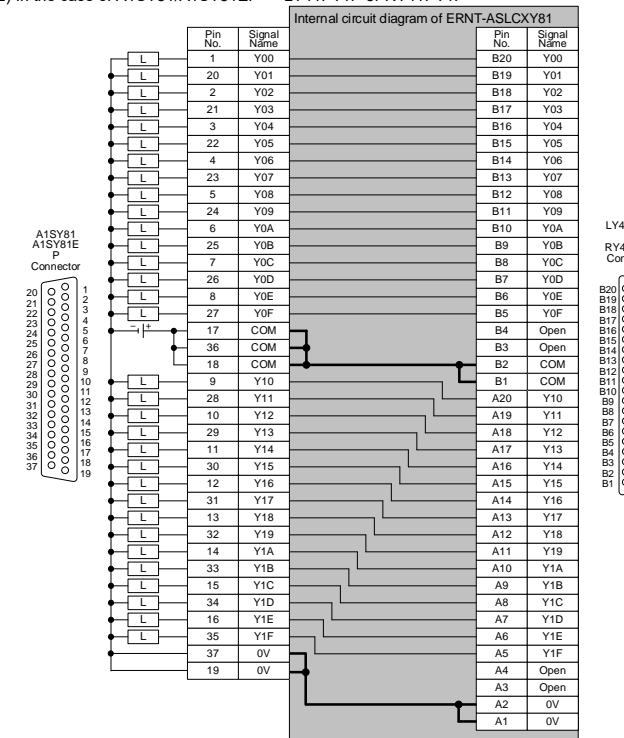




Precautions for wiring

If your system is set to run on a rated input voltage of 12VDC when you make a switch from A1SX81 to LX41C4 or RX41C4/ RX41C6HS, it must be reset to run on 24VDC.

(3) In the case of AX82 → RX41C4/ RX41C6HS x2

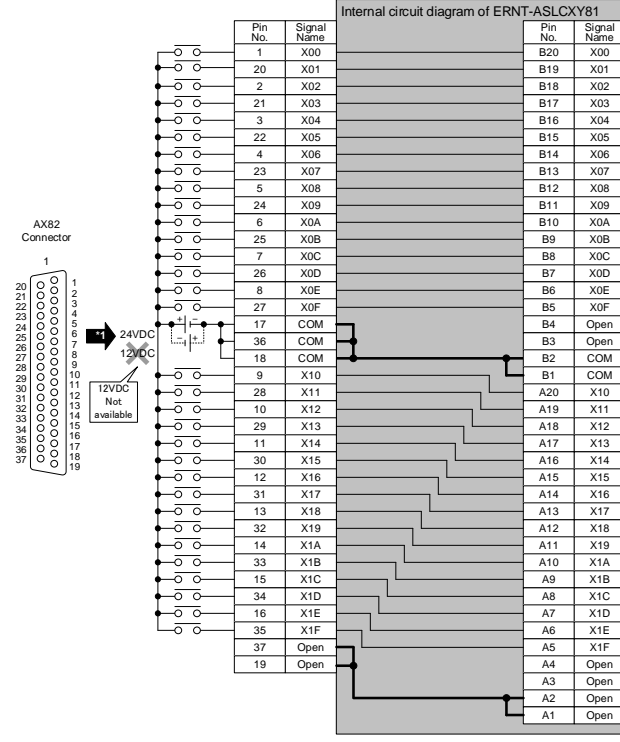

(4) In the case of AY82EP → RY41PT1P x2

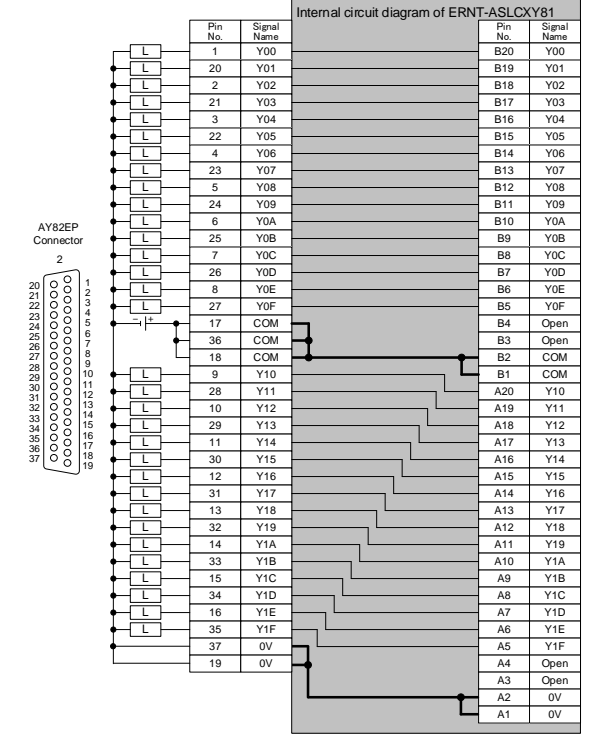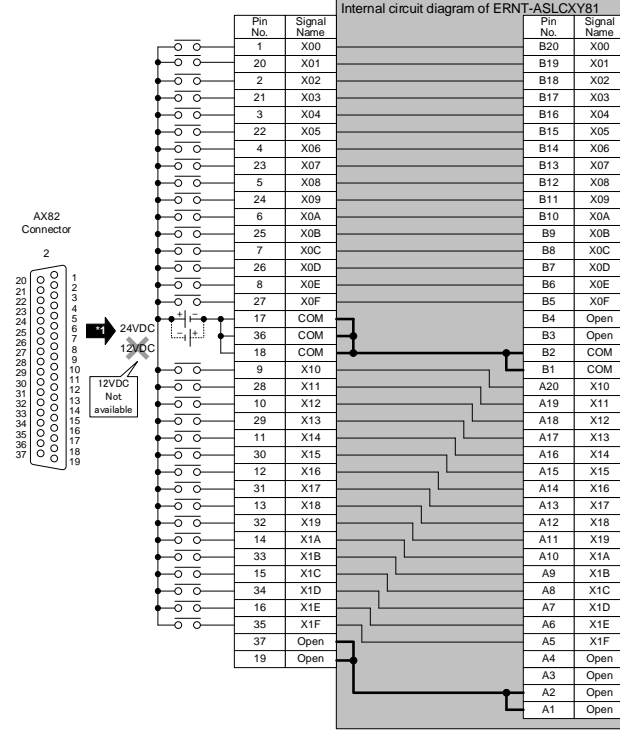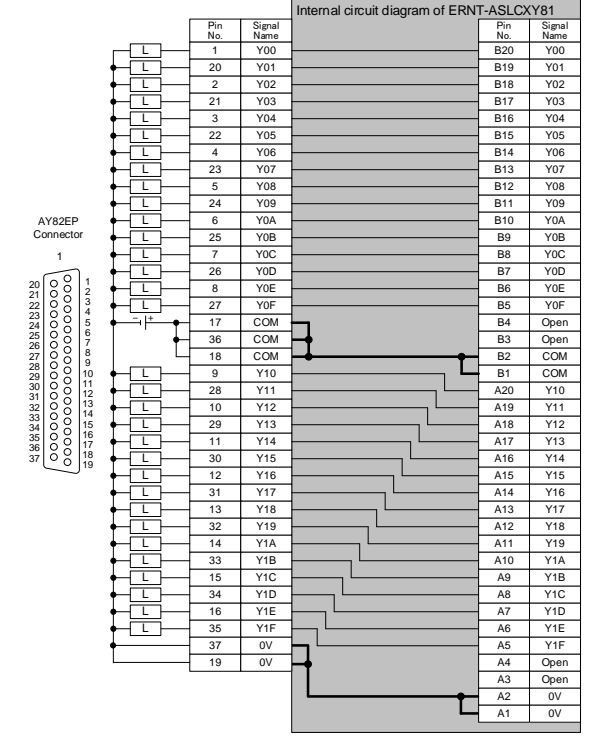

< Specification Comparison >

(1) In the case of A1SX81/A1SX81-S2 → LX41C4 or RX41C4

Model	A Series		AnS Series		L Series	iQ-R Series	
	AX82 (Source available)	A1SX81 (Sink/Source available)	A1SX81-S2 (Sink/Source available)	LX41C4 (Positive common/ Negative common available)	RX41C4 (Positive common/ Negative common available)	RX41C6HS (Positive common/ Negative common available)	
Specifications	AX82 (Source available)		A1SX81 (Sink/Source available)		LX41C4 (Positive common/ Negative common available)	RX41C4 (Positive common/ Negative common available)	RX41C6HS (Positive common/ Negative common available)
No. of input points	64 points		32 points		32 points	32 points	32 points
Isolation method	Photocoupler isolation		Photocoupler isolation		Photocoupler isolation	Photocoupler isolation	Photocoupler isolation
Rated input voltage	12VDC	24VDC	12VDC	24VDC	24VDC	24VDC	24VDC
Rated input current	3mA	7mA	Approx.3mA	Approx.7mA	Approx.7mA	4mA TYP.	4mA TYP. (at 24VDC)
ON voltage /ON current	9.5VDC or higher /2.6mA or higher	8VDC or higher /2mA or higher	8VDC or higher /2mA or higher	13VDC or higher /3.5mA or higher	19VDC or higher /3mA or higher	19VDC or higher /3mA or higher	19VDC or higher /4mA or higher
OFF voltage /OFF current	6VDC or lower /1mA or lower	4VDC or lower /1mA or lower	4VDC or lower /1mA or lower	6VDC or lower /1.7mA or lower	9VDC or lower /1.7mA or lower	6VDC or lower /1.0mA or lower	6VDC or lower /1.7mA or lower
Input resistance	Approx. 3.4kΩ		Approx. 3.3kΩ		Approx. 3.3kΩ	5.7kΩ	4kΩ
Response time	OFF to ON 10ms or less	10ms or less	10ms or less (24VDC)	10ms or less	10ms or less	1/5/10/20/70ms or less	0.1/0.2/0.4/0.6/1/5/10/20/70ms or less
ON to OFF	10ms or less	10ms or less	10ms or less (24VDC)	10ms or less	10ms or less	1/5/10/20/70ms or less	0.1/0.2/0.4/0.6/1/5/10/20/70ms or less
Internal current consumption	120mA (TYP. all points ON)		80mA (TYP. all points ON)		80mA (TYP. all points ON)	100mA (TYP. all points ON)	150mA (TYP. all points ON)
Wiring method for common	32 points, 1 common		32 points, 1 common		32 points, 1 common	32 points, 1 common	32 points, 1 common
External connection system	37-pin D sub Connector x2		37-pin D sub connector		37-pin D sub connector	40-pin connector	40-pin connector

Make sure the section of the above table meets the specification of the machines and equipment connected to the L Series or iQ-R Series module.
 *1: When replacing A1SX81 with LX41C4 or RX41C4/ RX41C6HS with a rated input voltage of 12V DC, the rated input voltage must be changed to 24V DC.
 *2: To replace the AX82 → RX41C4/ RX41C6HS, two sets of the RX41C4 or RX41C6HS and the Conversion Adapter(ERNT-ASLXCY81) are required (32 points for each set).

(2) In the case of A1SY81/A1SY81EP → LY41PT1P or RY41PT1P

Model	A Series	AnS Series		L Series	iQ-R Series
	AY82EP (Source type)	A1SY81 (Source type)	A1SY81EP (Source type)	LY41PT1P (Source type)	RY41PT1P (Source type)
Specifications	AY82EP (Source type)	A1SY81 (Source type)	A1SY81EP (Source type)	LY41PT1P (Source type)	RY41PT1P (Source type)
No. of output points	64 points	32 points	32 points	32 points	32 points
Isolation method	Photocoupler isolation		Photocoupler isolation	Photocoupler isolation	Photocoupler isolation
Rated load voltage	12/24VDC		12/24VDC	10.2 to 28.8VDC	12/24VDC (allowable voltage range: 10.2 to 28.8VDC)
Maximum load current	0.1A/point (0.04A/point (60%ON, 55°C))	0.1A/point 2A/common	0.1A/point, 2A/common (25°C) 0.05A/point, 1.6A/common (55°C)	0.1A/point 2A/common	0.1A/point, Pilot Duty, 2A/common
Maximum in-rush current	No limit (overload protection function)	0.4A 10ms or less	No limit (overload protection function)	Current is limited by the overload protection function.	Current is to be limited by the overload protection function
Leakage current at OFF	0.1mA or lower	0.1mA or lower	0.1mA or lower	0.1mA or lower	0.1mA or lower
Maximum voltage drop at ON	3.5V (0.1A) 2.5V (0.1A TYP.)	1.0VDC (TYP.) 0.1A 2.5VDC (MAX.) 0.1A	2.5VDC (0.1A Min.) 3.5VDC (0.1A Max.)	0.1VDC (TYP.) 0.1A 0.2VDC (MAX.) 0.1A	0.1VDC (TYP.) 0.1A 0.2VDC (MAX.) 0.1A
Response time	OFF to ON 0.5ms or less	2ms or less	0.5ms or less	0.5ms or less	0.5ms or less
ON to OFF	1.5ms or less	2ms or less (resistance load)	1.5ms or less (resistance load)	1ms or less (rated load, resistance load)	1ms or less (rated load, resistance load)
Surge killer	Surge absorbing diode		Zener diode	Clamping diode	Zener diode
Fuse	None		3.2A (one/common) non-replaceable	None	None
Protection function	Yes (overheat protection function, overload protection function)	None	Yes (overheat protection function, overload protection function)	Yes (overheat protection function, overload protection function)	Yes (overheat protection function, overload protection function)
Internal current consumption	290mA (TYP. all points ON)	500mA (TYP. all points ON)	500mA (TYP. all points ON)	140mA (TYP. all points ON)	190mA (TYP. all points ON)
External power supply	Voltage 12/24VDC (10.2 to 30VDC)	12/24VDC (10.2 to 30VDC)	12/24VDC (10.2 to 26.4VDC)	12/24VDC (ripple ratio within 5%) (allowable voltage range: 10.2 to 28.8VDC)	12/24VDC (ripple ratio within 5%) (allowable voltage range: 10.2 to 28.8VDC)
Current	50mA (24VDC TYP. per common)	8mA (24VDC TYP. per common)	80mA (24VDC TYP. per common)	20mA (at 24VDC)	19mA (at 24VDC)
Wiring method for common	32 points, 1 common		32 points, 1 common	32 points, 1 common	32 points, 1 common
External connection system	37-pin D sub connector x2		37-pin D sub connector	40-pin connector	40-pin connector

Make sure the section of the above table meets the specification of the machines and equipment connected to the L Series or iQ-R Series module.
 *1: To replace the AY82EP → RY41PT1P, two sets of the RY41PT1P and the Conversion Adapter(ERNT-ASLXCY81) are required (32 points for each set).

Precautions for wiring

*1 If your system is set to run on a rated input voltage of 12VDC when you make a switch from AX82 to RX41C4/ RX41C6HS x2, it must be reset to run on 24VDC.

4. Mounting and Installation

4.1 Handling Precautions

- Before attempting to install the Unit or carry out the necessary wiring, make certain that the external power supply, used in the system, is shut off on all three phases. Failure to do so may result in electric shock or damage to the product.
- Do not modify the Conversion Adapter or take it apart. Doing so will cause failure, malfunction, personal injury, or fire.
- Do not touch the energized part of the Conversion Adaptor directly. Contact will cause malfunction or failure in the system.
- Fasten the Conversion Adapter and the Mounting bracket securely with retaining screws, and tighten the screws by applying torque within specified limits. Loose screws can lead to the dropping of the Conversion Adapter, or Mounting bracket, possibly causing breakage thereof. Excessive tightness of the screws can lead to breakage of the screws, Converter Adaptor, Mounting bracket, or L Series or iQ-R Series Module, possibly causing the dropping, shorting, and malfunction thereof.
- Use care to prevent foreign materials including cuttings and wiring debris from entering the Conversion Adapter or the Programmable Controller Module. These will be cause for fire, failure or malfunction.
- Do not drop the Conversion Adapter and Mounting Bracket or do not give a strong impact to it. This will cause damage.

4.2 Use Precautions


Item	Depth and Height dimension	
	Installation with the Base Adapter	Installation with the DIN rail
AnS Series ↓ L Series	<p>Because the module is increased in depth dimension, check dimensional data before installing the module.</p>	<p>Because the module is increased in depth and height dimension, check dimensional data before installing the module.</p>
A Series ↓ iQ-R Series	<p>Because the module is increased in depth dimension, check dimensional data before installing the module.</p>	
AnS Series ↓ iQ-R Series	<p>Because the module is increased in depth dimension, check dimensional data before installing the module.</p>	<p>Because the module is increased in depth dimension, check dimensional data before installing the module.</p>

4.3 Installation Environment


- Refer to the manual supplied with the L Series or iQ-R Series module you use.
- L Series: MELSEC-L CPU Module User's Manual (SH-080890ENG)
 - iQ-R Series: Safety Guidelines (IB-0800525)

5. Part Names and Installation Method


- (1) Switch from the AnS Series to the L Series
【Installation with the Base Adapter】

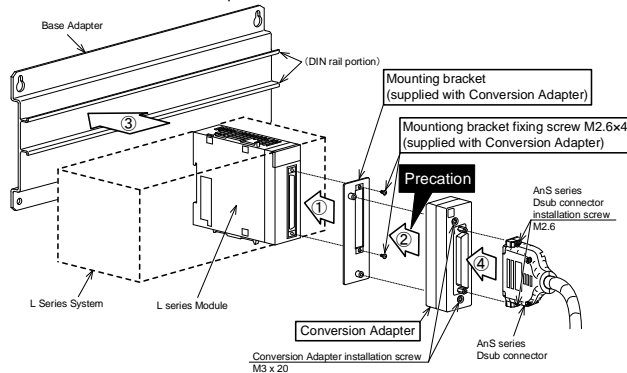

- 【Installation with the DIN rail】

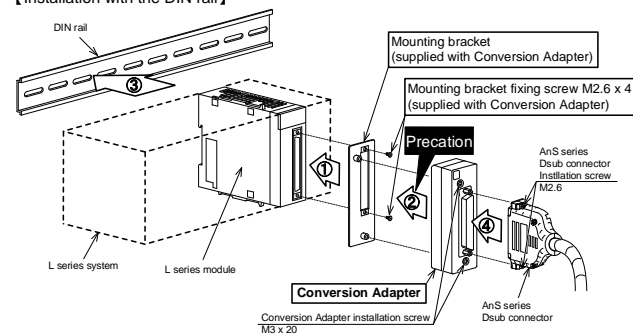

- (2) Switch from the AnS Series to the iQ-R Series

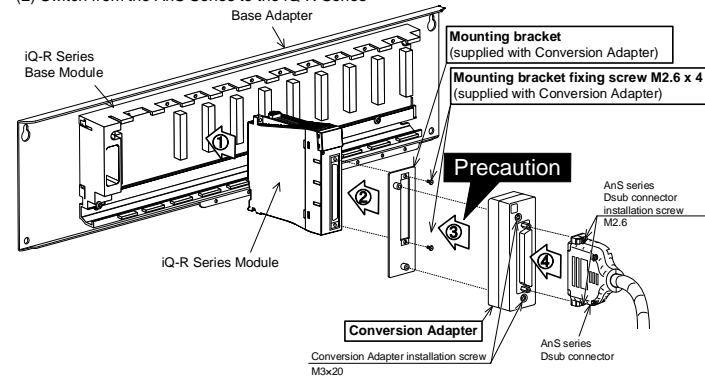

5.1 Installation Method

- (1) Switch from the AnS Series to the L Series

Installation with the Base Adapter

Remove the existing AnS Series base unit, and install the base adapter ERNT-ASLB□□. For how to install the base adapter, refer to the base adapter manual.

Installation with the DIN rail

Install the DIN rail on the control panel. For how to install the DIN rail, refer to the user's manual of the MELSEC-L CPU module.

- Secure the mounting bracket to the L Series module using the mounting bracket fixing screws (M2.6 x 4). (2 places)
 - Install the Conversion Adapter to the L Series module, and secure it using the Conversion Adapter installation screws (M3 x 20). (2 places)
- Precaution**
Before tightening the installation screws, check that the Conversion Adapter has been securely installed on the MELSEC-L Series module. Tightening the screws in floating-off state or tilting state will damage the Conversion Adapter installation screws and the mounting bracket.
- Install the L Series system to the base adapter (DIN rail portion) or the DIN rail.
 - Secure the AnS Series D sub connector to the Conversion Adapter with the supplied AnS Series D sub connector installation screw (M2.6). (2 places)

- (2) Switch from the AnS Series to the iQ-R Series

- Mount the iQ-R Series module to the iQ-R Series base unit.
- Secure the mounting bracket to the iQ-R Series module using the mounting bracket fixing screws (M2.6 x 4). (2 places, top and bottom)
- Install the Conversion Adapter on the mounting bracket, and secure it using the Conversion Adapter installation screws (M3 x 20). (2 places, top and bottom)


- Precaution**
Before tightening the installation screws, check that the Conversion Adapter has been securely installed on the iQ-R Series module. Tightening the screws in floating-off state or tilting state will damage the Conversion Adapter installation screws and the mounting bracket.
- Secure the AnS Series D sub connector to the Conversion Adapter with the supplied AnS Series D sub connector installation screw (M2.6). (2 places)

5.2 Tightening Torque

Tighten the installation screws to the specified torque below. An inappropriate tightening torque could cause the product to fall or result in a short circuit, product failure or malfunction.

Screw Location	Tightening Torque Range
Mounting bracket fixing screw (M2.6 x 4)	0.20 to 0.29N·m
AnS Series D sub connector installation screw (M2.6)	0.43 to 0.57N·m
Conversion Adapter installation screw (M3x20)	0.43 to 0.57N·m

6. External Dimensions

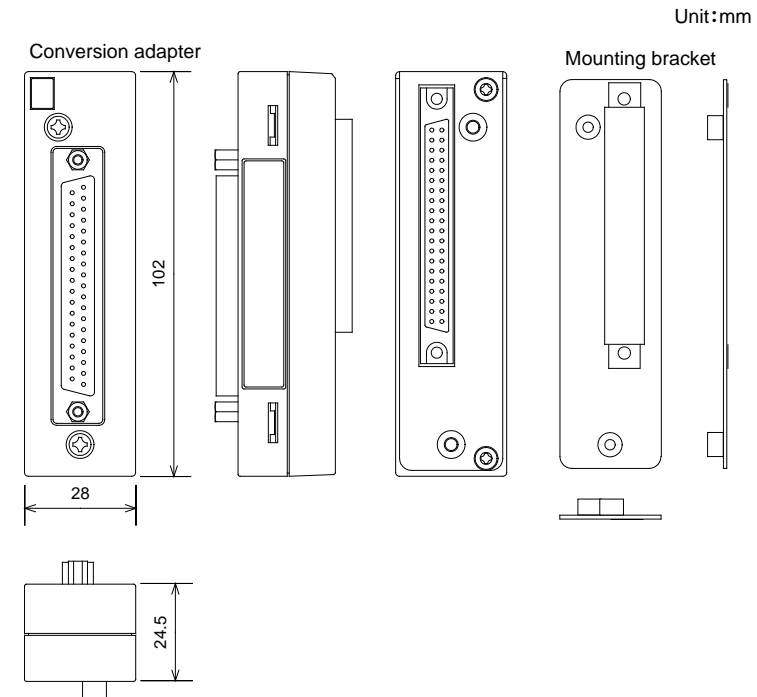

Duplication Prohibited
This manual may not be reproduced in any form, in part or in whole, without written permission from Mitsubishi Electric Engineering Company Limited. ©2014(2018) MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED ALL RIGHTS RESERVED

MELSEC is a registered trademark of Mitsubishi Electric Corporation in Japan.

Product Warranty Details

Please confirm the following product warranty details prior to product use.

Gratis Warranty Terms and Gratis Warranty Range

If any fault or defect (hereinafter referred to as "Failure") attributable to Mitsubishi Electric Engineering Company Limited (hereinafter referred to as "MEE") should occur within the gratis warranty period, MEE shall repair the product free of charge via the distributor from whom you made your purchase.

Gratis Warranty Period

The gratis warranty period of this product shall be one (1) year from the date of purchase or delivery to the designated place. Note that after manufacture and shipment from MEE, the maximum distribution period shall be six (6) months, and the gratis warranty period after manufacturing shall be limited to eighteen (18) months. In addition, the gratis warranty period for repaired products shall not exceed the gratis warranty period established prior to repair.

Gratis Warranty Range

The gratis warranty range shall be limited to normal use based on the usage conditions, methods and environment, etc., defined by the terms and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.

Warranty Period after Discontinuation of Production

- MEE shall offer product repair services (fee applied) for seven (7) years after production of the product has been discontinued. Discontinuation of production shall be reported via distributors.
- Product supply (including spare parts) is not possible after production has been discontinued.

Exclusion of Opportunity Loss and Secondary Loss from Warranty Liability

Regardless of the gratis warranty period, MEE shall not be liable for compensation for damages arising from causes not attributable to MEE, opportunity losses or lost profits incurred by the user due to Failures of MEE products, damages or secondary damages arising from special circumstances, whether foreseen or unforeseen by MEE, compensation for accidents, compensation for damages to products other than MEE products, or compensation for other work carried out by the user.

Changes in Product Specifications

The specifications given in the catalogs, manuals and technical documents are subject to change without notice.

This document is a new publication, effective June 2020. Specifications are subject to change without notice.