

Mitsubishi Electric Programmable Controller

Upgrade Tool

Conversion Adapter

Model
ERNT-2AR62RD

User's Manual



50CM-D180359-A(1811)

MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED

HEAD OFFICE: Hulic KUDAN BLDG.1-13-5, KUDANKITA CHIYODA-KU, TOKYO 102-0073, JAPAN
NAGOYA ENGINEERING OFFICE:139 SHIMOYASHIKICHO-SHIMOYASHIKI, KASUGAI, AICHI 486-0906, JAPAN

SAFETY PRECAUTIONS

(Always read these precautions prior to use.)

Before using this product, please read this manual carefully and pay full attention to safety to ensure that the product is used correctly.

The precautions presented in this manual are concerned with this product only. For Programmable Controller system safety precautions, refer to "Safety Guidelines" for MELSEC iQ-R Series Modules.

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

In this manual, the safety precautions are ranked as "WARNING" and "CAUTION."



WARNING Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.



CAUTION Indicates that incorrect handling may cause hazardous conditions, resulting in medium or minor injury and/or property damage.

Note that failure to observe the CAUTION level instructions may lead to a serious consequence according to the circumstances. Always follow the precautions of both levels because they are important to personal safety. Please keep this manual in an easy-to-access location for future reference, and be sure to provide the manual to the end user.

Precautions before using



CAUTION

- When replacing the MELSEC-AnS Series with the MELSEC iQ-R Series, be sure to refer to the Programmable Controller Module manuals to check the differences in performance, functionality, CPU input/output signals, buffer memory addresses and the like.

Installation Precautions



CAUTION

- Use the conversion adapter and conversion adapter anchor base in the environment conditions described in the general specifications in "Safety Guidelines" for MELSEC iQ-R Series Modules. Failure to do so could lead to electric shock, fire, malfunction or product failure or deterioration.
- Do not come in direct contact with the conductive area of the conversion adapter. Doing so could lead to system malfunction or failure.
- Fully secure the conversion adapter and conversion adapter anchor base using the installation screws, and tighten the installation screws securely within the specified torque range. Failure to do so could cause the conversion adapter and anchor base to fall, resulting in conversion adapter and conversion adapter anchor base damage.
- Always check for correct match between MELSEC iQ-R Series and the conversion adapter. Incorrect match can cause damage to the MELSEC iQ-R Series module.

Wiring Precautions



WARNING

- Be sure to shut off all phases of the external power supply before performing installation or wiring work. Failure to do so could result in electric shock or product damage.
- If you want to energize and run the unit after completing the installation and wiring work, be sure to close the terminal block cover attached to the MELSEC-AnS series terminal block. Failure to do so could result in electric shock.



CAUTION

- Properly wire the conversion adapter after verifying the specifications and terminal layout of the module to be used. Connecting a power supply with a different rating or improper wiring could lead to fire or product failure.
- Securely tighten the conversion adapter installation screws, conversion adapter anchor base installation screws and MELSEC-AnS series terminal block installation screws within the specified torque range. A loose screw may result in a short circuit, fire or malfunction. An excessively tightened screw may result in screw or conversion adapter damage, causing the conversion adapter to fall, a short circuit or product malfunction.
- Do not allow foreign matter such as cuttings or wiring shavings to enter the conversion adapter or module. Doing so could lead to fire, failure or malfunction.

Startup and Maintenance Precautions



WARNING

- Do not touch the terminals during energization. Doing so could result in electric shock or malfunction.
- Be sure to shut off all phases of the external power supply before cleaning and retightening the terminal screws. Failure to do so could lead to electric shock. Excessively tightened screws could result in conversion adapter or input/output module damage, causing the conversion adapter to fall, a short circuit or product malfunction.

Startup and Maintenance Precautions



CAUTION

- Do not disassemble or modify the conversion adapter. Doing so could lead to failure, malfunction, injury or fire.
- The conversion adapter case is made of resin. Do not drop or apply excessive impact to the case. Doing so could lead to conversion adapter damage.

Disposal Precautions



CAUTION

- When disposing of the product, treat it as industrial waste.

EMC AND LOW VOLTAGE DIRECTIVES

Compliance to the EMC Directive, which is one of the EU Directives, has been a legal obligation for the products sold in European countries since 1996 as well as the Low Voltage Directive since 1997. Manufacturers who recognize their products are compliant to the EMC and Low Voltage Directives are required to declare that print a "CE mark" on their products.

Authorized representative in Europe

Authorized representative in Europe is shown below.

Name: Mitsubishi Electric Europe B.V.

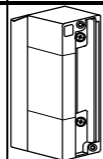


Address: Mitsubishi-Electric-Platz 1, 40882 Ratingen, Germany

1. Overview

This manual describes the Mitsubishi Electric Programmable Controller Upgrade Tool conversion adapter (ERNT-2AR62RD). The conversion adapter is a product that converts the differences in MELSEC-AnS series and MELSEC iQ-R series pin assignments.

When replacing the MELSEC-AnS Series with the MELSEC iQ-R Series, be sure to refer to the Programmable Controller Module manuals to check the differences in performance, functionality, CPU input/output signals, buffer memory addresses and the like.

Once you have opened the packaging, verify that it contains the following products.

Product	Shape	Quantity	Product	Shape	Quantity
Conversion adapter		1	Terminal block cover		1
Mounting bracket fixing screw (M2.6 x 4)		2	This manual	-	1

2. Specifications

2.1 General Specifications

Item	Specifications					
Operating ambient temperature	0 to 55°C (Maximum surrounding air temperature 55°C)					
Storage ambient temperature	-25 to 75°C					
Operating ambient humidity	5 to 95%RH, non-condensing					
Storage ambient humidity	5 to 95%RH, non-condensing					
Vibration resistance	Compliant with JIS B 3502 and IEC 61131-2	Frequency	Constant acceleration	Half amplitude	Sweep count	10 times each in X, Y, Z directions
	Under intermittent vibration	5 to 8.4Hz	-	3.5mm	-	-
	Under continuous vibration	8.4 to 150Hz	9.8m/s ²	-	-	-
		5 to 8.4Hz	-	1.75mm	-	-
		8.4 to 150Hz	4.9m/s ²	-	-	-
Shock resistance	Compliant with JIS B 3502 and IEC 61131-2 (147m/s ² , 3 times each in 3 directions X, Y, Z)					
Operating atmosphere	No corrosive gases					
Operating altitude *1	0 to 2000m					
Installation location	Inside a control panel *2					
Overvoltage category *3	II or less					
Pollution degree *4	2					

*1: Do not use or store under pressure higher than the atmospheric pressure of altitude 0m.

*2: The enclosure is suitably designed for those specific environmental conditions, as applicable, and enclosure rate meets IP20 and minimum type 1 of UL 50.

*3: This indicates the section of the power supply to which the equipment is assumed to be connected between the public electrical power distribution network and the machinery within premises.

Category II applies to equipment for which electrical power is supplied from fixed facilities. Category II applies to equipment for which electrical power is supplied from fixed facilities. Category II applies to equipment for which electrical power is supplied from fixed facilities.

*4: This index indicates the degree to which conductive material is generated in terms of the environment in which the equipment is used.

Pollution level 2 is when only non-conductive pollution occurs. A temporary conductivity caused by condensing must be expected occasionally.


2.2 Hardware Specifications

Item	Specifications
Current for temperature detection	1.0mA or lower

3. Conversion Adapter Product Specifications

For detail specifications which do not appear in the specification comparison charts contained herein, see the user's manual supplied with the MELSEC iQ-R Series module you use. Also, check that the specifications of the connected devices meet the specifications of the MELSEC iQ-R Series Module.

Conversion Adapter Model	MELSEC-AnS Series Module Model	Number of channels	MELSEC iQ-R Series Model	Conversion Adapter Weight (g)
ERNT-2AR62RD	A1S62RD3 A1S62RD3N	2	R60RD8-G	65

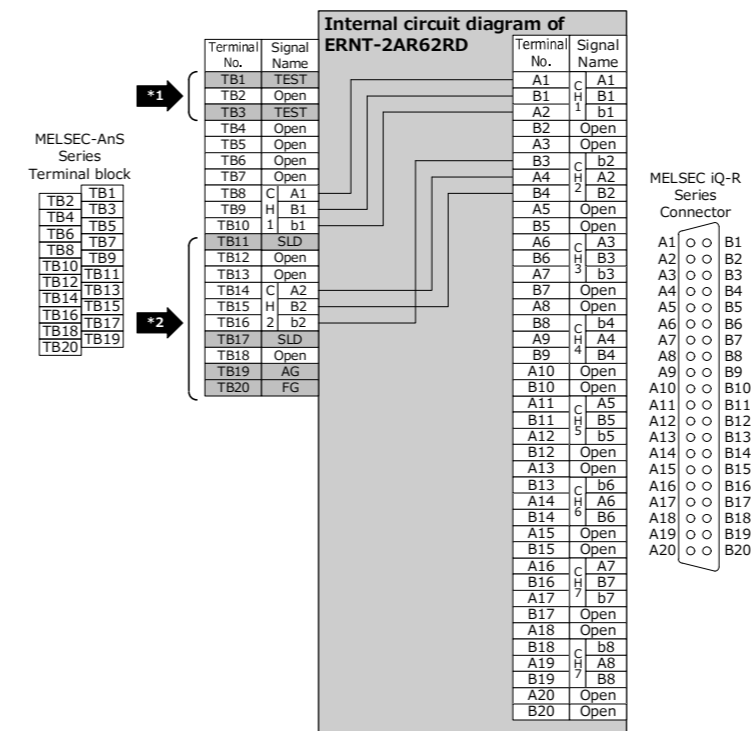

< Specification Comparison >

Specification	Model	MELSEC-AnS Series		MELSEC iQ-R Series
		A1S62RD3	A1S62RD3N	R60RD8-G
Measuring method		3-wire type		
Usable platinum RTD *1		Pt100 (JIS C1604-1989, DIN 43760-1980) JPt100(JIS C1604-1981)	Pt100 (JIS C1604-1989, DIN 43760-1980, JIS C1604-1997, IEC 751-am2) JPt100(JIS C1604-1981)	Pt100(JIS C 1604-2013, IEC 751 1983) JPt100(JIS C 1604-1981) Ni100(DIN 43760 1987) Pt50(JIS C 1604-1981)
Temperature detecting output current		4.2mA (MIN.) 4.7mA (MAX.)	1mA	1.0mA or lower
Measured temperature range	Pt100	-180 to 600°C		-200 to 850°C
	JPt100	-180 to 600°C		-180 to 600°C
	Ni100	-		-60 to 250°C
	Pt50	-		-200 to 650°C
Output	Measured temperature value	16-bit signed binary -1800 to 6000: Value to the first decimal place x 10 32-bit signed binary -180000 to 600000: Value to the third decimal place x 1000		16-bit signed binary -2000 to 8500: Value to the first decimal place x 10
		Scaling value	-	
	Accuracy		±1% (accuracy relative to full-scale)	
JPt100 -180 to 600°C: ±0.8°C (Ambient temperature: 25±5°C) ±2.4°C (Ambient temperature: 0 to 55°C) -20 to 120°C: ±0.3°C (Ambient temperature: 25±5°C) ±1.1°C (Ambient temperature: 0 to 55°C) 0 to 200°C: ±0.4°C (Ambient temperature: 25±5°C) ±1.2°C (Ambient temperature: 0 to 55°C)				
Ni100 -60 to 250°C: ±0.4°C (Ambient temperature: 25±5°C) ±1.2°C (Ambient temperature: 0 to 55°C)				
Pt50 -200 to 650°C: ±0.8°C (Ambient temperature: 25±5°C) ±2.4°C (Ambient temperature: 0 to 55°C)				
Resolution		0.025°C		0.1°C
Conversion speed		40ms/channel		10ms/channel
Number of analog input points		2 channels/module		8 channels/module
Disconnection detection		Detected channel by channel		
Isolation Method	Between platinum RTD input and programmable controller power supply	Photocoupler isolation		Transfer isolation
	Between platinum RTD input and channels	Non-isolation		Transfer isolation
I/O occupied points		32 points		16 points
Wiring connection system		20 point terminal block		40-pin connector
Internal current consumption (5VDC)		0.54A	0.49A	0.35A

*1: Only the 3-wire type of the platinum RTD can be used. The 2-wire type and 4-wire type of the platinum RTDs cannot be used.

Make sure the section of the above table meets the specification of the machines and equipment connected to the MELSEC iQ-R Series module.

Precautions for wiring

*1 R60RD8-G is not provided with a terminal for Offset/Gain setting purposes. For more details about the Offset/Gain setting, see the R60RD8-G User's Manual.

*2 Because there is no SLD terminal, AG terminal, and FG terminal on the R60RD8-G side, the wires connected to SLD terminals (TB11 and TB17), AG terminal (TB19), and FG terminal (TB20) on the A1S62RD3/A1S62RD3N side are not required. Note that leaving these terminals connected will not cause a problem because the wires are not connected inside of the Conversion Adapter. However, when shields are connected to the SLD terminals or the FG terminal in the existing wiring, the shields used for the wiring must be grounded.

Precautions for the program

- (1) A1S62RD3/A1S62RD3N and R60RD8-G differ from each other in the way input/output signals (X, Y) and buffer memory addresses are allocated. Therefore, you need make necessary changes to the sequence program that is used.

POINT

- (1) The criteria for the platinum RTD that can be used are different. Replace the platinum RTD with the one that can be used for the R60RD8-G.

MELSEC-AnS Series Module model	Platinum RTD	
	Platinum RTD that can be used for the R60RD8-G	Platinum RTD that cannot be used for the R60RD8-G (Replace the platinum RTD with the one that can be used for the R60RD8-G)
A1S62RD3	JPt100 (JIS C1604-1981)	Pt100 (JIS C1604-1989, DIN 43760-1980)
A1S62RD3N	JPt100 (JIS C1604-1981)	Pt100 (JIS C1604-1989, JIS C1604-1997, DIN 43760-1980, IEC 751-am2)

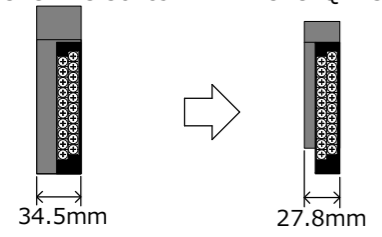
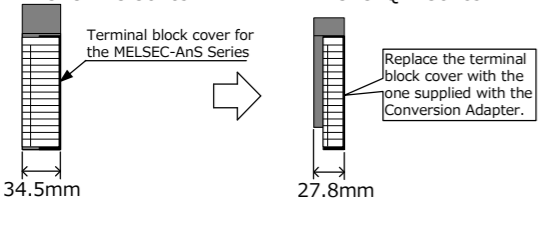
- (2) When an error occurs in the measured temperature, the error can be corrected using the offset/gain setting of the R60RD8-G.
 (3) If the offset/gain setting has been configured in the A1S62RD3, A1S62RD3N configure the offset/gain setting in the R60RD8-G as well.



4. Mounting and Installation

4.1 Handling Precautions

- Before attempting to install the Unit or carry out the necessary wiring, make certain that the external power supply, used in the system, is shut off on all three phases. Failure to do so may result in electric shock or damage to the product.
- Do not touch live terminals. There is a danger of electric shock or malfunction.
- Do not modify the Conversion Adapter or take it apart. Doing so will cause failure, malfunction, personal injury, or fire.
- Do not touch the energized part of the Conversion Adapter directly. Contact will cause malfunction or failure in the system.
- Fasten the Conversion Adapter, securely with retaining screws, and tighten the screws by applying torque within specified limits. Loose screws can lead to the dropping of the Conversion Adapter, possibly causing breakage thereof. Excessive tightness of the screws can lead to breakage of the screws, Converter Adapter, or MELSEC-Q Series Module, possibly causing the dropping, shorting, and malfunction thereof.
- Use care to prevent foreign materials including cuttings and wiring debris from entering the Conversion Adapter or the MELSEC-Q Series Module. These will cause fire, failure or malfunction.
- Do not drop the Conversion Adapter or do not give a strong impact to it. This will cause damage.
- Conversion Adapter is intended for indoor use only.

4.2 Use Precautions

Item	Use Precautions
Width dimension of module	Because the module is reduced in width dimension (34.5mm→27.8mm) and thus in area available for wiring, check dimensional data before installing the module. <MELSEC-AnS Series> <MELSEC iQ-R Series> 
Terminal block cover	The terminal block cover for MELSEC-AnS Series is bigger than the width of the MELSEC iQ-R Series Module. Therefore, it is necessary to replace it with the terminal block cover supplied with the converter adapter. <MELSEC-AnS Series> <MELSEC iQ-R Series> 

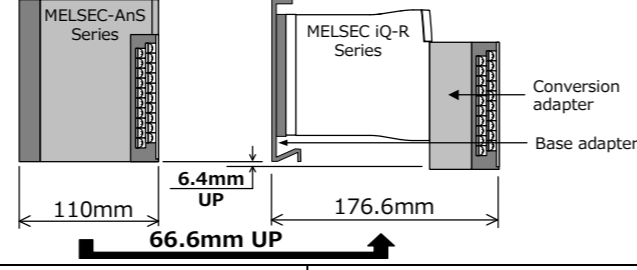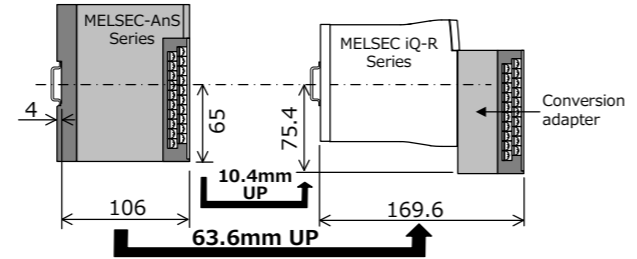Item	Use Precautions
Depth and Height dimension	Installation with the Base Adapter Because the module is increased in depth dimension, check dimensional data before installing the module. 
	Installation with the DIN rail Because the module is increased in depth and height dimension, check dimensional data before installing the module. 

4.3 Installation Environment

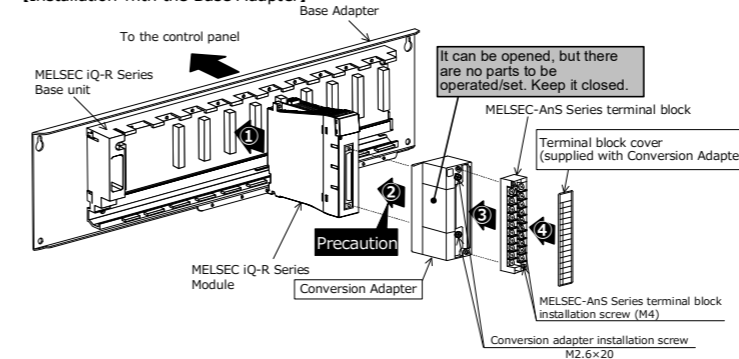
Refer to "Safety Guidelines" for MELSEC iQ-R Series Modules.

4.4 Wiring module power source


External connection to 24VDC power supply circuit of Conversion Adapter must be powered from approved source that meets of SELV/PELV, Class 2, and limited energy according to UL 61010-2-201.

5. Part Names and Installation Method

[Installation with the Base Adapter]



[Installation with the DIN rail]

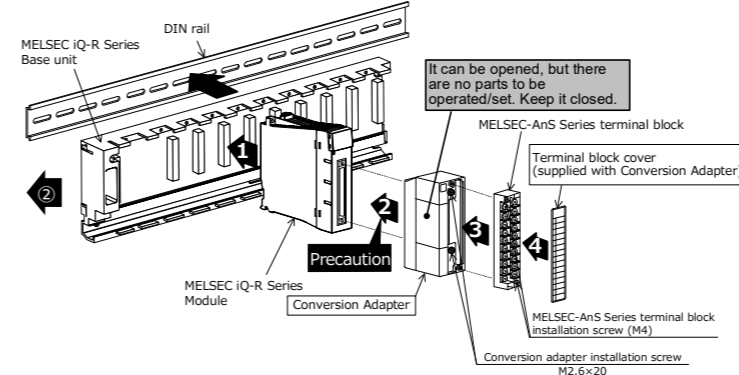

5.1 Installation Method

Installation with the Base Adapter	Installation with the DIN rail
Mount the MELSEC iQ-R Series Base Unit to the Base Adapter. Refer to the Base Adapter's manual for how to install them to the control panel.	Mount the DIN rail mounting adapter manufactured by Mitsubishi Electric to the MELSEC iQ-R Series Base Unit. For how to install the Base Unit on the DIN rail, refer to the MELSEC iQ-R Module Configuration Manual.

- Mount the MELSEC iQ-R Series module to the MELSEC iQ-R Series Base Unit.
- Install the Conversion Adapter to the MELSEC iQ-R Series module, and secure it with the Conversion Adapter installation screws (M2.6×20). (2 places)
Precaution
 Before tightening the installation screws, check that the Conversion Adapter has been securely installed on the MELSEC iQ-R Series module. Tightening the screws in floating-off state or tilting state will damage the Conversion Adapter installation screws and the MELSEC iQ-R Series module.
- Secure the MELSEC-AnS Series terminal block to the Conversion Adapter with the supplied terminal block installation screw (M4). (2 places, top and bottom.)
- Remove the terminal block cover from the MELSEC-AnS Series terminal block and fit the terminal block cover supplied with the Conversion Adapter in place.


5.2 Tightening Torque

Tighten the module installation screws to the specified torque below. An inappropriate tightening torque could cause the product to fall or result in a short circuit, product failure or malfunction.

Screw Location	Tightening Torque Range
Conversion Adapter installation screw (M2.6×20)	0.20 to 0.29N·m
MELSEC-AnS Series terminal block installation screw (M4 screw)	0.78 to 1.18N·m

6. External Dimensions

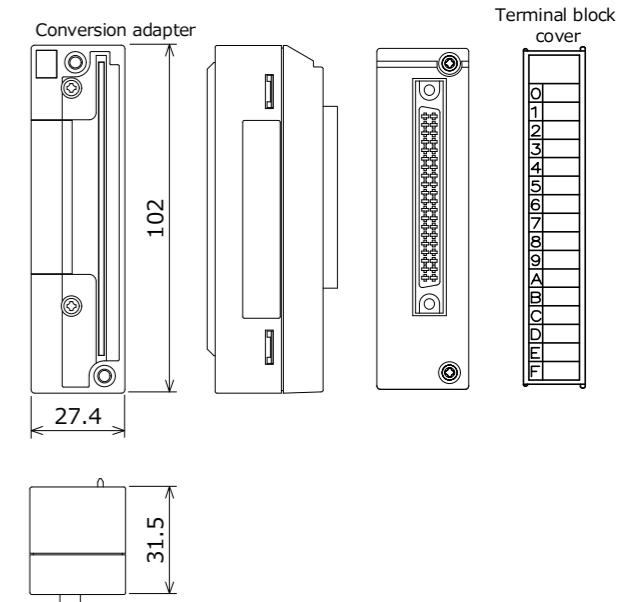Unit: mm



Duplication Prohibited
 This manual may not be reproduced in any form, in part or in whole, without written permission from Mitsubishi Electric Engineering Company Limited.
 ©2018 MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED ALL RIGHTS RESERVED

MELSEC, MELSEC iQ-R is a registered trademark of Mitsubishi Electric Corporation in Japan. ERNT is a registered trademark of Mitsubishi Electric Engineering Corporation in Japan.

Product Warranty Details

Please confirm the following product warranty details prior to product use.

Gratis Warranty Terms and Gratis Warranty Range

If any fault or defect (hereinafter referred to as "Failure") attributable to Mitsubishi Electric Engineering Company Limited (hereinafter referred to as "MEE") should occur within the gratis warranty period, MEE shall repair the product free of charge via the distributor from whom you made your purchase.

Gratis Warranty Period

The gratis warranty period of this product shall be one (1) year from the date of purchase or delivery to the designated place. Note that after manufacture and shipment from MEE, the maximum distribution period shall be six (6) months, and the gratis warranty period after manufacturing shall be limited to eighteen (18) months. In addition, the gratis warranty period for repaired products shall not exceed the gratis warranty period established prior to repair.

Gratis Warranty Range

The gratis warranty range shall be limited to normal use based on the usage conditions, methods and environment, etc., defined by the terms and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.

Warranty Period after Discontinuation of Production

- MEE shall offer product repair services (fee applied) for seven (7) years after production of the product has been discontinued. Discontinuation of production shall be reported via distributors.
- Product supply (including spare parts) is not possible after production has been discontinued.

Exclusion of Opportunity Loss and Secondary Loss from Warranty Liability

Regardless of the gratis warranty period, MEE shall not be liable for compensation for damages arising from causes not attributable to MEE, opportunity losses or lost profits incurred by the user due to Failures of MEE products, damages or secondary damages arising from special circumstances, whether foreseen or unforeseen by MEE, compensation for accidents, compensation for damages to products other than MEE products, or compensation for other work carried out by the user.

Changes in Product Specifications

The specifications given in the catalogs, manuals and technical documents are subject to change without notice.

This document is a new publication, effective November 2018. Specifications are subject to change without notice.

Developed November 2018
 50CM-D180359-A