

Mitsubishi Electric Programmable Controller

Upgrade Tool

Conversion Adapter

Model

ERNT-2CR218Y

User's Manual

50CM-D180384-C(2007)

MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED

HEAD OFFICE: HULIC KUDAN BLDG.1-13-5, KUDANKITA CHYODKA-KU, TOKYO 102-0073, JAPAN
NAGOYA ENGINEERING OFFICE: 139 SHIMOMAYASHIKIHO-SHIMOMAYASHIKI, KASUGAI, AICHI 486-0906, JAPAN

SAFETY PRECAUTIONS

(Always read these precautions prior to use.)

Before using this product, please read this manual carefully and pay full attention to safety to ensure that the product is used correctly. The precautions presented in this manual are concerned with this product only. For Programmable Controller system safety precautions, refer to the user's manual of the MELSEC iQ-R Series CPU Module to be used. If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired. In this manual, the safety precautions are ranked as "WARNING" and "CAUTION."

WARNING

Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.

CAUTION

Indicates that incorrect handling may cause hazardous conditions, resulting in medium or minor injury and/or property damage.

Note that failure to observe the CAUTION level instructions may lead to a serious consequence according to the circumstances. Always follow the precautions of both levels because they are important to personal safety. Please keep this manual in an easy-to-access location for future reference, and be sure to provide the manual to the end user.

Precautions before using

CAUTION

- When making a switch to the MELSEC iQ-R Series, be sure to consult user's manual supplied with individual module under the MELSEC iQ-R Series to confirm differences in various aspects including performance, function, CPU input/output signals between the two modules.

Installation Precautions

CAUTION

- Use the Conversion Adapter in the environmental conditions that are specified in the general specification. If the Products are used in any environment beyond the bounds of the general specification, electric shock, fire, malfunction, or damage to or degradation of the Products will result.
- Do not directly touch any conductive parts of Conversion Adapter. Contact will cause malfunction or failure in the system.
- Fasten the Conversion Adapter and the Mounting Bracket securely with retaining screws, and tighten the screws by applying torque within specified limits. Loose screws can lead to the dropping of the Conversion Adapter or Mounting Bracket, possibly causing breakage thereof. Excessive tightness of the screws can lead to breakage of the screws, Conversion Adapter, Mounting Bracket, or MELSEC iQ-R Series Module, possibly causing the dropping, shorting, and malfunction thereof.
- Always check for correct match between MELSEC iQ-R Series and the Conversion Adapter. Incorrect match can cause damage to the MELSEC iQ-R Series Module.
- When installing the Conversion Adapter, take care not to get your hand snagged on the Mounting Bracket or the like. Injury may result.
- When installing or removing the MELSEC iQ-R Series Module complete with a Converter Adapter, be sure to hold it with both hands. Dropping may lead to breakage.

Wiring Precautions

WARNING

- Before attempting to install the Unit or carry out the necessary wiring, make certain that the external power supply, used in the system, is shut off on all three phases. Failure to do so may result in electric shock or damage to the product.

CAUTION

- Carry out wiring for the Conversion Adapter correctly after checking the specification and terminal arrangement for the module used. Connecting a power supply with a different voltage rating or incorrect wiring may cause a fire or failure.
- Tighten the connector screws securely by applying torque within the specified limits. Loose screws will cause short circuit, fire or malfunction. Excessive tightening will damage the screws or the Conversion Adapter which in turn will cause dropping of parts, short circuit or malfunction.
- Use care to prevent foreign materials including cuttings and wiring debris from entering the Conversion Adapter or the MELSEC iQ-R Series Module. These will be cause for fire, failure or malfunction.

Startup and Maintenance Precautions

WARNING

- Do not touch live connectors. There is a danger of electric shock or malfunction.
- Shut off the external power supply for the system in all phases before cleaning or retightening the terminal screws. Failure to do so may result in electric shock or cause the MELSEC iQ-R Series Module to fail or malfunction. Loose screws can lead to dropping, shorting, and malfunction. Excessive tightness of the screws can lead to breakage of the screws, Conversion Adapter, Mounting Bracket, or MELSEC iQ-R Series Module, possibly causing the dropping, shorting, and malfunction thereof.

CAUTION	
<ul style="list-style-type: none"> Do not modify the Conversion Adapter or take it apart. Doing so will cause failure, malfunction, personal injury, or fire. Do not drop the Conversion Adapter and Mounting Bracket or do not give a strong impact to it. This will cause damage. 	

Disposal Precautions

CAUTION

- When disposing of the product, treat it as industrial waste.

安全注意事项 (使用前请务必阅读)

使用本产品时, 请仔细阅读本手册, 并充分注意安全, 正确地使用产品。本手册中注明的注意事项仅记载了与本产品相关的内容。关于可编程控制器系统的安全注意事项, 请参阅所使用的MELSEC iQ-R系列CPU模块的用户手册。请勿在所记载内容的范围外使用, 否则会损坏产品的保护功能。在本安全注意事项中, 安全注意事项的等级分为「警告」和「注意」。

警告

表示错误操作可能造成危险后果, 引起死亡或重伤事故。

注意

表示错误操作可能造成危险后果, 引起中度伤害, 轻伤及财产损失。

另外, 根据情况不同, 即使是注意中记载的事项, 也可能引发严重后果。不管哪个记载的都是非常重要的内容, 请务必遵守。请妥善保管本手册, 以便需要时取阅, 并请在本手册交给最终用户。

使用前的注意事项

注意

- 替换至 MELSEC iQ-R 系列时, 为确认性能, 功能, CPU 对应的输入输出信号等方面的差异, 请务必参照 MELSEC iQ-R 系列的各模块的手册进行使用。

安装注意事项

注意

- 应在一般规格环境下使用转换适配器。如果在一般规格范围以外的环境中使用转换适配器, 可能导致触电, 火灾, 误动作, 产品损坏或性能劣化。
- 请不要直接触摸转换适配器的导电部分。否则可能会造成系统误动作, 故障。
- 转换适配器及安装配件应通过安装螺钉切实地加以固定, 安装螺钉应在规定的扭矩范围内切实地拧紧。如果螺钉拧得过松, 有可能因掉落而导致转换适配器及安装配件破损。如果螺钉拧得过紧, 有可能造成螺钉, 转换适配器, 安装配件及 MELSEC iQ-R 系列模块破损, 从而导致掉落, 短路或误动作。
- 请务必确认 MELSEC iQ-R 系列模块和转换适配器的组合是否正确。在错误组合下使用时, 可能会导致 MELSEC iQ-R 系列模块损坏。
- 安装转换适配器时, 应注意不要使手等身体部分刮到安装配件。否则可能会导致受伤。
- 在对安装了转换适配器的 MELSEC iQ-R 系列模块进行装卸时, 请务必用双手拿住产品。否则可能会因落下而导致损坏。

接线注意事项

警告

- 在进行安装, 配线作业等时, 必须将系统使用的外部供电电源全部断开后再进行操作。如果未全部断开, 有可能导致触电或产品损坏。

注意

- 请确认所使用模块的规格及端子排列后正确地进行转换适配器的接线。如果输入不符合额定值的电压, 连接不符合额定值的电源或接线错误, 可能会导致火灾或故障。
- 连接器安装螺钉应在规定的扭矩范围内切实地拧紧。如果螺钉拧得过紧, 有可能导致短路, 火灾或误动作。如果螺钉拧得过紧, 有可能造成螺钉及转换适配器破损从而导致掉落, 短路或误动作。
- 请注意不要让切屑或接线头等异物进入转换适配器及 MELSEC iQ-R 系列模块内。否则可能会导致火灾, 故障, 误动作。

启动和维护注意事项

警告

- 在通电状态下请勿触摸导电部分。否则可能导致触电或误动作。
- 在清洁模块或重新紧固端子螺钉时, 必须将系统使用的外部供电电源全部断开后再进行操作。如果未全部断开, 有可能导致触电或 MELSEC iQ-R 系列模块故障, 误动作。如果螺钉拧得过松, 有可能导致掉落, 短路或误动作。如果螺钉拧得过紧, 有可能导致螺钉, 转换适配器, 安装配件及 MELSEC iQ-R 系列模块破损, 从而导致掉落, 短路或误动作。

启动和维护注意事项

注意

- 请不要拆卸, 改造转换适配器。否则可能会导致故障, 误动作, 受伤或火灾。
- 请勿使转换适配器及安装配件掉落或受到强烈撞击。否则可能导致破损。

废弃注意事项

注意

- 废弃时请将本产品作为工业废弃物处理。

EMC AND LOW VOLTAGE DIRECTIVES

Compliance to the EMC Directive, which is one of the EU Directives, has been a legal obligation for the products sold in European countries since 1996 as well as the Low Voltage Directive since 1997. Manufacturers who recognize their products are compliant to the EMC and Low Voltage Directives are required to declare that print a "CE mark" on their products.

Authorized representative in Europe

Authorized representative in Europe is shown below.
Name: Mitsubishi Electric Europe B.V.
Address: Mitsubishi-Electric-Platz 1, 40882 Ratingen, Germany

1. Overview

This manual describes specifications, handling and other information about the Conversion Adapter "ERNT-2CR218Y" available as Upgrade Tools for the Mitsubishi Electric Programmable Controller.

Before attempting to make a switch to MELSEC iQ-R Series in your installation, consult the user's manual supplied with individual module under the latter series to learn about how they differ in various aspects including performance and function.

Once you have opened the packaging, verify that it contains the following products.

Product	Shape	Quantity
Conversion Adapter		1
Mounting Bracket		1
Mounting Bracket fixing screws (M2.6 x 4)		2
This manual	-	1

2. Specifications

2.1 General Specifications

Item	Specifications				
Operating ambient temperature	0 to 55°C (Maximum surrounding air temperature 55°C)				
Storage ambient temperature	-25 to 75°C				
Operating ambient humidity	5 to 95%RH, non-condensing				
Storage ambient humidity	5 to 95%RH, non-condensing				
Vibration resistance	Compliant with JIS B 3502 and IEC 61131-2	Frequency	Constant acceleration	Half amplitude	Sweep count 10 times each in X, Y, Z directions
		Under intermittent vibration	5 to 8.4Hz 8.4 to 150Hz	- 9.8m/s ²	
		Under continuous vibration	5 to 8.4Hz 8.4 to 150Hz	- 4.9m/s ²	1.75mm -
Shock resistance	Compliant with JIS B 3502 and IEC 61131-2 (147 m/s ² , 3 times each in 3 directions X, Y, Z)				
Operating atmosphere	No corrosive gases				
Operating altitude *1	0 to 2000m				
Installation location	Inside a control panel *2				
Overvoltage category *3	II or less				
Pollution degree *4	2				

*1 : Do not use or store under pressure higher than the atmospheric pressure of altitude 0m.

*2 : The enclosure is suitably designed for those specific environmental conditions, as applicable, and enclosure rate meets IP20 and minimum type 1 of UL 50.

*3 : This indicates the section of the power supply to which the equipment is assumed to be connected between the public electrical power distribution network and the machinery within premises. Category II applies to equipment for which electrical power is supplied from fixed facilities.

*4 : This index indicates the degree to which conductive material is generated in terms of the environment in which the equipment is used.
Pollution level 2 is when only non-conductive pollution occurs. A temporary conductivity caused by condensing must be expected occasionally.

2.2 Hardware Specifications

Item	Specifications
Rated voltage / current	5-24VDC(+25/-15%), 0.2A/point, 2A/common

3. Product Specifications


For detail specifications which do not appear in the specification comparison charts contained herein, see the user's manual supplied with the MELSEC iQ-R Series Module you use. Also, check that the specifications of the connected devices meet the specifications of the MELSEC iQ-R Series Module.

Conversion Adapter Model	No. of modules	Before replacement SYSMAC C Series MEMOCON-SC GL Series Module Model	No. of Output Points	After replacement MELSEC iQ-R Series Module Model		Conversion Adapter Weight (g)
				No. of modules		
ERNT-2CR218Y	1	C200H-OD218	32 points	RY41NT2P	1	85 [?]
		CQM1-OD213				
		CS1W-OD231				
	2 ^{*1}	CS1W-MD261(output part)	32 points	RY41PT1P	2 ^{*1}	
		C200H-OD21B				
		CQM1-OD216				
2 ^{*1}	2 ^{*1}	CS1W-OD232	64 points	RY41NT2P	2 ^{*1}	
		CS1W-MD262(output part)				
		C200H-OD219				
		CS1W-OD261				
2 ^{*1}	2 ^{*1}	C500-OD213	64 points	RY41PT1P	2 ^{*1}	
		JAMSC-B2604				
		CS1W-OD262				

*1 Two sets of MELSEC iQ-R Series Modules and the Conversion Adapter are required (32 points for each set).

*2 This indicates the weight for one Conversion Adapter.

Signal Name	SYSMAC C Series connector	MELSEC iQ-R Series connector
module (a)	C200H-OD218 CQM1-OD213	RY41NT2P
module (b)	CS1W-OD231 CS1W-MD261(output part)	

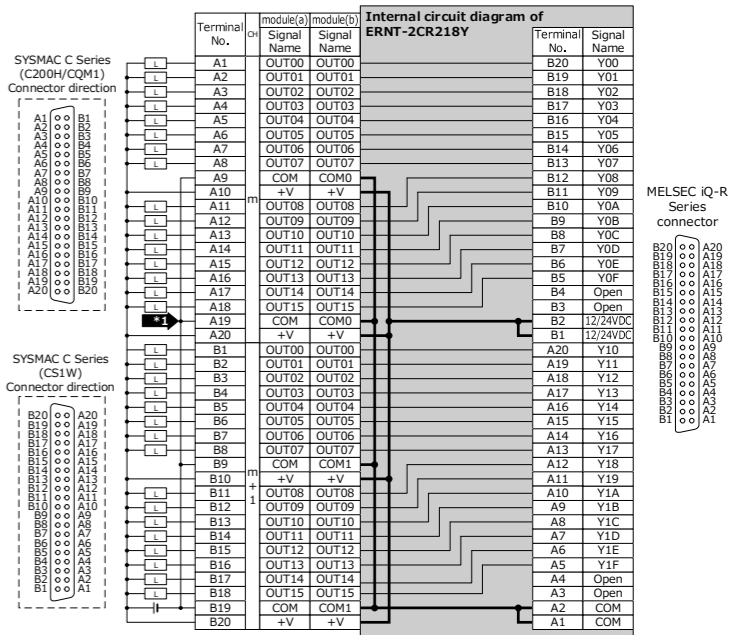

Precautions for wiring

- For the replacement from the CS1W-OD231 or CS1W-MD261 (output part), because the switch concerned causes the number of points per common to change from 16 (two circuits) to 32 (one circuit), an alteration to the wiring is required if the commons on the existing modules have been used in separation from each other.

<Specification Comparison Chart>

Specifications	SYSMAC C Series			MELSEC iQ-R Series
	Model	C200H-OD218 (Sink type)	CQM1-OD213 (Sink type)	
Number of output points		32 points	32 points	32 points
Rated load voltage *1		4.5 to 26.4VDC	4.5 to 26.4VDC	12/24VDC (10.2 to 28.8VDC)
Maximum load current		16mA(4.5V) to 100mA(26.4V)	16mA(4.5V) to 100mA(26.4V)	0.2A/point Pilot Duty 2A/common
Maximum inrush current		-	-	Current is to be limited by the overload protection function.
Leakage current at OFF		0.1mA or lower	0.1mA or lower	0.1mA or lower
Maximum voltage drop at ON		0.8VDC or lower	0.8VDC or lower	0.2VDC (TYP.) 0.2A 0.3VDC (MAX.) 0.2A
Response time	OFF→ON	0.1ms or less	0.1ms or less	0.5ms or less
	ON→OFF	0.4ms or less	0.4ms or less	1ms or less (rated load, resistive load)
Surge suppressor		None	None	Zener diode
Fuse		One 3.5A fuse (1 fuse/common)	One 3.5A fuse (1 fuse/common)	None
Internal current consumption		180mA or lower	240mA or lower	180mA (TYP. All point ON)
Wiring method for common		32 points/common	32 points/common	32 points/common
External connection system		40-pin connector	40-pin connector	40-pin connector


Make sure the section of the above table meets the specification of the machines and equipment connected to the MELSEC iQ-R Series module.

*1: For the replacement from the C200H-OD218 or CQM1-OD213, when the SYSMAC C Series Module uses the rated load voltage of 5VDC, the voltage must be changed to 12/24VDC.


Specifications	SYSMAC C Series		MELSEC iQ-R Series
	Model	CS1W-OD231 (Sink type)	
Number of output points		32 points	32 points
Rated load voltage		12 to 24VDC (10.2 to 26.4VDC)	12 to 24VDC (10.2 to 26.4VDC)
Maximum load current		0.5A/points 2.5A/common 5.0A/module	0.3A/point 1.6A/common 3.2A/module
Maximum inrush current		4.0A/point 10ms or less	3.0A/point 10ms or less
Leakage current at OFF		0.1mA or lower	0.1mA or lower
Maximum voltage drop at ON		1.5VDC or lower	1.5VDC or lower
Response time	OFF→ON	0.5ms or less	0.5ms or less
	ON→OFF	1.0ms or less	1.0ms or less
Surge suppressor		None	None
Fuse		None	None
Internal current consumption		270mA or lower	270mA/module
Wiring method for common		16 points/common (2 circuits)	16 points/common (2 circuits)
External connection system		40-pin connector	40-pin connector

Make sure the section of the above table meets the specification of the machines and equipment connected to the MELSEC iQ-R Series module.


Signal Name	SYSMAC C Series connector	MELSEC iQ-R Series connector
module (c)	C200H-OD21B	RY41PT1P
module (d)	CQM1-OD216	
module (e)	CS1W-OD232	
module (e)	CS1W-MD262(output part)	

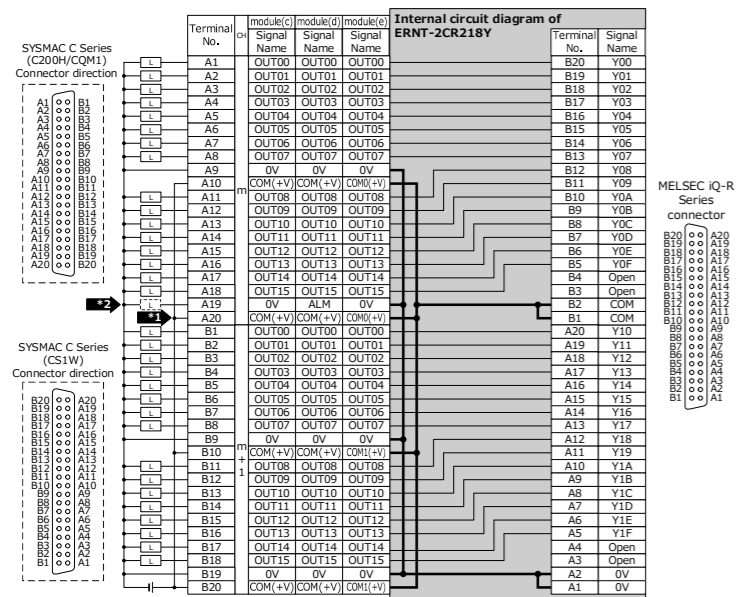


Signal Name	SYSMAC C Series connector	MELSEC iQ-R series connector	No. of modules
module (f)	C200H-OD219	RY41NT2P	2
module (g)	CS1W-OD261		

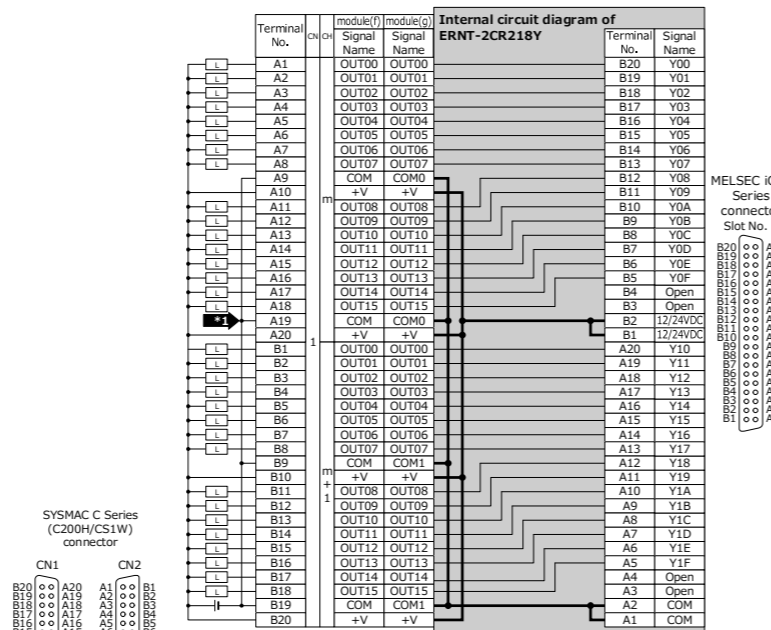

Signal Name	SYSMAC C Series connector	MELSEC iQ-R Series connector	No. of modules
module (h)	C500-OD213	RY41NT2P	2
module (i)	CS1W-OD262		

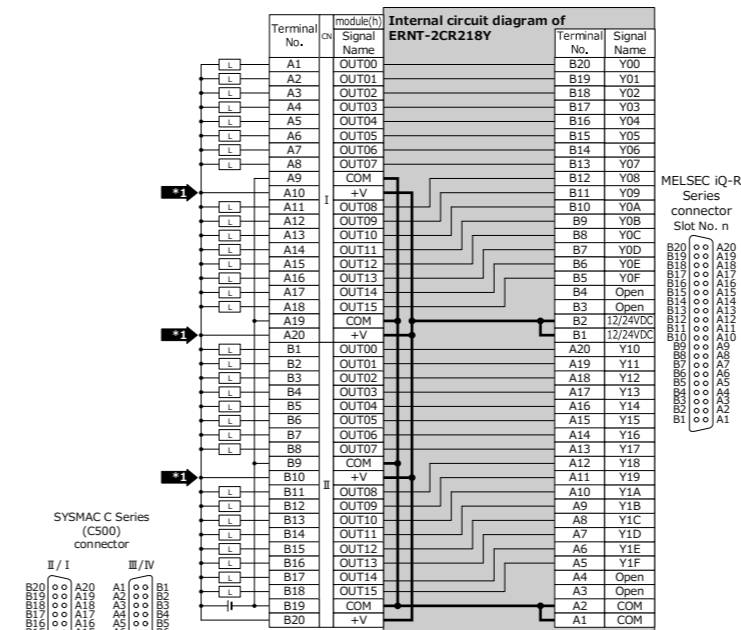

Signal Name	SYSMAC C Series connector	MELSEC iQ-R series connector	No. of modules
module (i)	CS1W-OD262	RY41PT1P	2
module (j)	CS1W-MD262(output part)		

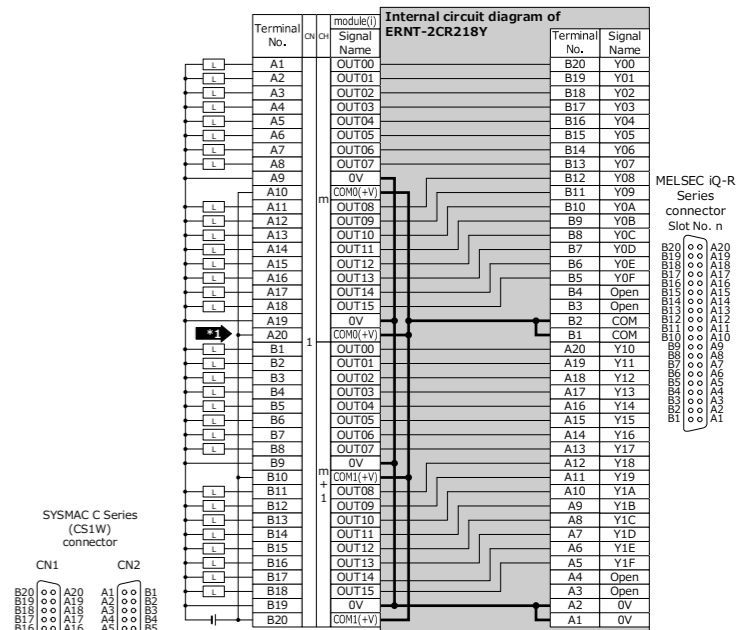

Precautions for wiring

*1 For the replacement from the CS1W-OD232 or CS1W-MD262 (output part), because the switch concerned causes the number of points per common to change from 16 (two circuits) to 32 (one circuit), an alteration to the wiring is required if the commons on the existing modules have been used in separation from each other.

*2 For the replacement from the CQM1-OD216, CQM1-OD216 side (Terminal number A19) output terminal for ALM is the MELSEC iQ-R Series RY41PT1P does not support the same function. The output terminal for ALM always RY41.

<Specification Comparison Chart>

Specifications	SYSMAC C Series		MELSEC iQ-R Series
	C200H-OD21B (Source type)	CQM1-OD216 (Source type)	RY41PT1P (Source type)
Number of output points	32 points	32 points	32 points
Rated load voltage	24VDC (+10%/-15%)	24VDC (+10%/-15%)	12/24VDC (10.2 to 28.8VDC)
Maximum load current	0.5A/point 5A/module	0.5A/point 5A/module	0.1A/point Pilot Duty 2A/common
Maximum inrush current	—	—	Current is to be limited by the overload protection function.
Leakage current at OFF	0.1mA or lower	0.1mA or lower	0.1mA or lower
Maximum voltage drop at ON	0.8VDC or lower	0.8VDC or lower	0.1VDC(TYP.) 0.1A 0.2VDC(MAX.) 0.1A
Response time	OFF→ON	0.1ms or less	0.5ms or less
	ON→OFF	0.3ms or less	0.3ms or less (rated load, resistive load)
Surge suppressor	None	None	Zener diode
Fuse	One 7A fuse (1 fuse/common)	One 7A fuse (1 fuse/common)	None
Internal current consumption	180mA or lower	240mA or lower	190mA (TYP. all points ON)
Wiring method for common	32 points/common	32 points/common	32 points/common
External connection system	40-pin connector	40-pin connector	40-pin connector

Make sure the [] section of the above table meets the specification of the machines and equipment connected to the MELSEC iQ-R Series module.

<Specification Comparison Chart>

Specifications	SYSMAC C Series		MELSEC iQ-R Series
	CS1W-OD232 (Source type)	CS1W-MD262 (output part) (Source type)	RY41PT1P (Source type)
Number of output points	32 points	32 points	32 points
Rated load voltage	24VDC (20.4 to 26.4VDC)	24VDC (20.4 to 26.4VDC)	12/24VDC (10.2 to 28.8VDC)
Maximum load current	0.5A/point 2.5A/common 5.0A/module	0.3A/point 1.6A/common 3.2A/module	0.1A/point Pilot Duty 2A/common
Maximum inrush current	—	—	Current is to be limited by the overload protection function.
Leakage current at OFF	0.1mA or lower	0.1mA or lower	0.1mA or lower
Maximum voltage drop at ON	1.5VDC or lower	1.5VDC or lower	0.1VDC(TYP.) 0.1A 0.2VDC(MAX.) 0.1A
Response time	OFF→ON	0.5ms or less	0.5ms or less
	ON→OFF	1.0ms or less	1.0ms or less (rated load, resistive load)
Surge suppressor	None	None	Zener diode
Fuse	None	None	None
Internal current consumption	270mA or lower	270mA or lower	190mA (TYP. all points ON)
Wiring method for common	16 points/common (2 circuits)	16 points/common (2 circuits)	32 points/common
External connection system	40-pin connector	40-pin connector	40-pin connector

Make sure the [] section of the above table meets the specification of the machines and equipment connected to the MELSEC iQ-R Series module.

Precautions for wiring

*1 For the replacement from the CS1W-OD261, because the switch concerned causes the number of points per common to change from 16 (four circuits) to 32 (two modules), an alteration to the wiring is required if the commons on the existing modules have been used in separation from each other.

<Specification Comparison Chart>

Specifications	C200H-OD219 (Sink type)	SYSMAC C Series C500-OD213 (Sink type)	CS1W-OD261 (Sink type)	MELSEC iQ-R Series RY41NT2P (Sink type)
	Number of output points *1	64 points	64 points	64 points
Rated load voltage *2	4.5 to 26.4VDC	4.5 to 26.4VDC	12 to 24VDC (10.2 to 26.4VDC)	12/24VDC (10.2 to 28.8VDC)
Maximum load current	16mA(4.5V) to 100mA(26.4V)	16mA(4.5V) to 100mA(26.4V) 800mA/common 6.4A/module	0.3A/point 1.6A/common 6.4A/module	0.2A/point Pilot Duty 2A/common
Maximum inrush current	—	—	3.0A/point 10ms or less	Current is to be limited by the overload protection function.
Leakage current at OFF	0.1mA or lower	0.1mA or lower	0.1mA or lower	0.1mA or lower
Maximum voltage drop at ON	0.8VDC or lower	0.4VDC or lower	1.5VDC or lower	0.2VDC(TYP.) 0.2A 0.3VDC(MAX.) 0.2A
Response time	OFF→ON	0.1ms or less	0.2ms or less	0.5ms or less
	ON→OFF	0.4ms or less	0.3ms or less	1ms or less (rated load, resistive load)
Surge suppressor	None	None	None	Zener diode
Fuse	Two 3.5A fuses(1 fuse/common)	Eight fuses(1 fuse/common)	None	None
Internal current consumption	270mA or lower	460mA or lower	390mA or lower	180mA (TYP. All point ON)
Wiring method for common	32 points/common (2 circuits)	8 points/common (8 circuits)	16 points/common (4 circuits)	32 points/common
External connection system	40-pin connector x2	40-pin connector x2	40-pin connector x2	40-pin connector

Make sure the [] section of the above table meets the specification of the machines and equipment connected to the MELSEC iQ-R Series module.
*1: Two sets of MELSEC iQ-R Series Modules and the Conversion Adapter are required (32 points for each set).
*2: For the replacement from the C200H-OD219 or C500-OD213, when the SYSMAC C Series Module uses the rated load voltage of 5VDC, the voltage must be changed to 12/24VDC.

Precautions for wiring

*1 Because the switch concerned causes the number of points per common to change from 8 (eight circuits) to 32 (two modules), an alteration to the wiring is required if the commons on the existing modules have been used in separation from each other.

<Specification Comparison Chart>

Specifications	SYSMAC C Series CS1W-OD262 (Source type)	MELSEC iQ-R Series RY41PT1P (Source type)
	Number of output points *1	64 points
Rated load voltage	24VDC (20.4 to 26.4VDC)	12/24VDC (10.2 to 28.8VDC)
Maximum load current	0.3A/point 1.6A/common 6.4A/module	0.1A/point Pilot Duty 2A/common
Maximum inrush current	—	Current is to be limited by the overload protection function.
Leakage current at OFF	0.1mA or lower	0.1mA or lower
Maximum voltage drop at ON	1.5VDC or lower	0.1VDC(TYP.) 0.1A 0.2VDC(MAX.) 0.1A
Response time	OFF→ON	0.5ms or less
	ON→OFF	1.0ms or less
Surge suppressor	None	Zener diode
Fuse	None	None
Internal current consumption	390mA or lower	190mA (TYP. all points ON)
Wiring method for common	16 points/common (4 circuits)	32 points/common
External connection system	40-pin connector x2	40-pin connector

Make sure the [] section of the above table meets the specification of the machines and equipment connected to the MELSEC iQ-R Series module.
*1: Two sets of MELSEC iQ-R Series Modules and the Conversion Adapter are required (32 points for each set).

Precautions for wiring



*1 Because the switch concerned causes the number of points per common to change from 16 (four circuits) to 32 (two modules), an alteration to the wiring is required if the commons on the existing modules have been used in separation from each other.

<Specification Comparison Chart>

Specifications	SYSMAC C Series CS1W-OD262 (Source type)	MELSEC iQ-R Series RY41PT1P (Source type)
	Number of output points *1	64 points
Rated load voltage	24VDC (20.4 to 26.4VDC)	12/24VDC (10.2 to 28.8VDC)
Maximum load current	0.3A/point 1.6A/common 6.4A/module	0.1A/point Pilot Duty 2A/common
Maximum inrush current	—	Current is to be limited by the overload protection function.
Leakage current at OFF	0.1mA or lower	0.1mA or lower
Maximum voltage drop at ON	1.5VDC or lower	0.1VDC(TYP.) 0.1A 0.2VDC(MAX.) 0.1A
Response time	OFF→ON	0.5ms or less
	ON→OFF	1.0ms or less
Surge suppressor	None	Zener diode
Fuse	None	None
Internal current consumption	390mA or lower	190mA (TYP. all points ON)
Wiring method for common	16 points/common (4 circuits)	32 points/common
External connection system	40-pin connector x2	40-pin connector

Make sure the [] section of the above table meets the specification of the machines and equipment connected to the MELSEC iQ-R Series module.
*1: Two sets of MELSEC iQ-R Series Modules and the Conversion Adapter are required (32 points for each set).

Signal Name	SYSMAC C Series connector	MELSEC iQ-R series connector	No. of modules
module (j)	JAMSC-B2604	RY41NT2P	2

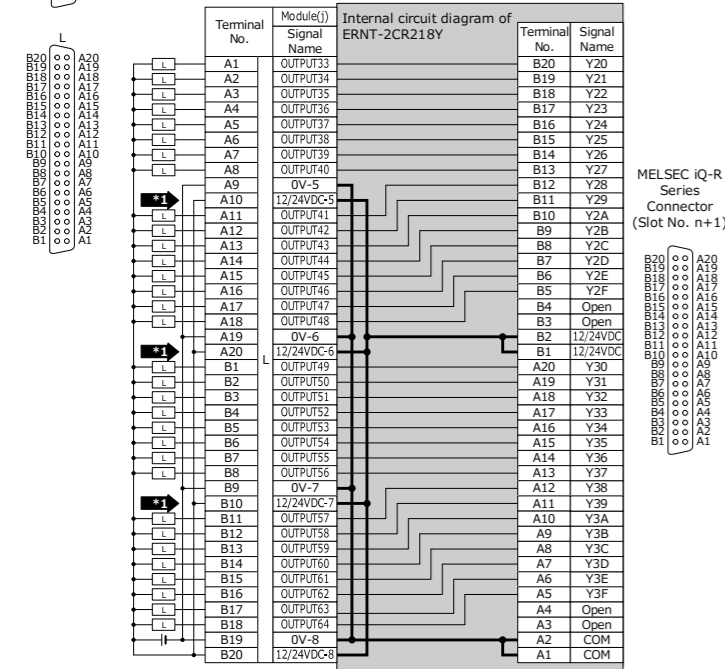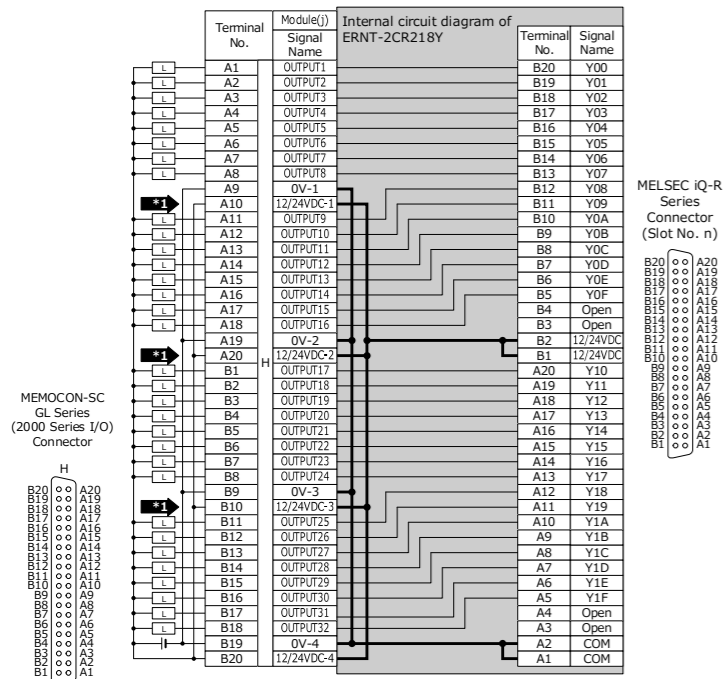

Precautions for wiring

*1 Because the switch concerned causes the number of points per common to change from 8 (eight circuits) to 32 (two modules), an alteration to the wiring is required if the commons on the existing modules have been used in separation from each other.

<Specification Comparison Chart>

Model	MEMOCON-SC GL Series (2000 Series I/O)	MELSEC iQ-R Series
Specifications	JAMSC-B2604 (Sink type)	RY41NT2P (Sink type)
Number of output points	64 points	32 points
Rated load voltage *1	12/24VDC (10.2 to 26.4VDC)	12/24VDC (10.2 to 28.8VDC)
Maximum load current	0.1Apoint 0.4A/8 points	0.2A/point Pilot Duty 2A/common
Maximum inrush current	0.5A(10ms)	Current is to be limited by the overload protection function.
Leakage current at OFF	0.2mA or lower	0.1mA or lower
Maximum voltage drop at ON	2.0VDC or lower(0.1A)	0.2VDC (TYP.) 0.2A 0.3VDC (MAX.) 0.2A
Response time	OFF→ON ON→OFF	1ms or less 1ms or less (rated load, resistive load)
Surge suppressor	None	Zener diode
Fuse	None	None
Internal current consumption	Vcc 2mA TYP. (All point ON) Vd 600mA TYP. (All point ON)	180mA (TYP. All point ON)
Wiring method for common	8 points/common (8 circuits)	32 points/common
External connection system	40-pin connector x2	40-pin connector

Make sure the section of the above table meets the specification of the machines and equipment connected to the MELSEC iQ-R Series module.

*1: Two sets of MELSEC iQ-R Series Modules and the Conversion Adapter are required (32 points for each set).

4. Mounting and Installation

4.1 Handling Precautions

- Before attempting to install the Unit or carry out the necessary wiring, make certain that the external power supply, used in the system, is shut off on all three phases. Failure to do so may result in electric shock or damage to the product.
- Do not touch live connectors. There is a danger of electric shock or malfunction.
- Do not modify the Conversion Adapter or take it apart. Doing so will cause failure, malfunction, personal injury, or fire.
- Do not touch the energized part of the Conversion Adapter directly. Contact will cause malfunction or failure in the system.
- Fasten the Conversion Adapter and the Mounting Bracket securely with retaining screws, and tighten the screws by applying torque within specified limits. Loose screws can lead to the dropping of the Conversion Adapter, or Mounting Bracket, possibly causing breakage thereof. Excessive tightness of the screws can lead to breakage of the screws, Converter Adaptor, Mounting Bracket, or MELSEC iQ-R Series Module, possibly causing the dropping, shorting, and malfunction thereof.
- Use care to prevent foreign materials including cuttings and wiring debris from entering the Conversion Adapter or the MELSEC iQ-R Series Module. These will be cause for fire, failure or malfunction.
- Do not drop the Conversion Adapter and Mounting Bracket or do not give a strong impact to it. This will cause damage.
- Conversion Adapter is intended for indoor use only.

4.2 Use Precautions

Item	SYSMAC C Series (C200H,CS,CQM1 Series)	SYSMAC C Series (C500 Series)	MEMOCON-SC GL Series (2000 Series I/O)
Depth dimension	The depth dimension increases as follows. Verification prior to installation is required.		
	<p>C200H Series</p> <p>45.2mm</p>	<p>CS Series</p> <p>19.2mm</p>	<p>CQM1 Series</p> <p>Installation with the DIN rail</p> <p>52.2mm</p> <p>Installation with the Control panel</p> <p>52.2mm</p>
	<p>* The depth dimension is the dimension from each surface.</p> <p>SYSMAC C Series (C200H and CS Series): Base unit + Input/output module + connector</p> <p>SYSMAC C Series (CQM1 Series): Input/output module + connector</p> <p>MELSEC iQ-R Series + Upgrade Tool: Base unit + Input/output module + Conversion Adapter + connector</p>		
	<p>* The depth dimension is the dimension from each surface.</p> <p>SYSMAC C Series (C500 Series) and MEMOCON-SC GL Series(2000 Series I/O): Base Adapter + Base unit + Input/output module + connector</p> <p>MELSEC iQ-R Series + Upgrade Tool: Base Adapter + Base unit + Input/output module + Conversion Adapter + connector</p>		

Item	Use Precautions								
	SYSMAC C Series (C200H,CS,CQM1 Series)	SYSMAC C Series (C500 Series)	MEMOCON-SC GL Series (2000 Series I/O)						
Connector direction	<p>Since the Conversion Adapter and connector directions of the following modules are upside down, check that the cable can be connected to the Conversion Adapter.</p> <p>If the existing FCN connector cable comes out from the bottom as shown in the right figure, the cable may not be long enough for rotating 180 degrees.</p> <p>Target models</p> <table border="1"> <tr> <th>32-point output module</th> <th>64-point output module</th> <th>32-points output/32-points input module</th> </tr> <tr> <td>CS1W-OD231 CS1W-OD232</td> <td>C200H-OD219 (only the connector on the left side) CS1W-OD261 (only the connector on the left side) CS1W-OD262 (only the connector on the left side)</td> <td>CS1W-MD261 (only the connector on the left(output) side) CS1W-MD262 (only the connector on the left(output) side)</td> </tr> </table> <p>No constraint</p>			32-point output module	64-point output module	32-points output/32-points input module	CS1W-OD231 CS1W-OD232	C200H-OD219 (only the connector on the left side) CS1W-OD261 (only the connector on the left side) CS1W-OD262 (only the connector on the left side)	CS1W-MD261 (only the connector on the left(output) side) CS1W-MD262 (only the connector on the left(output) side)
32-point output module	64-point output module	32-points output/32-points input module							
CS1W-OD231 CS1W-OD232	C200H-OD219 (only the connector on the left side) CS1W-OD261 (only the connector on the left side) CS1W-OD262 (only the connector on the left side)	CS1W-MD261 (only the connector on the left(output) side) CS1W-MD262 (only the connector on the left(output) side)							

4.3 Installation Environment


Refer to "Safety Guidelines" for MELSEC iQ-R Series Modules.

4.4 Wiring module power source


External connection to 24VDC power supply circuit of Conversion Adapter must be powered from approved source that meets of SELV/PELV, Class 2, and limited energy according to UL 61010-2-201.

5. Part Names and Installation Method


In the case one module (32 points)

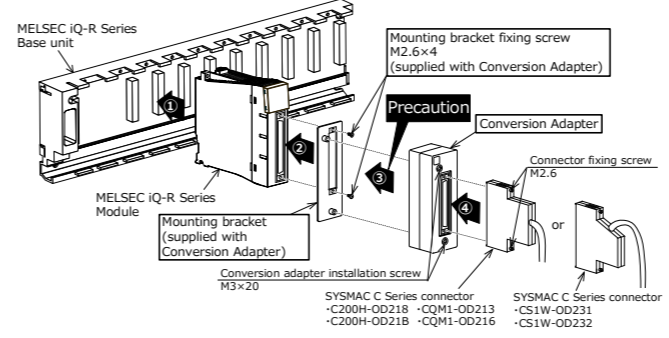

In the case two modules (64 points)

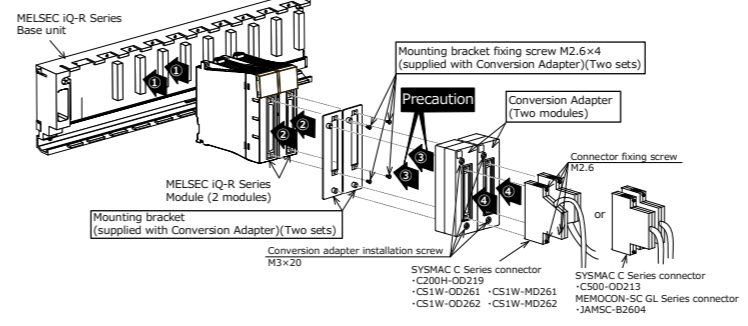

6. External Dimensions

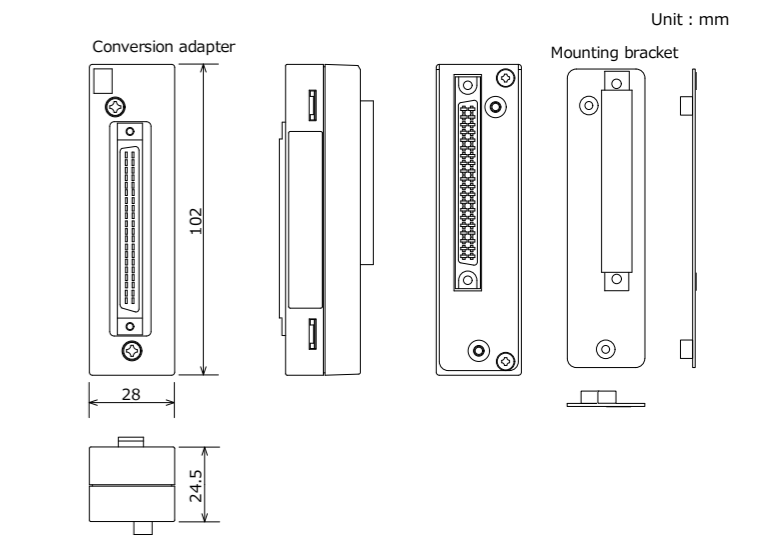

Duplication Prohibited

This manual may not be reproduced in any form, in part or in whole, without written permission from Mitsubishi Electric Engineering Company Limited.

©2018/2019 MITSUBISHI ELECTRIC ENGINEERING COMPANY LIMITED ALL RIGHTS RESERVED

The company names and product names mentioned in this document are either registered trademarks or trademarks of their respective companies.

Product Warranty Details

Please confirm the following product warranty details prior to product use.

Gratis Warranty Terms and Gratis Warranty Range

If any fault or defect (hereinafter referred to as "Failure") attributable to Mitsubishi Electric Engineering Company Limited (hereinafter referred to as "MEE") should occur within the gratis warranty period, MEE shall repair the product free of charge via the distributor from whom you made your purchase.

Gratis Warranty Charge

The gratis warranty period of this product shall be one (1) year from the date of purchase or delivery to the designated place.

Note that after manufacture and shipment from MEE, the maximum distribution period shall be six (6) months, and the gratis warranty period after manufacturing shall be limited to eighteen (18) months.

In addition, the gratis warranty period for repaired products shall not exceed the gratis warranty period established prior to repair.

Gratis Warranty Range

The gratis warranty range shall be limited to normal use based on the usage conditions, methods and environment, etc., defined by the terms and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.

Warranty Period after Discontinuation of Production

- MEE shall offer product repair services (fee applied) for seven (7) years after production of the product has been discontinued. Discontinuation of production shall be reported via distributors.
- Product supply (including spare parts) is not possible after production has been discontinued.

Exclusion of Opportunity Loss and Secondary Loss from Warranty Liability

Regardless of the gratis warranty period, MEE shall not be liable for compensation for damages arising from causes not attributable to MEE, opportunity losses or lost profits incurred by the user due to Failures of MEE products, damages or secondary damages arising from special circumstances, whether foreseen or unforeseen by MEE, compensation for accidents, compensation for damages to products other than MEE products, or compensation for other work carried out by the user.

Changes in Product Specifications

The specifications given in the catalogs, manuals and technical documents are subject to change without notice.

This document is a new publication, effective July 2020. Specifications are subject to change without notice.

5.1 Installation Method

Installation with the Control panel	Installation with the DIN rail
Install the MELSEC iQ-R Series Base Unit on the control panel.	Install the DIN rail mounting adapter manufactured by Mitsubishi Electric to the MELSEC iQ-R Series Base Unit.
For how to install the Base Unit on the control panel, refer to the MELSEC iQ-R Module Configuration Manual.	For how to install the Base Unit on the DIN rail, refer to the MELSEC iQ-R Module Configuration Manual.

- Mount the MELSEC iQ-R Series module to the MELSEC iQ-R Series base unit.
 - Secure the Mounting Bracket to the MELSEC iQ-R Series Module using the Mounting Bracket fixing screws [M2.6 x 4 (Conversion Adapter accessory); two upper/lower locations].
 - Mount the Conversion Adapter onto the Mounting Bracket, and secure the Conversion Adapter using the Conversion Adapter installation screws (M3 x 20; 2 locations).
- Precaution**
- Before tightening the installation screws, check that the Conversion Adapter has been securely installed on the MELSEC iQ-R Series Module. Tightening the screws in floating-off state or tilting state will damage the Conversion Adapter installation screws and the Mounting Bracket.
- Secure the connector of the SYSMAC C Series or MEMOCON-SC GL Series to the Conversion Adapter with the connector installation screws (M2.6; two upper/lower locations).

5.2 Tightening Torque

Tighten the installation screws to the specified torque below. An inappropriate tightening torque could cause the product to fall or result in a short circuit, product failure or malfunction.

Screw Location	Tightening Torque Range
Mounting Bracket fixing screw (M2.6x4)	0.20 to 0.29N·m
Conversion Adapter installation screw (M3x20)	0.43 to 0.57N·m
Connector installation screw (M2.6)	0.20 to 0.29N·m